Sector U: Materials of Workshop on July 16-17, 2013

U-1: Explanatory Notes of MIKE-Flood Modeling
U-2: Manual of MIKE-Flood Modeling
U-3: Presentation Material 1
U-4: Presentation Material 2
U-5: Presentation Material 3

U-1: Explanatory Notes of MIKE-Flood Modeling

16-17th July 2013

Technical Workshop on Flood Analysis Model

Explanatory

Notes

on MIKE-Flood Modeling for M/P Study

CHAPTER 1	Outline	1
CHAPTER 2	Runoff Model	2
21 (Jutline	2
2.1 0	Ruilding Punoff Model	2
2.2 L 2.2 L	Catchmont Area in this model	·····2
2.2.1	Dem Cetehment Areas in this model	Z
2.2.2	Dam Calchment Areas in this model	
2.3 1		······/
2.3.1		
2.3.2	Evaporation	
2.4 F	arameters	10
CHAPTER 3	River Network Model	12
3.1 (Dutline	12
3.2 F	River Network	13
3.2.1	River Network Developed In This Model	13
3.2.2	River Network set up in DHI-MIKE M/P study model	14
3.3 (Cross Section	
3.3.1	Cross section data	
332	Setun of Secondary Dikes	17
333	Roughness Coefficient	21
334	Cross section data set up in DHI-MIKE M/P study model	21
34	Structures	22
341	Weirs/Regulators	23
342	Dame	20
3/3	Dumping Station	20
34.3	Structures set up in DHI MIKE M/D study model	20
3.4.4 25 5	Suddary Condition	
3.3 E	Doundary Condition of Diver Network Medal (inflow and tide)	
3.5.1	Boundary Condition of River Network Model (Inflow and tide)	
3.5.2	Correction of Downstream Boundary Data (tide)	
3.5.3	Boundary Condition in DHI-MIKE M/P study model	34
CHAPTER 4	Inundation Model	36
4.1 (Dutline	
4.2 N	Nodel Parameters	
4.2.1	Elevation of Flood Plain	36
4.2.2	Roughness Coefficient of Flood Plain	
4.3 5	Structure	
4.3.1	Continuous Structure	
4.3.2	Dike Break (2011 recreation)	40
4.4 E	Boundary Condition	41
4.4.1	Infiltration	
442	Evaporation	41
4.5	Set un	45
451	Set up inundation model in DHI-MIKE M/P study model	
CHAPIER 5		47
5.1 H	roceaure	
5.2 5	Selection of Verification Points	47
5.3 I	nundation Area	49
5.4 \	erification	53
5.4.1	Evaluation Method	53

5.4.2	Evaluation Result	53
-------	-------------------	----

	Building Runoff	Catchment Area in this model	P2
CHAPTER 2	Model	Dam Catchment Areas in this model	P5
Dupoff	Input data for	Rainfall	P7
Runoff	Runoff Model	Evaporation	P7
wodei	Parameters	NAM Parameter	P10
		River Network Developed In This Model	P13
	River Network	River Network set up in DHI-MIKE M/P study model	P14
		Cross section data	P15
		Setup of Secondary Dikes	P17
	Cross Section	Roughness Coefficient	P21
CHAPTER 3		Cross section data set up in DHI-MIKE M/P study model	P22
		Weirs/Regulators	P23
River		Dams	P23
Network	Structures	Pumping Station	P26
Model		Structures set up in DHI-MIKE M/P study model	P29
		Boundary Condition of River Network Model (inflow and tide)	P30
	Boundary Condition	Correction of Downstream Boundary Data (tide)	P30
		Boundary Condition in DHI-MIKE M/P study model	P34
	Model	Elevation of Flood Plain	P36
	Parameters	Roughness Coefficient of Flood Plain	P39
CHAPTER 4	Structure	Continuous Structure	P39
	Siluciule	Dike Break (2011 recreation)	P40
Inundation	Boundary	Infiltration	P41
Model	Condition	Evaporation	P41
	Set up	Set up inundation model in DHI-MIKE M/P study model	P45
CHAPTER 5	Selection of Verification Points		P47
Model	Inundation Area		P49
Verification	Verification	Evaluation Method Evaluation Result	P53 P53

CHAPTER 1 Outline

In order to analyze a flood situation and establish effective countermeasures, hydrological and hydraulic analysis model are developed. The model consists of three hydrological/hydraulic model including, runoff model, river network model (flood routing model) and inundation model. The procedure for building the flood analysis model and parameter fitting for re-producing flood situations is shown in Figure 1.1.1

1. Runoff Model (NAM Module)

- · Setup sub-catchment area based on river/canal network
- Calculation of rainfall and estimation of evaporation loss
- Runoff analysis in inland flooding area

2. Flood Routing Model (MIKE11)

- Collection of cross section data
- Set up initial roughness coefficient
- Modeling major regulators such as weirs, gates and barrages
- Set-up of boundary condition

3. Inundation Model (MIKE 21)

- Building floodplain model with <u>digital elevation</u> model
- Set up of roughness coefficient of floodplain considering the land use situation
- Set-up of continuous structures

Figure 1.1.1 Procedure of Flood Analysis Model Building

CHAPTER 2 Runoff Model

2.1 Outline

To calculate runoff from each river basin, NAM (Nedbor-Afstromnings-Model) released by DHI¹ shall be employed. NAM is a kind of tank model and lumped runoff model developed by Technical University of Denmark. It has four-tanks describing runoff phenomenon including surface runoff, intermediate runoff and groundwater, and is used both short-term and long-term runoff analysis. The summary of NAM and its parameters is as shown in Figure 2.1.1.



Structure of NAM model

Figure 2.1.1 Summaly of NAM and Model Parameters

2.2 Building Runoff Model

2.2.1 Catchment Area in this model

Chao Phraya River system consists of eight major tributaries as shown in Table 2.2.1. In this study, the basin shall be divided into twenty-seven sub catchment areas for runoff analysis as shown in Figure 2.2.1, considering major tributaries, canals, topographic features, dam catchment areas and flood control points (at hydrological station, for example C.2, Nakhon Sawan).

8 major tributaries' sub-basins • Major tributaries and canals • Topographic features • Dam catchment area • Flood control points (ex. Nakhon Sawan) shall be considered in this study Divided into 27 sub-catchment areas

¹ DHI Water & Environment, Denmark http://www.dhigroup.com/



Figure 2.2.1 Sub Catchment Area in Chao Phraya River System

4

No.	Sub Catchment Area	Area (km²)*	Major River basin
1	Ping_Ngad	1,280	
2	Ping_Kwang	570	Ding
3	Ping_Bhumipl	24,310	Pilig
4	Ping_D	8,380	
5	Wang_Kew_Kho_Ma	1,350	
6	Wang_Kew_Lom	1,420	Wang
7	Wang_D	8,020	
8	Yom_U	5,580	
9	Yom_M	12,120	Yom
10	Yom_D	6,350	
11	Nan_U	13,130	
12	Nan_M1	5,660	
13	Nan_Kwae_Noi	3,790	
14	Nan_M2	2,310	Nan
15	Nan_M3	3,960	
16	Nan_M4	4,100	
17	Nan_D	1,720	
18	Chao Phraya_U1	4,790	
19	Chao Phraya_U2	1,890	Chao Phraya
20	Chao Phraya_D	17,190	
21	Sakae_Krang	3,480	
22	Tab_Salao_Dam	540	Sakae Krang
23	Tab_Salao_D	880	
24	Pasak_Dam	12,840	Pasak
25	Pasak_D	2,790	Γασαν
26	Thachin_KraSiew	1,190	Tachin
27	Tha Chin	13,000	
	Total Area	162,640	

Table 2.2.1 Sub Catchment Area in Chao Phraya River System

*Shape data of river basin provided by RID (UTM Zone47). Area is calculated with ArcGIS.

2.2.2 Dam Catchment Areas in this model

To establish the high-precision runoff model, large-size dams that have wide catchment areas shall be modeled, since dams could impound runoff from each river basin and control flow regime of downstream of dams. The dams built in the runoff model are tabulated in Table 2.2.2 and location of them is shown in Figure 2.2.2. If there are observed outflow data, it is used as boundary condition instead of calculation of runoff from dam catchment area.

Na	Newse	Diver	Diver Desir	Catchment	Storage Volume (MCM)		
NO.	No. Name River		River Basin	Area(km ²)	Maximum	Retention	
1	Mae Ngad Somboon	Ping	Ping_Ngad	1,283	325	265	
1	Chol						
2	Mae Kwang Udom Thara	Ping	Ping_Kwang	566	263	263	
3	Bhumibol	Ping	Ping_Bhumibol	24,305	13,462	13,462	
4	Kiew Ko Ma	Wang	Wang_Kiew_Ko_Ma	1,354	209	170	
5	Kiew Lom	Wang	Wang_Kiew_Lom	1,422	106	106	
6	Sirikit	Nan	Nan_U	13,131	10,640	9,510	
7	Kwae Noi Bumrung Dan	Nan	Nan_Kwae_Noi	3,793	1,080	939	
8	Pasak Chollasith	Pasak	Pasak_Dam	12,835	960	785	
9	Tab Salao	Sakae krang	Tab_Salao_Dam	543	198	160	
10	Kra Siew	Tha chin	Thachin_Kra_Siew	1,193	363	240	

Table 2.2.2List of Dams Built in Runoff Model



Figure 2.2.2

Location of Existing Dam for Runoff Model

2.3 Input data for Runoff Model

Items	Stations	Calculation Method
Average daily rainfall	TMD and RID Total 410 stations	Average rainfall of watershed is calculated with the Thiessen Method.
Average daily evaporation	TMD 46 stations	Actual evaporation is defined as 80% of pan evaporation. Average evaporation of watershed is calculated with the Thiessen Method.

Table 2.3.1 2.3 Input

3 Input data for Runoff Model

2.3.1 Rainfall

The observed daily rainfall data maintained by RID (Royal Irrigation Department) and TMD (Thailand Meteorological Department) shall be employed for the runoff analysis. As an input data, average rainfall of watershed calculated with the Thiessen Method shall be given to each sub catchment area.

In lowland area dominated by inland flooding, observed rainfall depth is given directly to inundation model (two-dimensional model) instead of runoff calculation with NAM, since fallen rainfall in lowland should not flow into rivers/canals due to flat land slope and accumulate there, and then be drained through drainage/irrigation canals. Based on the topography, ground elevation, irrigation canals and actual inundated area in recent years, inland flooding area of 11,590km² is determined as shown in Figure 2.3.3.

2.3.2 Evaporation

As an input data of daily evaporation, averaged 80% of pan evaporation amount at TMD synoptic station (46 stations) calculated with Thiessen Method shall be given to each sub catchment area.

Regarding daily evaporation, evaporation measured with pan (pan evaporation) at TMD synoptic station (46 stations) is employed. Since pan evaporation is defined as maximum potential of evaporation, it should be converted to actual evaporation by assuming an evaporation coefficient (=actual evaporation / potential evaporation). Assumed evaporation coefficient was calculated according to the equation (1) at Sirikit Dam, Bhumibol Dam and C2 (Nakhon Sawan) respectively from observed daily rainfall, dam inflow, river discharge and evaporation data that are available from 1980 to 2011. Since long-term outflow from the catchment area, as long as 30 years, is estimated, amount of groundwater and infiltration in a catchment shall be contained in discharge (Q in equation (1)).

Calculated evaporation coefficients are 0.82 at Sirikit Dam, 0.75 at Bhumibol Dam, 0.84 at C.2 respectively. So 0.80, averaged by the values at the three points, is employed as the evaporation coefficient of whole basin.

C (evaporation coefficient) = actual evaporation / potential evaporation (pan evaporation)

$$=\frac{\sum R - \sum Q}{\sum evap} \qquad (1)$$

Herein Q: discharge, R: rainfall, evap: evaporation



Figure 2.3.1 Water Balance in Catchment Area

STN_CODE		Sirikit Dam	Bhumibol Dam	C.2
RIVER		Ping	Nan	Chao Phraya
SUB-BASIN		-	-	Chao Phraya
1.Catchment Area	(km²)	13,131	24,305	58,205
2.Peak Discharge (record high)	(m³/s)	4,303	3,605	5,451
3. Total Rainfall* ¹	(mm)	39,856	33,231	36,409
4. Evaporation* ¹	(mm)	32,864	35,211	36,636
5. Total Rainfall: ΣR	(MCM)	523,349	807,679	2,119,186
6. Total Evaporation: Σ_{evap}	(MCM)	431,537	855,803	2,132,398
7. Total Runoff : ΣQ	(MCM)	171,204	167,220	327,021
8. Evaporation Coefficient (5 - 7)/6	-	0.82	0.75	0.84

Table 2.3.2 Assumed Evaporation Coefficient

*1 Total value from April to December 1980-2011, however values in 1983 year are not included because observed data is not available over 60 days

Tab	le	2.3.3

Calculation of Average Rainfall and Evaporation

Items	Stations	Calculation Method			
Average daily rainfall	TMD and RID	Average rainfall of watershed is calculated			
Average daily failfial	Total 410 stations	with the Thiessen Method.			
	TMD	Actual evaporation is defined as 80% of pan			
Average daily evaporation	46 stations	evaporation. Average evaporation of			
Average daily evaporation		watershed is calculated with the Thiessen			
		Method.			



Figure 2.3.2

Amount of Average Rainfall and Evaporation (2011)



Figure 2.3.3

Estimated Inland Flooding Area (Draft)

2.4 Parameters

Initial parameters of NAM Runoff Model shall be set by reference to the finalized parameters at the '99 Master Plan study. Since the '99 Master Plan study employed NAM Runoff Model for eighteen divided sub-basins, initial parameters shall be distributed to the overlapped areas of twenty-seven sub-basins which was defined at 2.2.1. These values shall be modified according to the result of model calibration.

	Surface and root zone parameters
U _{max}	Maximum water content in surface storage
L _{max}	Maximum water content in root zone storage
CQOF	Overland flow runoff coefficient
CKIF	Time constant for interflow
CK ₁₂	Time constant for routing interflow and overland flow
TOF	Root zone threshold value for overland flow
TIF	Root zone threshold value for interflow

Table 2.4.1 Model Parameters (Surface-Root zone)

Tabl	e 2.4	1.2
------	-------	-----

Model Parameters (Final) – Surface-Root zone

Area	Namo	Divor	Area			Surfa	ace-Root Z	lone		
No	Name	River	(km²)	U_{max}	L _{max}	CQOF	CKIF	CK _{1,2}	TOF	TIF
1	PING_NGAD		1,283	10	100	0.6	1,000	30	0.2	0.3
2	PING_KWANG	Ding	566	20	200	0.6	900	30	0.2	0.3
3	PING_BHUMIPOL	Ping	24,305	20	800	0.6	300	30	0.2	0.1
4	PING_D		8,383	30	300	0.8	1,000	20	0.6	0.6
5	WANG_KIEW_KO_MA		1,354	40	1,000	0.6	1,000	20	0.2	0.7
6	WANG_KIEW_LOM	Wang	1,422	50	1,500	0.9	1,000	20	0	0.8
7	WANG_D		8,017	20	100	0.5	800	30	0.4	0.4
8	YOM_U		5,580	20	200	0.3	1,000	20	0.2	0.2
9	YOM_M	Yom	12,120	20	200	0.9	500	15	0	0.1
10	YOM_D		6,347	20	300	0.9	1,000	150	0.5	0.5
11	NAN_U		13,131	10	1,000	0.9	1,000	30	0.1	0.4
12	NAN_M1		5,660	10	50	0.5	1,000	100	0.2	0.3
13	NAN_KWAE_NOI	Nan	3,793	80	130	0.1	1,000	100	0	0
14	NAN_M2		2,315	10	100	0.5	1,500	100	0.5	0.5
15	NAN_M3		3,962	10	100	0.5	1,500	150	0.3	0.3
16	NAN_M4		4,103	50	500	0.3	1,500	150	0.5	0.2
17	NAN_D		1,718	20	500	0.6	1,500	150	0.5	0.5
18	CHAOPHRAYA_U1		4,786	30	200	0.3	1,000	50	0.7	0.5
19	CHAOPHRAYA_U2	Chaophr	1,894	10	100	0.2	1,000	50	0.9	0.3
20	CHAOPHRAYA_D	aya	7,572	10	150	0.5	1,500	20	0.7	0.5
21	SAKAE_KRANG	Sakae_ Krang	3,482	10	100	0.4	1,000	30	0.5	0.5
22	TAB_SALAO_DAM	Tab_Sal	543	30	700	0.3	500	5	0.5	0.99
23	TAB_SALAO_D	ао	882	10	100	0.6	1,200	30	0.3	0.3
24	PASAK_DAM	Dacak	12,835	10	1,000	0.1	1,000	30	0.3	0.5
25	PASAK_D	rdsdk	2,657	10	200	0.6	1,000	20	0.5	0.5
26	THACHIN_KRA_SIEW	Tachin	1,193	10	300	0.6	1,000	20	0.7	0.9
27	THACHIN	Tachin	11,169	10	50	0.3	1,000	30	0.3	0.3

	Groundwater parameters
CK _{BF}	Baseflow time constant
TG	Root zone threshold value for groundwater recharge
CQ _{LOW}	Recharge to lower groundwater storage
CK _{LOW}	Time constant for routing lower baseflow
C _{area}	Ratio of groundwater catchment to topographical catchment area
GWL _{BF0}	Maximum groundwater depth causing baseflow
Sy	Specific yield
GWL _{FL1}	Groundwater depth for unit capillary flux

Table 2.4.3 Model Parameters (Ground Water)

Table 2.4.4

Model Parameters (Final) – Ground Water

Area	Namo	rivor	Area	Ground Water							
No	Name	Tiver	(km²)	TG	CK _{BF}	Carea	Sy	GWL _{BFo}	GWL _{BF1}	Cq _{low}	Ck _{low}
1	PING_NGAD		1,283	0.1	1,000	1	0.15	10	0	10	1,500
2	PING_KWANG	Ding	566	0.1	1,000	1	0.15	10	0	10	1,500
3	PING_BHUMIPOL	Filig	24,305	0.3	1,000	1	0.15	10	0	10	1,500
4	PING_D		8,383	0.1	500	1	0.15	10	0	10	1,500
5	WANG_KIEW_KO_MA		1,354	0.3	700	1	0.15	10	0	10	1,000
6	WANG_KIEW_LOM	Wang	1,422	0	1,000	1	0.15	10	0	10	1,000
7	WANG_D		8,017	0.4	1,000	1	0.15	10	0	10	1,000
8	YOM_U		5,580	0.6	700	1	0.1	10	0	50	1,000
9	YOM_M	Yom	12,120	0	500	1	0.05	10	0	50	8,000
10	YOM_D		6,347	0.1	1,000	1	0.05	10	0	50	1,000
11	NAN_U		13,131	0.1	800	1	0.2	10	0	0	10,000
12	NAN_M1		5,660	0.4	600	1	0.15	10	0	0	10,000
13	NAN_KWAE_NOI		3,793	0.5	200	1	0.05	10	0	0	10,000
14	NAN_M2	Nan	2,315	0.1	1,500	1	0.05	10	0	0	10,000
15	NAN_M3	INdII	3,962	0.4	1,500	1	0.05	10	0	0	10,000
16	NAN_M4		4,103	0.5	1,500	1	0.05	10	0	0	10,000
17	NAN_D		1,718	0.1	1,000	1	0.05	10	0	0	10,000
18	CHAOPHRAYA_U1		4,786	0.1	1,000	1	0.05	10	0	0	10,000
19	CHAOPHRAYA_U2	Chaophr	1,894	0.1	1,000	1	0.05	10	0	0	10,000
20	CHAOPHRAYA_D	aya	7,572	0.1	500	1	0.1	10	0	0	10,000
21	SAKAE_KRANG	Sakae_K rang	3,482	0.1	500	1	0.1	10	0	0	10,000
22	TAB SALAO DAM	Tab Sal	543	0.5	500	1	0.1	10	0	0	10,000
23	TAB SALAO D	ao	882	0.3	800	1	0.1	10	0	0	10,000
24	PASAK DAM	Devel	12,835	0.1	800	1	0.15	10	0	0	10,000
25	PASAK_D	Разак	2,657	0.1	1,000	1	0.1	10	0	0	10,000
26	THACHIN_KRA_SIEW	Ta alain	1,193	0.1	400	1	0.1	10	0	0	10,000
27	THACHIN	Tachin	11,169	0.8	300	1	0.1	10	0	0	10,000

CHAPTER 3 River Network Model

3.1 Outline

Discharge and water level in target rivers/canals shall be computed with one-dimensional unsteady flow model that calculates a temporal alteration of discharge/water level at each cross section, since river running through lowland area would be affected confluence of tributaries and tidal level (backwater). River network model shall be built with DHI MIKE11. In this study, full dynamic model shall be employed for flood routing calculation.



 Usually, river discharge, water level and flow velocity would change from hour to hour during flood event.
 River flow reaches downstream taking time and hydrograph at downstream is different

2) River flow reaches downstream taking time and hydrograph at downstream is different from upstream, which is remarkable in a long and low-sloped river.

Figure 3.1.1 Intellection of Unsteady River Flow
--

Table	3.1.1
-------	-------

Description of River Network Model

Items	Contents			
Hydraulic Model	One-dimensional unsteady flow (fully dynamic)			
Tryaradile Model	DHI-MIKE11 HD module			
River Network	Refer to Figure 3.5.6			
Cross Saction	Surveyed in 2005yr and 2006yr, provided by RID			
Closs Section	Surveyed in 2012yr by JST (mainly, primary canals)			
Structures	Large dam , weir and regulators			
	Upstream: Calculated hydrograph with the runoff model, observed			
Boundary Condition	discharge and released water from dams.			
	Downstream: Observed tide level			

3.2 River Network

3.2.1 River Network Developed In This Model

Table 3.2.1 shows rivers/canals built in the river network model. All rivers/canals that have cross-section data shall be built in the model. Chainat-Ayutthaya Canal (design discharge $65m^3/s$) is not included in the network, since it runs along the left side the Chao Phraya River and has a no influence on inundated flow.

No.	River Name	This Study	Previous Study (1999 M/P)	Remarks
1	Chao Phraya	Yes	Yes	
2	Ping	Yes	Yes	
3	Wang	Yes	-	
4	Yom	Yes	Yes	
5	Nan	Yes	Yes	
6	Sakae Krang	Yes	-	In 2005, river is named Mae Wong.
7	Tub Salao	Yes	-	
8	Tachin	Yes	Yes	
9	Noi	Yes	Yes	
10	Lop Buri	Yes	Yes	
11	Bang_Kaeo	Yes	Yes	
12	Pasak	Yes	Yes	
13	Chainat-Pasak Canal	Yes	-	
14	Phong-Peng Canal	Yes	Yes	In 2005, river is named Bang Luang
15	Yom Koa River	Yes	-	
16	Bang Ban Canal	Yes	-	
17	Bonlue Canal	Yes	-	Surveyed in 2012 by JST
18	Chao Chet Bang Yi Hon Canal	Yes	-	Ditto
19	Mahashat Canal	Yes	-	Ditto
20	Machanthao Uthong Canal	Yes	-	Ditto
21	Pasicharoen Canal	Yes	-	Ditto
23	Phra Phimon Canal	Yes	-	Ditto
24	Prawetburiom East Canal	Yes	-	Ditto
25	Prawetburiom West Canal	Yes	-	Ditto
26	Prem Prachkon Canal	Yes	-	Ditto
27	Raphiphat Canal	Yes	-	Ditto
28	Raphiphat Yeak Tok Canal	Yes	-	Ditto
29	Rung Sitprayunsak Canal	Yes	-	Ditto
30	Saen Saep East Canal	Yes	-	Ditto
31	Saen Saep West Canal	Yes	-	Ditto
32	Sai Si Canal	Yes	-	Ditto
33	West Raphiphat Canal	Yes	-	Ditto

 Table 3.2.1
 Rivers/Canals built in River Network Model

3.2.2 River Network set up in DHI-MIKE M/P study model



Figure 3.2.1 Project map in network file (DHI-MIKE M/P study model)

3.3 Cross Section

3.3.1 Cross section data

The cross section data provided by RID is shown in Table 3.3.1. In this study, to check the latest river condition, cross-section survey was conducted downstream of Nakhon Sawan as shown in Figure 3.3.1. As mentioned above, rivers/canals that has cross section data shall be built in the model. In addition, the important rivers/canals for re-production of flood situations pointed out by RID shall be built as much as possible, such as Yom Koa River connected Yom River and Nan River.

No	River/Canal	Measured Year	Length(km) [*]
1	Chao Phraya River	0-141km (2006) 141-379km (2005)	379
2	Ping River	2005	256
3	Wang River	2005	236
4	Yom River	2005	597
5	Nan River	2005	449
6	Sakae Krang River	2005	141
7	Tub Salao River	2005	99
8	Tachin River	2006	318
9	Noi River	2005	166
10	Lop Buri River	2005	99
11	Bang_Kaeo River	2005	15
12	Pasak River	2005	102
13	Chainat-Pasak Canal	2005	166
14	Phong-Peng Canal	2005	13
15	Bang Ban Canal	2005	17

Table 3.3.1Cross Section Data Provided from RID

*Length is calculated with observed interval of cross section survey on 2005/2006. Except for a part of downstream of Chao Phraya and Ta Chin, cross-section survey was conducted with 1,000m interval.





3.3.2 Setup of Secondary Dikes

In lowland area, two types of dike are located along the rivers/canals, one is the embankment produced naturally by river flow (primary dike), and the other one is road dike which is constructed along the irrigation canal (secondary dike). Actually, secondary dike plays a role as river dike, so flow area shall be defined between secondary dikes. Since cross section data provided by RID mainly covers primary dike, cross section data shall be complemented with LiDAR data as shown in Figure 3.3.3. Locations of secondary dikes are set up longitudinally by extracting higher area than limb ground from the distribution map of height of 2m grid (LiDAR). In the area where there is no LiDAR data, Google Map is used. Only Chao Phraya River, RID defined the line of secondary dike.



Figure 3.3.2 Secondary Dike



(1) Method of Acquisition of Height of Secondary Dikes Figure 3.3.4 shows the method of acquisition of height of secondary dikes from LiDAR data.



Figure 3.3.4

Setup of Secondary Dikes

In the case that there are two roads along river, secondary dike line is set up by checking an aerial photograph and elevation of LiDAR data longitudinally. Another case that secondary dike set up by LiDAR data is different from that by RID documents shown in Figure 3.3.5, high road is as secondary dike line longitudinally by comparing each elevation of secondary dikes shown in Figure 3.3.6, considering flood is dammed up by higher road. Heights of secondary dikes in all rivers are acquired by above method. Longitudinal profile of height of secondary dike in upstream of Chao Phraya River (141k~379k) is shown in Figure 3.3.7 for example.



Figure 3.3.5 Example of Different Locations of Secondary Dikes Set up by LP Data and by RID Documents





Example of Cross Section at Different Locations of Secondary Dikes Set up by LP Data and by RID Documents

In the area where LiDAR data is not available and secondary dike is not acquired clearly, secondary dike is treated as follow.

- Height of secondary dike is set up by interpolating from that of upper and lower cross sections acquired by LiDAR data at cross section in which intersection point with measuring line and secondary dike is not acquired in curved section.
- Height of secondary dike is set up by interpolating from that of upper and lower cross sections acquired by LiDAR data in section where there is no LiDAR data locally.
- In case that there is not secondary dike clearly, river width for calculation is to high ground height of flood prone area set up by LiDAR data which flood reach to.



Figure 3.3.7 Longitudinal Profile of Height of Secondary Dike (Upstream of Chao Phraya River (141k~379k))

(2) Location of Secondary Dike

Locations of secondary dikes are shown in Figure 3.3.8.



3.3.3 Roughness Coefficient

Manning's *n* in river is set up considering high flow channel shown in Figure 3.3.9. The values of low flow zone are set by reference to the '99 Master Plan study. According to the standard values, roughness coefficient of one-dimensional flood simulation is listed in the range of 0.05 to 0.3^2 . Since values of high flow zone shall be in the range of usual values, they are set equivalent to those of low flow zone multiplied by three. These values is finalized according to the result of model verification, shown in .



Figure 3.3.9 Schematic Cross Section View for Setting Manning's *n*

			Resistance	(Manning n)
No.	River	Reach(km)	Low flow zone	High flow zone
		0 ~ 141	0.022	0.066
1	CHAOPHRAYA	142 ~ 225	0.033	0.099
		226 ~ 379	0.040	0.120
		0~43	0.028	0.084
2	PING	44 ~ 135	0.033	0.099
		136 ~ 256	0.050	0.150
3	WANG	0 ~ 286	0.033	0.099
	VOM	0 ~ 260	0.033	0.099
4	YOM	261 ~ 597	0.050	0.150
_	NAN	0 ~ 129	0.050	0.150
5	INAN	130 ~ 449	0.040	0.120
6	SAKAE KRANG	0 ~ 141	0.033	0.099
7	TUB SALAO	0~99	0.033	0.099
8	THACHIN	0 ~ 318	0.033	0.099
9	NOI	0 ~ 166	0.029	0.087
10	LOP BURI	0~99	0.029	0.087
11	BANG KAEW	0 ~ 15	0.029	0.087
12	PASAK	0~107	0.033	0.099
13	CHAINAT-PASAK Canal	0 ~ 166	0.033	0.099
14	PHONG PEN Canal	0 ~ 13	0.029	0.087
15	BANG BAN Canal	0 ~ 17	0.029	0.087
-	Other Canals	-	0.033	0.099

Table 3.3.2

Final setting of Manning's n

 $^{^2}$ Simulation Manual on Inundation (draft version) by Public Works Research Institute, Japan 1996



3.3.4 Cross section data set up in DHI-MIKE M/P study model



Cross-Section file (DHI-MIKE M/P study model)

Eile Edit View Grid Window	Helo		-	- 6
Austi Shark	L Att Owner L	Eland Blain Da	Cot I live Det M	when Ferrerschauer
Mast Balance Stratific	ation Time See	ian Outruit	Marie Marie	Occupienter Laskate
Initial Word Per	d Resist Ded D	anist Taskey	Wave Anness	Carbon of Falling
new new	000 1	ester, receiver	Here reprov	Denson volues
Approach	Reportance	Formula		
 Uniform Section 	Marco	ion (M)		
O Tripple zone			100	
Medical Makan				
Decision that is 100				
Pesistance Number: 30				
River Name	Chainage	Resistance		
1 PN0	256000,00000	20:00000		
2 PING	211500.000000	20.000000		
3 P2NG	107150.000000	30,000000		
6 PNO	4,050,00000	35,000000		
6 YOM	597000.000000	20.000000		
2 YOM	261000.000000	20.000000		
8 VOM	260000.000000	30.000000		
9 704	0.000000	30,000000		
11 NAN	13000.00000	2500000		
12 NAN	129000.000000	20.000000		
13 NAN	0.000000	20.000000		
14 CHAO PHRAYA	238000.000000	30.000000		
15 CHAO PHRAYA	13700000000	30,000000		
17 CHAO PHRAYA	85000,000000	25,000000		
18 CHAO PHRAYA	84000.000000	29.600000		
19 CHAO PHRAYA	0.000000	28:500000		
20 CHAOPHRAYA	141000.000000	44 000000		
21 CHAOPHRAYA	2500,00000	44.000000		
23 CHAOPHRAYA	0,000000	44.000000		
24 NOE	166000.000000	35.000000		
25 NO	0.000000	35.000000		
26 LOP BURI	99000.000000	35.000000		
28 BANG KAFW	15000,000000	28,400000		
29 BANG KAEW	0,000000	28.600000		
30 Bane Ban	17000.000000	28.600000		
31 Bane Ban	0.000000	28-500000		
22 BANG LUANG	13000300000	29.600000		
34 TUB SALAO	0,00000	25,00000		
36 TUB SALAO	99000.000000	25.000000		
DINOW JAN 16	0.000000	25.000000		
37 MAE WONG	89000.000000	25.000000		
SELCHAO PHRAYA	137000.000000	30,000000		
40 MAE WONG	141000.000000	25.000000		

Figure 3.3.11 Roughness Coefficient in HD file (MIKE M/P study model)

3.4 Structures

3.4.1 Weirs/Regulators

Weirs/regulators that have an influence on flood regime and inundation during large flood event shall be built in the river network model. Table 3.4.1. indicates the selected weirs/regulators.

				Discharge	Locatio	on (RID)	Ga	te informatio	n
No.	Туре	Facility name	River (Canal) name	regulatio n (m³/s)	POINT_X	POINT_Y	Number	Wide	Height
1	Regulator	HAD SAPAN CHAN RE.	Yom River	1804	587,700	1,918,800	5	12.00	10.25
2	Regulator	KLONG HOK BAHT RE.	Hok Baht Canal (Conneting Yom River to Yom-Nan Diversion Channel, Yom Koa River)	280	585,800	1,921,400	3	6.00	6.00
3	Regulator	YOM NAN RE.	Yom-Nan Diversion Channel	100	589,900	1,920,600	3	6.00	5.00
4	Regulator	YOM KAO RE.	Yom Koa River (Old Yom River)	180	589,900	1,920,100	4	6.00	5.00
5	Regulator	DR.15.8 YOM RE.	DR15.8 Canal (Connecting Yom River and Nan River)	60	622,775	1,852,906	2	6.00	4.00
6	Regulator	YANGSAI RE.	Yom River	630	587,700	1,873,985	7	6.00	6.00
7	Regulator	NARESWAN DAM	Nan River	1600	626,217	1,884,844	5	12.50	7.60
8	Regulator	DR.15.8 NAN RE.	DR15.8 Canal (Connecting Yom River and Nan River)	80	633,500	1,842,900	5	3.55	4.00
9	Regulator	DR2.8 RE.	DR2.8 Canal (Connecting Yom River and Nan River)	360	633,466	1,837,686	4	6.00	7.00
10	Regulator	MAKHAMTHAD-UTON G RE.	MAKHAMTHAD -UTONG CANAL	35	614,167	1,683,281	6	1.75	2.00
11	Regulator	PHONLATEP RE. (POLLATHEP RE.)	SUPHAN RIVER (Connected to Tha Chin River)	318	615,202	1,682,487	4	6.50	7.30
12	Regulator	BARROMTAT RE. (BORROMTAT RE.)	NOI RIVER	260	624,200	1,675,700	4	6.00	6.00
13	Regulator	MANOROM RE.	CHAINAT PASAK CANAL	210	618,411	1,695,021	6	6.00	3.50
14	Diversion Weir	CHAO PHRAYA DAM	CHAOPHRAYA RIVER	3,300	626,783	1,676,221	16	12.50	7.50
15	Regulator	MAHARAJ RE.	CHAINAT AYUTHAYA CANAL	75	626,050	1,676,403	6	6.00	2.50
16	Regulator	RAMA VI BARRAGE (PHRARAM 6 DAM)	PASAK RIVER	1,800	690,100	1,609,950	6	12.50	7.80
17	Regulator	PHRA NARAI RE.	RAPI PAT Canal (Discharged into EAST BANK PROJECT AREA)	150	690,115	1,609,945	8	4.20	3.56
18	Regulator	LOPBURI RE.	LOPBURI RIVER	270	652,500	1,643,595	4	6.00	9.20
19	Regulator (Drainage)	BAN CHOM SRI RE.	Drainage Canal in Mahajaj Project Area	120	641,856	1,664,819	3	4.00	6.50
20	Regulator	PAKHAI RE.	NOI RIVER	150	648,206	1,597,023	3	6.00	6.00
21	Regulator	LAD CHADO RE.	SUPAN4 Canal (Connecting Tha Chin River and Noi River)	80	647,063	1,599,918	3	6.00	5.00
22	Regulator	PHO PHRAYA RE.	THA CHIN RIVER	318	620,776	1,606,925	2	12.50	6.00
23	Regulator	SAM CHUK RE.	THA CHIN RIVER	318	617,300	1,633,200	2	12.50	7.00
24	Regulator	BANG PLA MAA RE.	SUPAN4 CANAL (Connecting Tha Chin River and Noi River)	78	625,861	1,592,477	3	6.00	4.80

Table 3.4.1Major Regulators in Chao Phraya River Basin

3.4.2 Dams

Flood analysis shall be conducted considering the storage function by ten dams as shown in Table 3.4.2. When re-production calculation of past flood events, actual released water from dams would be treated as upper boundary condition. When predictive calculation is carried out, another outflow would be determined by proposed dam operation rule and employed as upper boundary condition.

No	1	2	3	4	5	6	7	8	0	10
Name of Dam	Bhumibol	Sirikit	Mae Ngat	Mae Kuang	Kiew Lom	Kiew Kor Ma	Kwae Noi	Pasak	Tan Sa Lao	Kra Siew
Agency	FGAT	EGAT	RID	RID	RID	RID	RID	RID	RID	RID
River Name	PING	NAN	PING	PING	WANG	WANG	Kwae Noi(NAN)	PASAK	MANAM SAKAE	THA CHIN
Province	Tak	Auttradith	Chiang Mai	Chiang Mai	Lam Pang	Lam Pang	Phitsanulok	Lop Buri	Uthai Thani	Suphan Buri
Region	North	North	North	North	North	North	North	Central	Central	Central
Location (WGS84)										
Longitude	98°54′0″	100°33′53.64″	99°2′ 23.64″	99°7′41.88″	99°37′38.28″	99°38′ 24″	100°25′0.12″	101°5′31.2″	99°28′ 38.64″	99°39′14.4″
Latitude	17°15′54″	17°45′54.36″	19°9′36″	18°55′ 23.52″	18°31′ 9.48″	18°48′ 0″	17°10′59.88″	14°50′51.36″	15°31′ 17.76″	14°49′ 56.28″
Dam Type	Gravity Arch	Earth fill	Earth fill	Earth fill	Earth fill	Rock fill	Rock fill	Earth fill	*	*
Dam Height (m)	154.0	113.6	59.0	61.0	26.5	47.0	80.0	23.2	26.8	*
Purpose	Hydropower, Irrigation and Flood control	Hydropower, Irrigation and Flood control	Irrigation	Irrigation	Irrigation	Irrigation and Water Supply	Hydropower, Irrigation and Flood control	Hydropower, Irrigation	Irrigation	Irrigation
Catchment Area (km ²)	26,386	13,130	1,281	569	2,700	1,275	4,254	12,929	534	1,200
Storage (MCM, Million Cubic Meter)										
Maximum	13,462	10,640	325	263	106	209	1,080	960	198	363
Retention	13,462	9,510	265	263	106	170	939	785	160	240
Minimum(=dead volume)	3,800	2,850	22	14	4	6	43	3	8	40
Surface Area (km ²)	316.0	260.0	16.0	12.0	16.0	*	40.5	148.8	19.0	*
Spillway										
Туре	Tunnel	2 Tunnels	*	*	*	*	Overflow	Overflow	*	*
Creast Elevation (MSL)	242.9	150.5	393.8	*	*	*	118.5	32.5	*	*
Cotrol Gate	Radial Gate	Radial Gate					Radial Gate			
Number of Gate	4	2					5			
Size	width: 11.0m height: 17.4m	width: 11.85m height: 15.0m					width: 13.0m height: 12.0m			
Design Flood Volume (MCM)	7,670	4,643	261	*	*	*	*	*	*	*
Maximum Discharge Capacity (m ³ /s)	6,000	3,250	1,035	*	1,300	2,385	7,046	3,497	*	*
Intake Structure										
Intake Gate	Fixed Wheel	Fixed Wheel					Fixed Wheel			
Number of Gate	7	1					1			
Size	width: 4.2m height: 6.7m	width: 6.0m height: 8.5m					width: 5.0m height: 5.5m			
Power Installed Capacity (MW)	70*6+128=548	125*4=500	4.5*2=9				19*2=38			
Inauguration	1964	1974	1966	*	*	2009	2009	*	*	*
Collected Data (Storage Volume, Inflow, outflow etc)	1964 to date	1974 to date	2006 to date	1993 to date	1972 to date	2009 to date	2009 to date	1999 to date	2003 to date	1980 to date
Remarks										

Specification of Major Dams Table 3.4.2

Note: Above 10 dams are located in Chao Phraya River Basin and their rule curves are revised in case of large flood like 2011 yr flood. " * " is to be under investigation

				Storage	(MCM)	Maximum	
No	Туре	Name	River (Canal)	Maximum	Retention	Release (m³/s)	Remarks
1	Dam	Bhumibol Dam	Ping River	13,462	13,462	-	Calibration of runoff from upstream of dam was completed.
2	Dam	Sirikit Dam	Nan River	10,640	9,510	-	Calibration of runoff from
3	Dam	Kwae Noi Bumrung Dan	Nan River	1,080	939	-	upstream of dam was
4	Dam	Pasak Chollasith Dam	Pasak River	960	785	-	completed. Actual
5	Dam	Tab Salao Dam	Sakae Kurang River	198	160	-	release water from dams is employed as upstream
6	Dam	Kra Siew Dam	Ta Chin River	363	240	-	boundary condition.
7	Regulator	Phonlatep Regulator (POLLATHEP RE.)	Suphan River (connect to Ta Chin river)			318	Observed discharge through the regulator was re-created well.
8	Regulator	Barromtat Regulator (BORROMTAT RE.)	Noi River			260	
9	Regulator	Manorom Regulator.	Chainat Pasak Canal			210	
10	Diversion Weir	Chao Phraya Dam	Chao Phraya River			3,300	Water level and discharge at C.13 station located downstream of the Chao Phraya dam was re-created.
11	Regulator	Phra Narai regulator	Rapipat Canal (discharged into East bank project area)			150	Observed discharge through the regulator was re-created.
12	Regulator	Paknai Regulator	NOI KIVER			150	

Table 3.4.3

Facilities Built in the Flood Analysis Model

3.4.3 Pumping Station

During flood event, inundated water would be drained to rivers/canals by pump. The location of pump station is shown in Figure 3.4.1. Since it is difficult to make all small and large pump stations built in the model, it is assumption that pump stations in drainage areas are put together and total drainage capacity would be drained via main canals. Table 3.4.4 shows the pump stations built in the model.

No	Outlet	Pump Capacity (m ³ /s)			Demonstra
		Permanent	Semi-permanent	Total	Rentarks
East	Chao Phraya R.	167.2	54.0	221.2	
	Nakorn Nayok R.	33.6	54.0	87.6	
	Bang Pakorn R.	101.6	90.0	191.6	
	Gulf	336.8	48.0	384.8	
	Internal drain	136.0	114.0	250.0	
	Subtotal	639.2	360.0	999.2	
West	Chao Phraya R.	53.0	93.0	146.0	
	Tha Chin R.	276.4	267.0	543.4	
	Internal Drain	1.6	-	1.6	
	Sub-total	329.4	360.0	689.4	
Total		968.6	720.0	1,688.6	

Table 3.4.4Pump Stations Built in the Model


Figure 3.4.1 Location of Major Pump Stations (BMA)

It could be assumed that the pump stations drain inundated water with maximum capacity since operation record of pump station is not available. In this study, pump station would be operated under the condition that pump start working when water level in canal rises nearly top of an embankment and stop working after water level comes down to normal level (ex, mean sea level). Figure 3.4.2 shows the location of pump station, maximum capacity and criteria level of operation (start/stop).





MIKE Zero - [CHAOPHRAYA(levb	re).nwk1	1:2]										_ 🗆 🗙
<u>File Edit View N</u> etwork Layers	Settings	Window <u>H</u> el	Þ									×
] D 🖆 🖬 ½ 🖻 🛍 🗇 📍 🕅												
Overview ▲ ⊕ Network → ⊕ Structures → ⊕ Uverts (0) → ⊕ Prides (0) → ⊕ Control Str. (0) → □ Dambreak Str. (0) → □ User defined (0) → □ Energy Loss (0) → ⊕ Routing ⊕ ⊕ Grid points ≅	Location Branch n THACHII Type F Attribute: Gate Ty No. gate Underflc Gate Wi Sill level Max spe Initial	ame Chainage 3 316180 iegular E dit reservoir i be Discharge is 1 0 0 0 0 0 0 0 0 0 0 0 0 0	ID Phon-res torage	Head Loss F Positive Flov Negative Flov Negative Flov Tol Definitions Priority 1 N 2 N 2 T	Inflow v 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5	Outflow 1 1 1 1 1 1 1 1 1 1 1 1 1	Free Overflo 1 1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	W Target T Type S Struc Non Struc Non	ype of	Value		
	Uverviev	/				1						
		Branch	Chainage	ID	Туре	No. Gates	CC	Gate width	Sill level	Max Speed	LPI	
	1	THACHIN	316180	Phonr-reg	Discharge	1	0.63	0	0	100	0.5	1
	2	CHAINAT	165100	Manor-reg	Discharge	1	0.63	0	0	100	0.5	1
	3	NOI	164500	Borom-reg	Discharge	1	0.63	0	0	100	0.5	1
	4	060DR28	325	DR2.8-reg	Discharge	1	0.63	0	0	100	0.5	1
	5	050DR158	400	DR15.8nn-reg	Discharge	1	0.63	0	0	100	0.5	1
	6	U50DR158	14850	DR15.8ym-reg	Discharge	1	0.63	0	0	100	0.5	1
	7	020F_Yom	5700	Yomkao-reg	Discharge	1	0.63	0	0	100	0.5	1
	8	020F_Yom	454	Klonghok-reg	Discharge	1	0.63	0	0	100	0.5	1
	9	J010SPD_C	50	Yomnan-reg	Discharge	1	0.63	0	0	100	0.5	1
· · · · · · · · · · · · · · · · · · ·	<		Ш									
												~
Peadu			h	lo Tracking					Selec	t Objects		N.

3.4.4 Structures set up in DHI-MIKE M/P study model



Weirs in Network file (DHI-MIKE M/P study model)

MIKE Zero - [CHAOPHRAYA(levi	bre).nwk11	:2]									_ 🗆 🔀
🍞 <u>F</u> ile <u>E</u> dit <u>V</u> iew <u>N</u> etwork <u>L</u> ayers	<u>S</u> ettings	<u>W</u> indow <u>H</u>	elp								_ 8 ×
🛛 🗅 🖨 🗶 🖇 🛍 📾 📍 🕅											
Overview	Location				Pur	np Data					
Structures Weirs (28)	Branch M	lame C	anal_Mahasawa	at	Sp	ecification Type	Fixed Discha	arge 💊	•		
Culverts (0)	Chainage	e 2	.5		Dis	charge	100				
Pump (14)	ID	P	3		Ou	tlet Level					
Regulating (0) Control Str (9)	Туре	F	legular		♥ Q.0	H-curve		dH	Q		
Dambreak Str. (D)		[Edit reservoir s	torage							
				_							
Energy Loss (0)	Control P	arameters									
Hydraulic Control (MIKE 12) Houting	Start Lev	/el	1.6								
Runoff/groundwater links	Stop Lev	/el	0.5								
	Start-up	Period	0.5								
	Close Do	wn Period	0.5		-						
	Overview										
		Branch	Chainage	ID	Outlet Lev	Spec. Type	Discharge	Start Leve	Stop Level	t-Start	t-Stop
	1	Canal_Ma	2.5	p3		Fixed Discharge	100	1.6	0.5	0.5	0.5
	2	Canal_we	2.5	p14		Fixed Discharge	200	0.7	0.01	0.5	0.5
	3	Canal Ra	2.0	p13		Fixed Discharge	200	0.4	0.01	0.5	0.0
	4	Canal See	2.0	p12		Fixed Discharge	100	1.0	0.01	0.0	0.0
	6	Canal Bu	542175	p10		Fixed Discharge	00	2	0.01	0.0	0.0
	7	Canal Phr	25	p9		Fixed Discharge	100	10	0.01	0.5	0.5
	8	Canal Pas	25	n4		Fixed Discharge	200	1	05	05	05
	9	Canal Ru	2.5	p6		Fixed Discharge	100	2	0.01	0.5	0.5
	10	Canal Pre	2.5	p7		Fixed Discharge	100	0.8	0.01	0.5	0.5
	11	Canal Pra	2.5	p8		Fixed Discharge	100	0.5	0.01	0.5	0.5
	12	Canal Ra	2.5	p5		Fixed Discharge	100	4.3	0.5	0.5	0.5
	13	Canal_Bo	2.5	p1		Fixed Discharge	100	2.5	0.5	0.5	0.5
	14	Canal_Ch	2.5	p15		Fixed Discharge	100	2.8	0.5	0.5	0.5
Ready				No Tracki	na				Sele	ct Objecto	
roady				no tracki	116				Jele	cr objects	

Figure 3.4.4

Pumps in Network file (DHI-MIKE M/P study model)

3.5 Boundary Condition

3.5.1 Boundary Condition of River Network Model (inflow and tide)

boundary In unsteady flow analysis, conditions are given at upstream/downstream end and to middle of river networks as shown in Figure 3.5.1. At riverhead and dam site. calculated hydrograph or released water from dams (observed value) shall be given as upper boundary condition. At lowland area where runoff from sub catchments area flows into river separately, calculated runoff shall be distributed equally along the rivers/canals (See Figure 3.5.2).

At the estuary of the river, tidal level of the Gulf of Thailand shall be given as a lower boundary condition. Here, observed tidal level at Pom Phurachul station and Samut Sakhorn station are given to estuary of the Chao Phraya River and the Tachin River respectively.



3.5.2 Correction of Downstream Boundary Data (tide)

Table 3.5.1 shows tidal stations employed as lower boundary. For setting accurate boundary condition, observation data at tidal stations is appropriately corrected based on the benchmark survey conducted in 2012.

Boundary	River Mouth	Tidal station		
	Ta Chin River	Samut Sakhorn		
Lower Boundary	Chao Phraya River	Pomprachul		

Table 3.5.1Boundary Conditions of Downstream

(1) Chaophraya River

Tidal data for Chaophraya river mouth shall be given based on the RID TC.54 station data located at Pom Phrachul. Since observed values at TC.54 is supposed to be higher approximately 29cm than the actual values on average, according to the benchmark comparison, values after reduction of 29cm shall be given to the calculation (See Figure 3.5.4). Error and missing data shall be compensated with the astronomical tide level.

(2) Ta Chin River

Tidal data for Ta Chin River mouth shall be given the Samut Sakhorn data. Since observed values at Samut Sakhon is supposed to be higher approximately 34cm than the actual one according to the benchmark comparison, values after reduction of 34cm shall be given to the calculation (See Figure 3.5.5). Error and missing data for a few hours shall be filled with the data of before/after the lacked period.

[How to give the calculated runoff to river network in remaining basin (residual area)]



Step 1: Calculate a runoff from sub-basin with NAM module.

Step 2: If inflow points are not identified, a calculated runoff shall be distributed equally along rivers. If hydrological station located in the middle of a basin is used for model calibration, a calculated runoff shall be given in proportion to the area of sub catchment area divided at the hydrological station.





Distribution of Calculated Runoff





Location of Tide Level Station near Thailand Gulf







Figure 3.5.5 Benchmark comparison of Samut Sakhorn (Benchmark survey Sep 10 - 11 2012)



Figure 3.5.6 P

Proposed River Network Model for M/P Study

) 🖬	¥ 🖬 🐰 🖻 🛍 🖨	ð 🤋 💦					
	Boundary Description	Boundary Type	Branch Name	Chainage	Chainage Gate	e ID Bounda	y ID
	Open 🗸	Inflow	NAN	449000			<u> </u>
	Open	Inflow	PING	256000	Ō	0	
	Open	Inflow	CHAO PHRAYA	238000	0		
	Onen	Inflow	YOM	597000	0		
	Open	Inflow	WANG	286000	0		
	Onen	Inflow	MAE WONG	141000	0		
-	Open	Inflow	TUB SALAO	99000	ů.		
	Open	Inflow	PASAK	102000	0		
-	Open	Water Level	CHAOPHBAYA	102000	ů.		
_	Open	Water Level	THACHIN	0	0		
-	Open	Water Level	Canal Chainat- wutthawa	0	0		
-	Open	Inflow	Canal Machanthao-Uthong	0	0		
_	Closed	111000	Canal_Machanthac=Uthong	104902	0		
_	Olused	Water Level	Canal_Machanimau=Uthong	104003	0		
_	Open	Water Level	Canal Daverthumon	U	0		
_	Open	Water Level	Canal_Prawetourirom_east	0	0		
	Open	water Level	Canal_Kaphiphat	U	0		
	Upen .	water Level	Canai_west_Raphiphat	U	0		
	Ulosed		Canal_Pasicharoen	30802	U		
	Ulosed		Canal_Mahasawat	36670	U		
	Closed		Canal_Phra_Phimon	37105	0		
	Closed		Canal_Bonlue	42463	0		
	Closed		Canal_Sai_Si	38134	0		
	Closed		Canal_Chainat-Ayutthaya	118433	0		
	Closed		Canal_Rung_Sitprayunsak	54320	0		
	Closed		Canal_Prem_Prachakon	49246	0		
	Closed		BungBRP	1000	0		
	Closed		BungBWP	1000	0		
	Point Source	Inflow	THACHIN	240770	0		
	Point Source	Inflow	NAN	236000	0		
	Open	Inflow	Lev break1	1000	0		
	Onen	Inflow	Lev break2	1000	0		
_	Open	Inflow	Lev break4	500	0		
	Onen	Inflow	Lev break5	500	0		
_	Open	Inflow	Lev break6	2000	0		
	Open	Inflow	Lev break7	2000	0		
-	Open	Inflow	Lev break8	500	0		
_	Closed	4111077	PING NAN	000	0		
-	Closed		PING NAN	100000	0		
_	Olused		T ING NHIN	103000	0		
Inc	lude HD calculation lude AD boundaries Data Type TS Type Discharge: [TS File	File / Value Discharge_2011_100.d,	<mark>∣TS Info</mark> JEda)Sirikit_ou			_	

3.5.3 Boundary Condition in DHI-MIKE M/P study model

Figure 3.5.7 B

Boundary file (DHI-MIKE M/P study model)



Figure 3.5.8 Boundary data in dfso file (DHI-MIKE M/P study model)

<u>File E</u> dit <u>V</u> iew <u>N</u> etwork <u>L</u> ayers	<u>S</u> ettings	<u>₩</u> indow <u>H</u> elp	1			-
🖻 🖬 % 🖻 🛍 🗇 📍 🕅						
arview	Catalan		C			
Network	Catchin	ent D'ennitions	Com	lection to branci	105	
Routing	Name	Ping_D	Bran	nch name	PING	
Runoff/groundwater links	Area	1668.7	Ups	tream Chainage	199000	7
MIKE SHE links (0)				Chains	250000	- 1
Grid points			DOV	vristream criaina	ge 206000	
	<- Overvie	M				
				I Decesh	LIC	
		Name	Area	Name	Chainage	Chainage
	1	Ping_D	1668.7	PING	199000	256000
	2	_ Ping_D	3783.8	PING	136000	199000
	3	_ Ping_D	2392.3	PING	62500	136000
	4	Ping D	210.3	PING	0,000	39500
	6	Wiang D	1471.9	WANG	241000	285000
	7	Wang D	4629.1	WANG	124000	241000
	8	Wang D	1037.9	WANG	72000	124000
	9	Wang D	878.4	WANG	30000	72000
	10	Yom_M	4476.1	YOM	530000	597000
	11	Yom_M	2723.9	YOM	363000	530000
	12	_Yom_M	903.7	YOM	339000	363000
	13	Yom_M	1298	YOM	316000	339000
	14	Yom_M	496	YOM	294000	316000
	10	Yom_M	2222.4	YUM	276000	294000
	10	Yom_D	3324.1	YOM	1 /2000	276000
	19	U	2021.5	YOM	54000	122000
	10	Yom D	135.9	YOM	0	54000
	20	Nan M1	3669	NAN	372000	444000
	21	Nan M1	1991.1	NAN	339000	372000
	22	Nan_M2	730.9	NAN	266000	339000
	23	Nan_M2	1584	NAN	221000	266000
	24	Nan_M3	3962.2	NAN	138000	221000
	25	Nan_M4	2017.9	NAN	94000	138000
	26	Nan_M4	1094	NAN	75000	94000
	27	Nan_M4	991 17101	NAN	34000 0	24000
	20		4786	BungBWP	0	1000
	30	Channhrava	1893.9	chao phrava	213000	237000
	31	Chaophrava	0	chao phrava	163000	213000
	32	Chaophraya	6898.1	chainat pasa	52000	166000
	33	Chaophraya_	0	chaophraya	45000	141000
	34	Chaophraya	0	chaophraya	0	45000
	35	Sakae_Krang	2707.4	mae_wong	0	141000
	36	Tab_Salao_D	881.8	Tub_Salao	0	99000
	37	Pasak_D	2657.4	Pasak	54000	102000
	38	Thachin	b1//.6	Thachin	189200	31/500
	39	Thachin	ZZ39.7 457.1	Thachin	139400	120400
	40	Thachin	407.1	Thachin	82000	123200
	41	Thachin	1642.3	Thachin	02000	82000
	42	macrim	1042.0	machin		02000
	<					



CHAPTER 4 Inundation Model

4.1 Outline

For inundation analysis in flood plain, two-dimensional unsteady flow analysis model shall be employed. Outline of the model and schematic diagram of two-dimensional unsteady analysis are shown in Table 4.1.1 and Figure 4.1.1 respectively.

Table 4.1.1

Outline of Inundation Model

Items	Contents					
Software	DHI-MIKE-FLOOD					
Grid Size	2,000m					
	X: 338,000 - 838,000					
Modeling Area	Y: 1,460,000 - 2,210,000					
	(coordinate system: WGS84 UTM Zone 47N)					
Flovation	Average elevation is set up based on the result of aviation survey (LiDAR)					
Elevation	conducted on 2012					
Roughness Coefficient	Set up with land use in 2011					
Continuous Structuro	Major roads, King's Dike (Bangkok), Surrounding dike (major urban area).					
continuous structure	Height of structure is set up from LiDAR data					



Figure 4.1.1 Schematic Diagram of Inundation Analysis Model

4.2 Model Parameters

4.2.1 Elevation of Flood Plain

Average ground elevation of flood plain model is made from the aerial survey conducted by JICA LiDAR Team on 2012, which has high density and accuracy. In the study, considering current computing power, inundation analysis shall be conducted with 2,000m grid.

Items	Description	Remarks					
Term	March 2012						
Re-solution Observation Density: point/4m ²		In the study, grid-size of 2,000m is employed for flood analysis.					
Area	X: 396,000 - 808,000 m Y: 1,460,000 - 2,044,000 m *Coordination system: WGS1984 UTM Zone 47N	Elevation data in the military area was not provided due to the security regulation. That area and out of the observation area of LiDAR data shall be complemented with spot height of topographic map of 1/50,000 scale.					

Table 4.2.1	Elevation Data (LiDAR Data)
-------------	-----------------------------



Figure 4.2.1 Produced Area of Elevation Data



Figure 4.2.2 Ground Elevation from the LiDAR Data (Grid Size: 2,000m)

4.2.2 Roughness Coefficient of Flood Plain

Table 4.2.2

Based on the land use condition from LANDSAT 2011 (observed from 2009 to 2010), roughness coefficient shall be set up. According to the standard values³, roughness coefficient of flood plain for agriculture, road and others are defined as 0.060, 0.047 and 0.050 respectively. If more than two categories of land use are included in a mesh, roughness coefficient of the mesh shall be calculated in proportion to the ratio of area.

Land use map and initial roughness coefficient are shown in Figure 4.4.1 and Figure 4.4.2.

Items	Description
Data	LANDSAT2
Observation Term	2009 – 2010
Data Type	Raster Data



Data Source of Land Use

Figure 4.2.3 Roughness Coefficient of Flood Plain mesh (Grid Size: 2,000m)

4.3 Structure

4.3.1 Continuous Structure

Continuous structures such as main national roads, king's dike and ring dike of major urban areas shall be built in the flood inundation model, which would have an influence on inundated flows. The outline of modeled continuous structures and the locations are shown in Table 4.3.1 and Figure 4.4.3.

Туре	Name	Description			
	Kings Dike	Total Length: 156km Height of embankment: 0 to 3 (m MSL)			
Dike	Ring Dike	Total Length: 530km Height of embankment: 0 to 4 (m MSL)			
	Economic zone	Total Length: 126km Height of embankment: 0 to 3 (m MSL)			
Road	Major national roads Route number: 1, 2, 3, 4, 7, and 9 etc.	Total Length: 1,376km Height of embankment: 0 to 4 (m MSL)			

Table 4.3.1Continuous Structures built in the Model

³ Simulation Manual on Inundation (draft version) by Public Works Research Institute, Japan 1996

4.3.2 Dike Break (2011 recreation)

In 2011yr flood, dike breaks happened at approximately ten places of left side along the Chao Phraya River as shown in Figure 4.3.1. This model would take account of dike breaks for re-production calculation since the water volume flowing down to the sea would decrease due to inundation.

To simulate the phenomenon of dike break, water gates would be set at dike break point. When the river water level rises up to the height of overflow, river water is spilled into the flood plain. Height of overflow shall be set-up based on the ground elevation near dike break point, and width of dike break would be set-up the following table obtained by the result of site survey.



Figure 4.3.1

Dike Break Points (2011yr)

Table 4.3.2

Result of Site Survey on Dike Break (2011yr)

				Location	Location	Length of		Date of						
No.	Location	Side	Туре	LOCATION (unstream)	(dournstroom)	broken	Date	emergency	Remarks					
				(upstream)	(downstream)	dike/overflow		rehabilitation						
			~	N15 16' 09.55"	N15 16' 09.19"		2011/							
1	Chinat front dike_cross-dike	Left	Dike break	E100 05' 26.41"	E100 05' 27.00"	20	9/22	Not yet						
	_			N15 16' 09.05"	N15 16' 09.18"		2011/							
2	Chinat front dike_cross-dike	Left	Dike break	E100.05' 30.16"	E100 05' 32.86"	80	9/22	Not yet						
				N15 16' 14.53"	N15 16' 13.55"		2011/							
3	Local road	Left	Dike break	E100 05' 31.42"	E100 05' 34.98"	110	9/22	Not yet						
	Chinat main dike along route			N15 16'30.63"	N15 16' 27.62"		2011/							
4	No.1	Left	Dike break	F100 05' 40.69"	E100 05' 40.32"	100	9/22	2011/10/28						
	Chinat main dike along route			N15 16' 20.05"	N15 16' 17.78"		2011/							
5	No.1	Left	Dike break	E100 05' 38.26"	E100 05' 37.96"	70	9/22	2011/10/28						
	Chinat main dike along route			N15 16' 13.86"	N15 16' 13.41"		2011/							
6	No.1	Left	Dike break	E100 05' 36.88"	E100 05' 36.75"	15	9/22	2011/10/28						
	Chinat main dike along route			N15 16' 08.13"	N15 16' 07.29"		2011/							
7	No.1	Left	Dike break	E100 05' 35.27"	E100 05' 35.07"	30	9/22	2011/10/28						
	Chinat main dike along route			N15 13' 59.50"	Unknown		2011/		length is estimated					
8	No.1, near hill	Left	Dike break	E100 06' 11.57"		100	9/22	Completed	value					
				N15 10' 35.06"	Unknown				Spillway established					
9	Upstream of 2km from Chao	Left	Overflow			1,000	2011/		on the road,					
-	Phra Dam, Spiliway			E100 09' 36.53"			9/18		17.0MSL(estimated)					
40	Downstream of 2km from	Loft	Dike break	N15 10' 22.83"	N15 10' 26.30"	200	2011/	Netwot						
10	Chao Phra Dam	Lett	Dike break	E100 11' 39.65"	E100 11' 45.13"	200	9/22	Not yet						
	Downstream of 5km from	1.4	Dilya hasalı	N15 11' 13.41"	N15 11' 14.40"	6-	2011/	Network						
11	Chao Phra Dam	Lett	Dike break	E100 13' 01.43"	E100 12' 59.47"	05	9/22	Not yet						
42	Downstream of 5km from	Loft	Dike break	N15 11' 09.95"	N15 11' 11.46"	100	2011/	Netwot						
12	Chao Phra Dam	Leit	DIKE DI Eak	E100 13' 08.22"	E100 13' 05.37"	100	9/22	Not yet						
	Downstroom of Choo Phro			Downstream of	N15 06' 49.74"		Links		coordination of					
13	Downstream of Chao Phila	Left	Overflow	1km from Chao	E100 16! 18 56!	14,000	ONKI	Unknown	downside is unknown					
	Dam			Phra Dam	E100 10 18.50		00011							
	Bang (hom Sri gate in Sing		Dike break	N15 03' 15.70"	N15 03' 17.22"		2011/							
14	Buri region	Left	next to	F100 10' 13.53"	F100 10 12 15"	60	9/13	2011/10/12						
			water gate	2100 19 19199	2.000.19.12.119		51.5							
	Downstream of 1km from			N15 02' 51.38"	N15 02' 49.77		2011/							
15	Bang Chom Sri gate in Sing	Left	Dike break	E100 19' 32.43"	E100 19' 33.28"	55	9/14	2011/9/30						
	Buri district													
	Downstream of 7km from	1.4	Dillas has a la	N14 59' 31.04"	N14 59' 29.35"		2011/							
16	district	Lett	Dike break	E100 20' 36.01"	E100 20' 36.48"	55	9/17	2011/9/30						
	district			N45 42! 57 84!!					P-7m 4 dates					
17	Water Gate at the Tha Chin	right	Cate Open	IN15 12 57.01				Unknown	D=/III, 4 galles					
''	River (regulator)	ngin	Sale Open	E100 04' 21.70"				UNKIOWI	220m ³ /s > 350m ³ /s					
			Dike break	N14 45' 33.04"	Unknown				length is estimated					
18	Phra Ngam Water Gate	right	next to		0.110.101.11	50	2011/	Not yet	value					
	(Regulator)	(Regulator)	(Regulator)	(Regulator)	(Regulator)	(Regulator)	·)	ingine	water gate	E100 25' 49.87"		2-	9/15 Not yet	

4.4 Boundary Condition

4.4.1 Infiltration

In this study, 10 mm/day is set to each grid of flood plain as the value of infiltration, which includes infiltration volumes into soils and drainage volumes into small drainage systems.

4.4.2 Evaporation

Effect of evaporation from flood plain shall be considered when the flood plain is inundated. Unlike through the rainfall-runoff process (refer to 2.3.2), surface water is supposed to evaporate directly from inundated flood plain with minimum loss. Since the amount is nearly equal to the maximum potential value, pan evaporation amount at TMD synoptic station (46 stations) shall be given to grid with Thiessen Method.



Figure 4.4.1

Land Use Condition (from LANDSAT 2011)



Figure 4.4.2 Roughness Coefficients of Flood Plain (1/n)





4.5 Set up

4.5.1 Set up inundation model in DHI-MIKE M/P study model







Figure 4.5.2 Roughness coefficient in dsf2 file (DHI-MIKE M/P study model)



Figure 4.5.3 Inland Rainfall in dsf2 file (DHI-MIKE M/P study model)





Evaporation from inundated mesh in dsf2 file (DHI-MIKE M/P study model)

CHAPTER 5 Model Verification

5.1 Procedure

To prove the reasonability of the flood analysis model, calculated water level and discharge at verification point, inundation area and flooding volume shall be compared with observed data. Figure 5.1.1 shows the procedure of verification for re-producing. In the study, 2006 and 2011 year floods are employed as target flood for model verification.



Figure 5.1.1 Procedure of Model Verification

5.2 Selection of Verification Points

The plenty of hydrological station are installed in Chao Phraya River basin. In the study, hydrological stations that have well-observed data and are important points for flood control shall be selected as the model calibration points. The points painted white in Figure 5.2.1 are determined as model calibration points. The hydrological stations and regulators painted gray have something a margin of observation error and/or missing data, so they are not used as calibration points.

<Remarks>

- In order to study on basin-wide flood control plan, hydrological stations located in major tributaries (eight rivers) are selected mainly at this time.
- Water level at Ct.2A shall be used for calibration because this station is assumed to be affected by the backwater from Chao Phraya River.
- Discharge data at W.16A is not used for model verification because the released water from Kew Kho Ma Dam located upstream of W.16A possibly involves incorrect values in 2011 and reasonability of using W.16A could not be proved.
- Discharge data at Y.6 is incorrect because runoff rate (runoff / rainfall depth) at Y.6 shows negative values.
- Seven facilities, Ban Hat Saphan Chan regulator, Ban Yang Sai regulator, Naresuan dam, Makamthao-Uthong regulator, Maharaj Head regulator and Rama VI Barrage, have no observation record, so verification calculation are not available at these facilities.



Figure 5.2.1 Selected Calibration Points

5.3 Inundation Area

To prove the reasonability of the flood analysis model, calculated inundation area shall be examined. Observed inundation area published by UNOSAT and GISTDA, and the result of flood mark survey conducted 2012 as shown in Figure 5.3.1, Figure 5.3.2 and Figure 5.3.3 shall be used for the model verification.

Data Source	Information	Remarks					
	Inundation area on the middle of	Reference: United Nations Institute for					
UNOSAT	August, September, October and	Training and Research					
	November 2011.	http://www.unitar.org/unosat/					
	Inundation area on 2006yr flood	Reference: Thailand Flood Monitoring					
	(yearly)	System					
GISTDA	Inundation area on 2011yr flood	http://flood.gistda.or.th/					
	from May to November						
	Maximum inundation depth and	This survey was conducted from					
Flood Mark	inundated time in flooded area in	downstream of Y.4 (Yom River), P.16 (Ping					
	2011. Number of survey points is	River) and N.27A (Nam River) to Gulf of					
Survey by JST	approximately 6,600.	Thailand. Regarding inundation area out of					
		the survey area shall be referred to UNOSAT.					

<Overflow point>

- At upstream of Nakhon Sawan, overflow occurred at downstream of near P.16 (Ping River), downstream of Y.33, and downstream of N.60 (Nan River)
- At downstream of Nakhon Sawan, overflow occurred at right side just downstream of Nakhon Sawan
- From the diversion point of Chainat-Pasak canal to around Chainat and Sing Buri, there were several dike break⁴ due to penetration flow in dike body and overflowing water flowed down to south through the flood plain area between Chao Phraya River and Chainat-Pasak canal and spread.

⁴ Reference: RID



Figure 5.3.1

UNOSAT (from mid of Augst to mid of Deccember)





GISTDA Flood Area (2011/5/1-12/31)



Figure 5.3.3

Result of Flood Mark Survey Conducted 2012

5.4 Verification

First, re-production calculation of 2006 and 2011 were carried out under the initial condition as mentioned above sectors, and then parameter fitting was repeated.

5.4.1 Evaluation Method

Table 5.4.1 shows the evaluation items and method for evaluation of reasonability of the model.

No.	Evaluation Items	Evaluation Points	Remarks
	Longitudinal Profile	Chao Phraya River	Compare with observed water level
1	of Water Level	• Tha Chin River	
		• Pasak River	
2	Water Level and	At validation points	Compare with observed water level
	Discharge		and discharge
3	Inundation Area	1) Maximum inundated area	Compare among UNOSAT、GISTDA、
		2) Monthly inundated area	and Flood Inundation Survey
		from August to December	Monthly inundated area of UNOSAT
			and GISTDA are available only in
			2011.
4	Inundation Depth	Maximum inundation depth	Compare with flood mark survey
			conducted 2012

Table 5.4.1Evaluation Item for Re-production Simulation

5.4.2 Evaluation Result

(1) Longitudinal Profile of Water Level

Longitudinal profiles (water level) of the Chao Phraya River, Tha Chin River and Pasak River are shown in the following figures.





54

(2) Water Level and Discharge Hydrograph

The model calculation result is shown in C.2 (Nakhon Sawan) in the Chao Phraya River.



(3) Inundation Area Analysis

Inundation area maps generated from the simulation results is shown in \bullet . Overall, the inundated areas based on the simulation results are matching with the UNOSAT inundation.



*2011_Inundataion_Area」 is made by combining 2011 inundation area of UNOSAT (mid-Aug, Sep, Oct and Dec) with 0.01m

higher inundated area by flood mark survey.

(4) Inundation depth

Maximum inundation depth maps generated from the simulation results of 2011-flood analysis model is shown in. Figure 5.4.4. Overall, the maximum inundated depth based on the simulation results is matching with the result of Flood Mark Survey conducted in 2012.





57

U-2: Manual of MIKE-Flood Modeling

16-17th July 2013

Technical Workshop on Flood Analysis Model

Manual

of MIKE-Flood Modeling for M/P Study in Thai
สารบบ

1. สาระสำคัญของคู่มือฉบับนี้	
1.1 โครงสร้างของคู่มือ ·····	
1.2 โครงสร้างของโฟลเดอร์ข้อมูล ·····	
2. วิธีการใช้งานพื้นฐาน ·····	6
2.1 ขั้นตอนพื้นฐานของการจำลอง MIKE ·····	
2.2 ต้นแบบวิเคราะห์การไหลของน้ำ ·····	7
2.3 ต้นแบบวิเคราะห์เส้นทางของน้ำ ·····	
2.4 ต้นแบบวิเคราะห์การไหลลัน·····	13
3. ขั้นตอนการตรวจสอบผลลัพธ์ภายหลังการปรับปรุงแม่น้ำ	
3.1 การตรวจสอบผลลัพธ์โดยการเปลี่ยนแปลงรูปร่างของเส้นทางน้ำ	16
4. ขั้นตอนการสร้างตันแบบของลุ่มน้ำใหม่ ·····	
4.1 ขั้นตอนการสร้างต้นแบบของลุ่มน้ำใหม่⋯⋯⋯⋯⋯⋯⋯⋯	21
4.2 วิธีการสร้างตันแบบวิเคราะห์การไหลของน้ำ	22
4.3 วิธีการสร้างต้นแบบวิเคราะห์เส้นทางน้ำ ·····	
4.4 วิธีการพัฒนาโมเดลจำลองเพื่อการวิเคราะห์น้ำไหลท่วม ·····	56

1. สาระสำคัญของคู่มือฉบับนี้

คู่มือฉบับนี้มีวัตถุประสงค์เพื่อเป็นขั้นตอนการรวบรวมสำหรับการดำเนินการตรวจสอบการใช้งานที่มีผลต่อ เนื่องจากแม่น้ำช่อมบำรุงขั้นพื้นฐานรูปแบบการวิเคราะห์การรั่วไหลของแม่น้ำน้ำท่วมจากแม่น้ำเจ้าพระยาโด ยไมค์ของ DHI ของสำหรับวิธีการสร้างรูปแบบใหม่ในอ่าง

1.1 โครงสร้างของคู่มือ

้ คู่มือฉบับนี้จะประกอบไปด้วยโครงสร้างดังต่อไปนี้

章	項目	概要
บทที่ 1 สาระสำคัญของคู่มือฉบับ นี้	โครงสร้างของคู่มือ	สาระสำคัญของเนื้อหาที่ระบุไว้ในคู่มือฉบับนี้
บทที่ 2 วิธีการใช้งานพื้นฐาน	ดันแบบวิเคราะห์การไหลขอ งน้ำ	สาระสำคัญของวิธีการจำลองการวิเคราะห์การไหลขอ งน้ำทั่วไป
	ดันแบบวิเคราะห์เส้นทางน้ำ	สาระสำคัญของวิธีการจำลองการวิเคราะห์เส้นทางน้ำ ทั่วไป
	ดันแบบวิเคราะห์การไหลลัน	สาระสำคัญของวิธีการจำลองการวิเคราะห์การไหลลัน ทั่วไป
บทที่ 3 ขั้นตอนการตรวจสอบผล ลัพธ์ภายหลังการปรับปรุ งแม่น้ำ	การตรวจสอบผลลัพธ์โดยก ารเปลี่ยนแปลงรูปร่างของเส้ นทางน้ำ	วิธีการเปลี่ยนแปลงรูปร่างของเส้นทางน้ำจากการปรับ ปรุงแม่น้ำในกรณีที่ไม่ต้องการขุดหรือขยับขยายช่อง ทางของแม่น้ำ
บทที่ 4 ขั้นตอนการสร้างตันแบบ	วิธีการสร้างต้นแบบวิเคราะห์ การไหลของน้ำ	ขั้นตอนการสร้างตันแบบวิเคราะห์การไหลของลุ่มน้ำใ หม่
ของลุ่มน้ำใหม่	วิธีการสร้างต้นแบบวิเคราะห์ เส้นทางน้ำ	ขั้นตอนการสร้างตันแบบวิเคราะห์เส้นทางน้ำของลุ่ม น้ำใหม่
	วิธีการสร้างตันแบบวิเคราะห์ การไหลลัน	ขั้นตอนการสร้างตันแบบวิเคราะห์การไหลลันของลุ่ม น้ำใหม่

ตารางที่ 1.1 แสดงสาระสำคัญของคู่มือฉบับนี้

1.2 โครงสร้างของโฟลเดอร์ข้อมูล รุ่นนี้ถูกสร้างขึ้นในธุรกิจนี้ตั้งอยู่ในโฟลเดอร์ต่อไปนี้

😂 B-4)				
ファイル(E) 編集(E) 表示(V) お気に入り(A)	ツー.	ル(T) ヘルプ(H)		1
アドレス(D) 🛅 C:¥chaophraya¥model¥B-4)				💉 🛃 移動
フォルダ	×	名前	サイズ	
😰 デスクトップ	~	(01_NAM)		
🐨 🔛 マイ ドキュメント		02_KAD		
🗉 🧣 דר שטצב אין		03_HAN		
💮 🕀 媽 3.5 インチ FD (A:)		6_06_PRG		
🕀 🗺 '202.251.10.225' Ø E (B:)	=	🐻 01 SIM.bat	1 KB	
😑 🥯 ローカル ディスク (C:)		302PICKUP.bat	2 KB	
🗉 🛅 ADCM_temp		505-NR-2011-100-0.bat	1 KB	
🕀 🛅 Becky!	1.000	🐻 all.bat	1 KB	
🖃 🛅 chaophraya		CHAOPHRAYA.couple	206 KB	
🖃 🛅 model		CHAOPHRAYA.dfs2	313,850 KB	
표 🛅 505-NR-2011-100-0		CHAOPHRAYA.m21	8 KB	
🕀 🛅 505-NR-2011-100-011-01		CHAOPHRAYA.res11	4,306 KB	
⊞ 🛅 505-WR-2011-100-0		CHAOPHRAYA.rev	7 KB	
⊕ 🛅 505-WR-2011-100-011-01		CHAOPHRAYA.sim11	3 KB	
🖃 🧰 B-4)		CHAOPHRAYAHDAdd.res11	27,686 KB	
C1_NAM		CHAOPHRAYAhot.res11	431 KB	
C 02 KAD		CHAOPHRAYAhot.sim11	3 KB	
C 03 HAN		CHAOPHRAYAhotHDAdd.res11	880 KB	
🕀 🛅 06_PRG		🩀 Mike11.ini	27 KB	
🕀 🛅 CommonMP				
E COMPAQ	-			
	×			
S 0 2	1			

(1) (2) โฟลเดอร์ 01_NAM

โฟลเดอร์ 01_NAM ข้อมูลและเครื่องมือที่เกี่ยวข้องกับการวิเคราะห์ปริมาณน้ำฝนที่ไหลบ่าประกอบดั วย



(2) โฟลเดอร์ 02_Kad

ในโฟลเดอร์ 02_Kad จะประกอบไปด้วยข้อมูลและเครื่องมือที่ใช้ในการวิเคราะห์เส้นทางของน้ำ

02_KAD				
ファイル(E) 編集(E) 表示(V) お気に入り(4	シッシー	レロ・ヘルプ(出)		
アドレス(D) 🛅 C:¥chaophraya¥model¥B-4)¥D2	KAD			🖌 🎒 移動
フォルダ	×	名前	サイズ	
F スクトップ	л л	CHAOPHRAYA.bnd11 CHAOPHRAYA.HD11 CHAOPHRAYA.nwk11 Chaophraya.xns11 Discharge.dfs0	2 KB 7 KB 7 KB 1,263 KB 50 KB	

(3) โฟลเดอร์ 03_Han

ในโฟลเดอร์ 03_Han จะประกอบไปด้วยข้อมูลและเครื่องมือที่ใช้ในการวิเคราะห์เส้นทางน้ำ



2. วิธีการใช้งานพื้นฐาน

ในบทที่ 2 นี้จะอธิบายถึงสาระสำคัญที่เกี่ยวข้องกับวิธีการใช้งานทั่วไปในกรณีที่ต้องการจำลองการวิเคร าะห์การไหลของน้ำ, เส้นทางน้ำและการไหลลันด้วยซอฟต์แวร์ MIKE โดยรายละเอียดของวิธีการสร้างต้น แบบในแต่ละประเภทนั้นจะถูกระบุไว้ในคู่มือที่แนบมากับซอฟต์แวร์ MIKE และในบทที่ 4 กรุณาดูรายละเ อียดได้ใน "ขั้นตอนการสร้างต้นแบบของลุ่มน้ำใหม่"

2.1 ขั้นตอนพื้นฐานของการจำลอง MIKE

้สำหรับการจำลองด้วยซอฟต์แวร์ MIKE นั้น ให้ปฏิบัติตามขั้นตอนที่ได้ระบุไว้ด้านล่างนี้



รูปที่ 2.1 ขั้นตอนของการจำลอง MIKE

2.2 ตันแบบวิเคราะห์การไหลของน้ำ

สำหรับต้นแบบวิเคราะห์การไหลของน้ำนั้นตามหลักแล้วจะใช้ในการวิเคราะห์ข้อมูลต่างๆดังต่อไปนี้ได้ สำหรับวิธีการสร้างแบบจำลองนั้น กรุณาดูรายละเอียดได้ในคู่มือ MIKE ของบริษัท DHI หรือในบทที่ 4 ของคุ๋มือฉบับนี้

[ฟังก์ชั่นของตันแบบวิเคราะห์การไหลของน้ำ]

- ตันแบบวิเคราะห์การไหลของน้ำ
- การตั้งค่าตันแบบ
- ผลการคำนวณปริมาณการไหลของลุ่มน้ำ

🛃 MIKE Zero - [RRPar1 - Modified]	
● <u>F</u> ile <u>E</u> dit <u>G</u> rid <u>V</u> iew <u>P</u> arameters <u>L</u> ayers <u>B</u> asin Work Area	<u>Window H</u> elp _ = - ×
🛛 🗅 🚔 🖬 🏃 🖻 💼 🍜 🤋 😢	
Catchments NAM UHM SMAP Urban FEH DRiFt Timeser	ries
Catchment Definition	
Catchment name	HAOPHRAYA_D
Rainfall runoff model type	AM
Catchment area	192
	Calibration plot
Catchment Overview	
Name Model Area #ID	
1 CHAOPHRAYA_U2 NAM 1894 0	NAM ตับแบบกับ ฯลฯ
	UHM ฟังก์ชันการกักเก็บ, ต้นแบบ
	ประเภทการกักเก็บเชิงเส้น
- แก้ไข RR –	810%
	าดา
เลอกตนแบบการใหล	SMAP การคำนวณปริมาณความชื่น
	ในดิน
	URBAN <mark>สูตรสังเคราะห์</mark>
Ready	

รูปที่ 2.2 ดันแบบวิเคราะห์การไหลของน้ำ

2.3 ตันแบบวิเคราะห์เส้นทางของน้ำ

สำหรับวิธีการสร้างแบบจำลองนั้น กรุณาดูรายละเอียดได้ในคู่มือ MIKE ของบริษัท DHI หรือในบทที่ 4 ของคุ๋มือฉบับนี้

【ฟังก์ชั่นของตันแบบวิเคราะห์เส้นทางของน้ำ】

- เครือข่ายของเส้นทางน้ำและสถานที่
- การตั้งค่าตัดขวางของเส้นทางน้ำ
- การตั้งเงื่อนไขอัตราการไหล
- การคำนวณอัตราการไหลในเส้นทางน้ำ



รูปที่ 2.3 (1) แสดงเครือข่ายของเส้นทางน้ำและอาคารสิ่งก่อสร้าง



รูปที่ 2.3 (2) แสดงเครือข่ายของเส้นทางน้ำและอาคารสิ่งก่อสร้าง

MIKE Zero - [CHAOPHRAYA.nv File Edit View Network Layers C 20 File I & B 20 20	k11:2] ประเภทของสิ่งก่อสร้าง – บึม Settings ม⊮ – ท่อใต้ดิน – สะพาน ฯลฯ	
Overview	Location River Name Chainage ID Type Regular Attributes Type Broad Crested Weir Valve None	Head Loss Factor Inflow OutFlow Free Overfl Positive Flow 0.5 1 1 Negative Flow 0.5 1 1 Graphic Horizontal offset from marker 2 0 Plot.
User defined (0) — Tabulated Structures (0) — Energy Loss (0) — Hydraulic Control (MIKE 12) ⊕ Routing ⊕ Routing ⊕ Grid points → Grid points	Geometry Type Level-Width ♥ Datum 0 1 Level ₩idth 1 สามารถตั้งค่าฝาย, สะพาน, ปั๊ม	Overflow Q/h-relations of Q/h-relations 20 Calculate Q/h-relations Q H-Pos H-Neg H-₩e ฯลฯ ได้
Ready	x = 612392.34 y = 1	709426.6

รูปที่ 2.4 การตั้งค่าอาคารสิ่งก่อสร้าง



รูปที่ 2.5 การตั้งค่าตัดขวางเส้นทางน้ำ

















2.4 ดันแบบวิเคราะห์การไหลลัน

สำหรับวิธีการสร้างแบบจำลองนั้น กรุณาดูรายละเอียดได้ในคู่มือ MIKE ของบริษัท DHI หรือในบทที่ 4 ของคุ๋มือฉบับนี้

【ฟังก์ชั่นของตันแบบวิเคราะห์การไหลลัน】

- การตั้งค่าความสูงของพื้นดินที่เป็นตันทางการไหลลัน
- การเชื่อมต่อเส้นทางน้ำกับต้นทางการใหลลัน
- การแสดงผลการวิเคราะห์การไหลลัน



รูปที่ 2.9 การตั้งค่าความสูงของพื้นดินที่เป็นต้นทางการไหลลัน

JICA Study Team











รูปที่ 2.12 การแสดงผลการวิเคราะห์การไหลลัน

ขั้นตอนการตรวจสอบผลลัพธ์ภายหลังการปรับปรุงแม่ น้ำ

3.1 การตรวจสอบผลลัพธ์โดยการเปลี่ยนแปลงรูปร่างของเส้นทางน้ำ

สำหรับวิธีการตรวจสอบผลลัพธ์โดยการเปลี่ยนแปลงรูปร่างของเส้นทางน้ำนั้นสามารถทำได้โดยการเปลี่ย นแปลงเฉพาะบางส่วนของข้อมูลการตัดขวางของเส้นทางน้ำที่ได้มีการสร้างต้นแบบขึ้นมาแล้วในปัจจุบัน ทั้ง นี้จำเป็นที่จะต้องทำการแก้ไขความสัมพันธ์ของ ID การตรวจวัด (topo ID) ที่อ้างอิงด้วยไฟล์จำลอง (sim

11) และไฟล์เครือข่ายตามการเปลี่ยนแปลงข้อมูลการตัดขวางของเส้นทางน้ำ (สร้างใหม่) ด้วย
 โดยแสดงขั้นตอนได้ดังต่อไปนี้

(1) การสร้างข้อมูลการตัดขวาง

ภายหลังจากที่เปิดไฟล์ "sim11" ขึ้นมาแล้วหน้าจอจะเปลี่ยนไปดังรูปที่ รูปที่ 3.1 (1) หากทำการแ ก้ไข (edit) ไฟล์ "sim11" ที่หน้าจอนี้ฐานข้อมูลการตัดขวาง (xns11) จะถูกเรียกเปิดขึ้นมาโดยอัตโนมั ติ เราสามารถคัดลอกเพื่อสร้างข้อมูลการตัดขวางของ topo ID ในฐานข้อมูลการตัดขวางได้โดยการคลิ๊ กขวาไปที่ topo ID (ID การตรวจวัด) ที่ต้องการคัดลอก



รูปที่ 3.1 (1) แสดงการเปิดหน้าจอของ "xns11" จาก "sim11"

AN Incompany and income		ality.				
Contraction (Contraction) Contraction Contraction	(Look 1) aniti Oliki / Likik Jibiki Aniti K 1611					
THE POST AND IN A REAL	and the second second second		00000		2000/02/2007	ADA
						4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4 4.4
P aper-itaddett	1-0-48813	risedan	4.0	· · · · ·		14-+ \$1

รูปที่ 3.1 (2) หลังสร้างฐานข้อมูลการตัดขวาง

(2) การเปลี่ยนแปลงรูปร่างการตัดขวาง

เราสามารถทำการเปลี่ยนแปลงรูปร่างการดัดขวางของข้อมูลการตัดขวางที่สร้างขึ้นมาใหม่ได้ (ซึ่งในที่ นี่คือ 06_Furuk_KE12) โดยการคลิ๊กขวาไปที่หน้าต่างที่ใช้ในการแสดงรูปร่างตัดขวางของหน้าจอทาง ขวามือเพื่อลากเส้นวัดที่ต้องการทำการเปลี่ยนแปลงรูปร่าง (Cross ID หรือระยะทางสะสม)

ในที่นี่กำหนดให้ทำการเปลี่ยนแปลงจากรูปที่ รูปที่ 3.2 (1) การตัดขวางจากระยะทางสะสมอยู่ที่ 11 00.00 เป็นรูปที่ รูปที่ 3.2 (2)



รูปที่ 3.2 (1) หน้าจอแสดงรูปร่างการตัดขวาง (ก่อนการเปลี่ยนแปลง



รูปที่ รูปที่ 3.2 (2) หน้าจอแสดงรูปร่างการตัดขวาง (หลังการเปลี่ยนแปลง

(3) การคำนวณคุณลักษณะของการตัดขวางใหม่

ก่อนที่จะเริ่มทำการคำนวณจำเป็นที่จะต้องทำการคำนวณคุณลักษณะของการตัดขวาง (พื้นที่หน้าตัด, รัศมีไฮดรอลิก (Hydraulic radius)) ที่ได้ทำการเปลี่ยนแปลงไป โดยการเลือกไปที่ "Cross sectio n" → "Apply to all cross section" จากเมนูแล้วทำเครื่องหมายถูกเข้าไปที่ช่อง "Re-calculate al I" ตามรูปด้านล่าง จากนั้นให้กดที่ปุ่ม OK เนื่องจากแม้จะมีข้อมูลการตัดขวางของ topo ID หลายตัวร วมอยู่ในไฟล์ xns11 เพียง 1 ไฟล์ก็ตาม เราสามารถเขียนทับบนไฟล์ xns11 แล้วบันทึกก็ถือว่าเป้นก ารเสร็จสิ้นกระบวนการ

	200		
s 7.71 [1922-010 428 996			
malk			
197-9 Distriction Constant		and the second se	
BF-9 Dell talkrouth FIFLK on	Inar-Manura		
Atta-b	A CAR AND AND A CAR AND A		
BALL CARCELING FORM	En Promo		
OT . THE REAL PROPERTY AND ADDRESS OF THE PROPERTY ADDRESS OF THE	NEDRY'S BOX		
004 - Mail and a mail		- 04 FoRce 8(12 - 1100 0004	
BARDAR BARDARD	NUMBER PARTY AND ADDRESS OF THE PARTY OF THE		
44 MB-07 439-0			
1 (men 2) (men 48	Land and L		14
A CAR Y Y	Call HEAT-2 M	and the second se	11
nat F	anter I Care anter In		1.4
10 F	M [
	COmp Levelse F		-14
amoun -	Papering the		4.4
1002-07 (-0+015)	2 Lorton		-1.4
Dite CT	X Z INSUE semantic actions		11 g
= SULARY CE	100 100 Tes as 100		1.12
- 15.00			4.1
20.00	2.140 2.840 1.000 million - 0.404m		
40.00	2044 CAU 132 F 88 4048 [4.7
	24.508 4.700 1.700 1.700 1.700 1.700 1.700 1.700 1.700 1.700 1.700 1.700 1.700 1.700 1.700 1.700 1.700 1.700 1.		4.4
82.0	Carlos Carl		
102.00	Canalize Par	— ← ดำบากเการตัด	ขาวว่าทั้งหมด
- 05-9	Internet and the second second		
120.00			4.1
O attest others	manage I among and I want	T	4.1
S MEMORIT-INALENCE			
A CARACTER AND	T-S-CER		"Lr-+AI
the second se	and the second se		and the second designed of the second designe

รูปที่ 3.3 (1) หน้าจอแสดงการคำนวณคุณลักษณะของการตัดขวางซ้ำ

(4) ความสัมพันธ์กับไฟล์เครือข่าย

เนื่องจากในไฟล์เครือข่าย (mwk11) นั้นจะมีการตั้งค่า ID การตรววจวัดที่ใช้ในการจำลองอยู่ ดังนั้น เราจึงจำเป็นต้องสร้างไฟล์เครือข่ายขึ้นมาใหม่โดยเปิดไฟล์เครือข่ายเดิมขึ้นมาแล้วทำการเปลี่ยนแปลง ID การตรววจวัดที่ถูกกำหนดค่าไว้ให้เป็น ID การตรววจวัดที่ระบุไว้ในข้อ (2) จากนั้น ให้ทำการบันทึ กไฟล์เครือข่ายที่สร้างขึ้นมาใหม่นี้ด้วยชื่อที่แตกต่างจากเดิม (ในที่นี้กำหนดให้บันทึกด้วยชื่อ 06_Furuk _KEI2.nwk11)



รูปที่ 3.4 การเปลี่ยนแปลงความสัมพันธ์ระหว่างไฟล์เครือข่ายกับข้อมูลการตัดขวาง

(5) การเปลี่ยนแปลงการตั้งค่าไฟล์จำลอง

ให้ระบุไฟล์ "mwk11" ที่ได้ทำการตั้งค่าขึ้นมาจากไฟล์จำลอง (sim11) ในไฟล์เครือข่ายใหม่ที่ถูกสร้ างขึ้นมาตามข้อที่ (5) หากไม่มีการเปลี่ยนแปลงระยะเวลาในการคำนวณแล้วก็ถือเป็นอันเสร็จสิ้นของกา รสร้างไฟล์จำลองการตรวจสอบผลลัพธ์ ในกรณีที่สร้างข้อมูลขึ้นมาอย่างถูกต้องจะปรากฎเครื่องหมายสีเ ขียวบนหน้าจอแสดงสถานะตามรูปที่ รูปที่ 3.5 (2) เพียงเท่านี้เราก็สามารถทำการจำลองและเปรียบเที ยบผลลัพธ์ด้วยโปรแกรม MIKE VIEW ฯลฯ ได้แล้ว

MIKE Zero - 06.0 ファイル(5) 編集(5)	URUK 050904.cim11 表示公 ウインドウ吸 ヘルブロク		× (0) ×
C GF 日 イン・ (C) GF 11411C (middle) モデル、入力 (少た) 入力ファイル、 ネカ1つーク: 補助デーキ・ 境界条件 RO(CSメーネ AD(CSメーネ AD(CSメーネ AD(CSメーネ AD(CSメーネ AD(CSメーネ FC(CSメーク) FC(CSメーク)		<mark>⊐าส</mark> <mark>⊐∽เปลี่ยนแปลงไฟล์เครือข่าย</mark>	
Sor Parameters HDIER RRIgER	ŀ }		
(@#T			Salet Cherts NUM

รูปที่ 3.5 (2) หน้าจอก่อนเริ่มทำการจำลอง



รูปที่ 3.5 (2) หน้าจอก่อนเริ่มทำการจำลอง

4. ขั้นตอนการสร้างต้นแบบของลุ่มน้ำใหม่

4.1 ขั้นตอนการสร้างต้นแบบของลุ่มน้ำใหม่

ในตอนที่ต้องการสร้างต้นแบบของลุ่มน้ำใหม่ด้วยซอฟต์แวร์ MIKE นั้น สามารถทำได้โดยการสร้างไฟล์ จำลองแต่ละไฟล์ขึ้นมาตามลำดับขั้นตอนที่แสดงไว้ด้านล่างนี้และดำเนินการวิเคราะห์จริง



รูปที่ 4.1 ขั้นตอนการสร้างต้นแบบของลุ่มน้ำใหม่

4.2 วิธีการสร้างต้นแบบวิเคราะห์การไหลของน้ำ

(ระบุวิธีการสร้าง NAM แบบง่าย)

(1) Condition

NAM Rainfall-Runoff calculation for <u>2 sub-basins</u> shall be conducted.

Catchment Condition

Sub-basin1	Basin Name: CHAOPHRAYA_U2	Area: 1,894km ²
Sub-basin 2	Basin Name: CHAOPHRAYA_D	Area: 3,844km ²

Boundary Condition

Rainfall	2011 observed data (Averaged data by Thiessen Method)
Evaporation	2011 observed data (Averaged data by Thiessen Method)



รูปที่ 4.2 แผนภาพของอ่างที่จะสร้างแบบจำลอง

- (2) ลำดับการป้อนข้อมูล
 - 1 สร้างแฟ้มข้อกำหนด
 - สร้างและตั้งค่าไฟล์ TS (อนุกรมเวลา)
- (3) การสร้างไฟล์ RR คำนิยาม
 - 1 MIKE Zero [Start Page] $\lceil File \rfloor \rightarrow \lceil New \rfloor \rightarrow \lceil File \rfloor$
 - ② New File→Product Types 「MIKE11」、Documents 「RR Parameters (.rr11)」



รูปที่ 4.3 จากเมนู MIKE 11

③ Insert catchment information (Catchment name and Catchment area) and select Rainfall-runoff model ("NAM")

atchments NAM UHM SMAP Urban FEI	DRift Timeseries	
Catchment Definition		🖻 MIKE Zero - (RRPart - Modified)
Catchment name	ert catchment	Eile Edit Grid View Barameters Layers Basin Work Area Window Help
Rainfall runoff model type	NAM	
Catchment area		Catchments NAM UHM SMAP Urban FEH DR/Ft Timeseries
	Calibration plot	- Catchment Definition
- Catchment Overview		Catchment name Insert catchment CHAOPHRAYA_D
Name Model A	rea #ID	Rainfall runoff model type NAM w
		Catchment area 3844
Insert Catchmen	t 🔀	Celibration plot
		Catchment Overview
Catchment name :	Create as a copy of :	Name Model Area SID
		resider Parties and
CHAOPHRAYA_U2	-DEFAULT-	1 CHAOPHRAYA UZ NAM 1894 0
CHAOPHRAYA_U2 Bainfall runoff model	-DEFAULT	T CHAOPHRAYA UZ NAM 1894 0 2 CHAOPHRAYA JU NAM 3044 0
CHAOPHRAYA_U2 Rainfall runoff model	-DEFAULT-	T CHAOPHRAYA UZ NAM 1894 0 2 CHAOPHRAYA DI NAM 3044 0
CHAOPHRAYA_U2 Rainfall runoff model NAM	-DEFAULT-	T CHAOPHRAYA UZ NAM 1804 0 2 CHAOPHRAYA DI NAM 3044 0
CHAOPHRAYA_U2 Rainfall runoff model NAM ~ Catchment area	-DEFAULT-	T CHAOPHRAYA UZ NAM 1894 0 2 CHAOPHRAYA DI NAM 3044 0
CHAOPHRAYA_U2 Rainfall runoff model NAM ~ Catchment area	-DEFAULT-	T CHAOPHRAYA UZ NAM 1894 0 2 CHAOPHRAYA DI NAM 3044 0
CHAOPHRAYA_U2 Rainfall runoff model NAM Catchment area 1834	-DEFAULT-	T CHAOPHRAYA UZ NAM 1894 0 2 CHAOPHRAYA DI NAM 3044 0
CHAOPHRAYA_U2 Rainfall runoff model NAM Catchment area 1834	IK Cancel	T CHAOPHRAYA UZ NAM 1894 0 2 CHAOPHRAYA DI NAM 3044 0

รูปที่ 4.4 Catchment setting

④ Parameter settings on "NAM" tub (default values were set)

MIKE Zero - [RRPar1 - Modified]	. 🗆
<u>F</u> ile <u>E</u> dit <u>G</u> rid <u>V</u> iew <u>P</u> arameters <u>L</u> ayers <u>B</u> asin Work Area <u>W</u> indow <u>H</u> elp	- 6
) 🖆 🖬 🕹 🛍 🎒 😵 😽	
tchments NAM UHM SMAP Urban FEH DRiFt Timeseries	
rface-Rootzone Ground Water Snow Melt Irrigation Initial Conditions Autocalibration	
CHAOPHRAYA D	
- Storages	
Maximum water content in surface storage Umax 10	
Maximum water content in root zone storage Lmax 100	
- Runoff Parameters	
Overland flow runoff coefficient CQOF 0.5	
Time constant for routing interflow CKTE 1000	
Time constant for routing method flow	
CK12 10	
Root zone treshold value for overland flow TOF 0	
Boot zone treshold value for interflow	
Overview	
Name Umax Lmax CQOF CKIF CK1,2 TOF TIF	
1 CHAOPHRAYA_U2 10 100 0.5 1000 10 0 0	
2 CHAOPHRAYA_D 10 100 0.5 1000 10 0 0	

รูปที่ 4.5 Parameter screen (default values were set)

(5) Boundary conditions (set Time-series file)

🔁 MI	KE Zero - [RRP	ar1 - Modifi	ied]							
🛑 <u>E</u> i	le <u>E</u> dit <u>G</u> rid <u>V</u> i	ew <u>P</u> aramete	rs <u>L</u> ayers <u>B</u> asi	n Work Area	<u>W</u> indow <u>H</u> elp			_ 8 ×		
	🖻 🖬 X 🖻 I	8 5 ?	?							
Catch	ments NAM UH	M SMAP L	Irban FEH DR	iFt Timeserie	es					
							Г	CHAOPHRAY		
CH.	ydrological Timeseri	es for Selected	I Catchment							
	Data type	Weighted timeseries	File name	Item	Browse					
	Rainfall					7716を開く				2 🔀
	Evaporation					7+15-048790	CO DE JNAM		- 0 1 P TP	
						Ridit-27HA 77.0H77 RI 142.0A RI 2021-3 S	Pantal (1901-	2911 #u 0		
						C-C16\$ 17	77(11-8/30)	Ranfal,1981-2011.8%		
							7711.6種類①	Time series (#.dfs0)	×	
r ^C	atchment - MAW Ov	erview				_	Select Item (Br	risd into I item into Constraint	a.bts.	
	Data type Rainfall Station No. Catobe Region Catobe Region ChaophRay/ CHAOPHRAY/ CHAOPHRAY/		✓ Type Weight	ed average	Combinatio		Tale File Type Select Bain	1961-2011 yaintall Equidiotant Time Anio Markow Procedure	<u> </u>	
Ready					No Track	ine				Cancel
										OK.

รูปที่ 4.6 Parameter screen (default value)

6 Save the created file

🔀 MIKE Zero - [RRPar1 - Modified]			
● <u>F</u> ile <u>E</u> dit <u>G</u> rid <u>V</u> iew <u>P</u> arameters <u>L</u> ayers <u>B</u> asin Work	Area <u>W</u> indow <u>H</u> e	alp _ dis	
] D 🖆 🔛 🕺 🖻 💼 🚑 💡 😢			
CatchmentsSaveM UHM SMAP Urban FEH DRiFt Ti	neseries		
Hydrological Timeseries for Selected Catchment		CHAOPHRAY	
Data type Weighted timeseries File name D	tem Browse		
Rainfall C¥CHAOPHRAYA CHAO			
Observed discharge			
	r		
	Save		
	Save As	[
	Name:	RRPar1	.rr11 💌
	Location:	C:¥Documents and Settings¥002381¥My Docum	nents¥MIKE Zero Projects 🛛 📖
	Neter		
Catchment - MAW Overview	Notes:		
Data type Evaporation 🗸 Type Weighted aver-			
Station No.			
Catchm. Item			
2 CHAOPHRAYA			
Save the active document			✓
8			
	Add to Ver	sion Control	OK Cancel

(4) การสร้างไฟล์จำลอง

เมื่อต้องการเรียกใช้แฟ้มข้อกำหนด RR ที่เราได้เคยทำ

ไฟล์ RR คำนิยาม • • RR

- $(1) \quad \mathsf{MIKE} \ \mathsf{Zero} \ [\mathsf{Start} \ \mathsf{Page}] \ \lceil \mathsf{File} \rfloor \rightarrow \lceil \mathsf{New} \rfloor \rightarrow \lceil \mathsf{File} \rfloor$
- ② New File→Product Types 「MIKE11」、Documents 「Simulation(.sim11)」。

MIKE Zero - [Start Page]			
<u>File V</u> iew <u>W</u> indow <u>H</u> elp		_ 8 ×	
New Open Glose Glose Project	Eile Ctrl+N Project from Template Ctrl+Shift+N Project from Folder Ctrl+Shift+F Project from Setup File Ctrl+Shift+U	Project Explorer + ×	
Save Ctrl+S Save All Ctrl+Shift+S Save As Save Project As Template	MIKE		
VCS Control	Madified -	Leading	
Print Setup Print Pre <u>v</u> iew <u>P</u> rint Ctrl+P	New File		
Recent <u>F</u> iles Recent P <u>r</u> ojects Recent Log Files	Product types:		(99)
Options	MIKE 21	Simulation (.sim11) River Network Cross Sections (.nwk11) (.xns11)	
E <u>x</u> it Alt+F4	HIKE 21/3 Integrated Models Hits 21/3 Integrated Models Hits 21/3 Integrated Models Hits 21/3 Integrated Models Hits 21/3 Integrated Models	2 2 2	
		Boundary Condition RR Parameters HD Parameters (.bnd11) (.rr11) (.hd11)	
nstall Examples		A A A	
		AD Parameters ST Parameters FF Parameters (.adi1) (.st11) (.ff11)	
		2 2 3	
		Correlation Analysis Batch Simulation River Channel & Gao Filling (.cof) (.bs11) Design (.rcd11)	
	Simulation		
n a new file			
		ОК	Cancel

		Naimair
MIKE Zero – [NAM.sim11]		
<u>File E</u> dit <u>V</u> iew <u>W</u> indow <u>H</u> elp		_ 8 ×
D 🚅 🖬 % 🖻 💼 🚑 🤋 😢		
Modes Input Simulation Results Start		
Models		
Hydrodynamic Encroachment		
Advection-Dispersion		
Sediment transport		
ECOLab		
Rainfall-Runoff		
Flood Forecast		
Data assimilation		
Ice		
Simulation Mode		
⊙ U <mark>isteady</mark>		
🔘 Quasi steady		
0 %		
ady	No Tracking	.:

(3) เลือกวิธีการคำนวณบนแท๊บ "Model" (ครั้งนี้ให้เลือกเป็น Rainfall-Runoff)

④ Input→RR parameter→「…」→ระบุแฟ้ม

dela Innut Simulation Provite	Start					
Input Files	Start					
Network			Edit			
Cross-sections			Edit			
Boundary data			Edit			
RR Parameters ¥タイチャオプラヤ	I ¥99_workshop¥model¥tutorial_NA1	M¥test.rr11 🥅 🗍	Edit			
HD Parameters			Edit			
AD Parameters			-dit			
ECOLab Param.	ファイルを聞い	(
ST Parameters	77110	観想(中) 😋 tutorial_NAM		- 0	0 17 m	
ST Parameters FF Parameters	7+1,40	制作() の たたのではLNAM の たたのではLNAM	3	¥ 0	0 0 0 0 ·	
ST Parameters FF Parameters DA Parameters	7+160	Alfi Constantia	3	20	Ø 17 🔤	
ST Parameters	77-180	RRD Contorial,NAM		90	¢ ≥ œ.	
ST Parameters	7r1AD	1950 o tutorial NAM		90	¢ ₽ ₪-	
ST Parameters FF Parameters DA Parameters Loe Parameters HD Results	7+1.60	RRD basisina basisii 7		2 0	¢ ₽ @.	
ST Parameters FF Parameters DA Parameters Loe Parameters HD Results RR Results	7+1.60	BRO Destrill		¥ 0	o ⊅ ⊳ œ•	
ST Parameters FF Parameters DA Parameters Loe Parameters HD Results RR Results	771800 Bisterser 92010 71 (1921)			2	1 4 2 0 -	
ST Parameters FF Parameters DA Parameters Ice Parameters HD Results RR Results	7+1440 10.55(1-5-2) 17.201- 17.1 (FB2) 17.1 (FB2)	<pre>### District INAM ####################################</pre>		20) 2 = m-	
ST Parameters FF Parameters DA Parameters Ice Parameters HD Results RR Results	771 AAU 8 15 18 - 21 9 12 19 10 9 12 19 10 9 1 19 11 9 11 11 9 11 11 11 11 11 11 11 11 11 11 11 11 11 11			3 0	, 2 ≥ 00+	

รูปที่ 4.7 หน้าจอการสร้างไฟล์ sim11 (ตั้งค่าการเชื่อมโยงเข้ากับข้อมูลอื่นๆ)

กำหนดระยะเวลาและขั้นตอน (△t) ของการจำลองบนแท๊บ "Simulation" สำหรับระยะเวลาข องการจำลองนั้น หากต้องการใช้ "เวลาเริ่มต้น" และ "ขั้นตอน" ที่ได้ป้อนข้อมูลไปใน TS (อนุ กรมเวลา) แล้ว ก็ให้ทำการคลิ๊กไปที่ "Default" ในส่วนของ "ขั้นตอน" นั้นเราสามารถทำการกำ หนดได้ด้วยตนเอง

Time s Fixed	step type time step	Time ste 30	ep Unit Min. 💊	7		
Period	Simulation	Start)1	Simulation E 2011/12/31	ind	Apply Default)
ST tim	ne step multiplier	1	RR time ste	p multiplier	1	
Initial C	Conditions Type of condition	Hotstar	rt filename	Add to file	Hotstart Date and Time:	
HD:	Steady State	×			1990/01/01 12:00:00	
AD:	Parameter File	×			1990/01/01 12:00:00	
ST:	Parameter File	× .			1990/01/01 12:00:00	
					1000/01/01 10.00.00	202020

รูปที่ 4.8 หน้าจอการสร้างไฟล์ sim11 (ตั้งค่าระยะเวลาในการคำนวณ)

(5) ป้อนข้อมูลที่เกี่ยวข้องกับ "ชื่อไฟล์" และ "ช่วงเวลาในการบันทึก" ผลการคำนวณบนแท๊บ "Result" โดยที่ "ชื่อไฟล์" นั้นสามารถกำหนดให้เป็นอย่างไรก็ได้ ส่วน "ช่วงเวลาในการบั นทึก" นั้น เนื่องจากกำหนดช่วงเวลาไว้ที่ 10 นาที ดังนั้น หากกำหนดให้ "ช่วงเวลาในการ บันทึก" เป็น 1 แล้วจะเป็นการบันทึกทุกๆ 10, 20, 30... นาที หากกำหนดให้ "ช่วงเวลาใ นการบันทึก" เป็น 2

<u>F</u> ile <u>E</u> dit	<u>V</u> iew <u>W</u> indow <u>H</u> elp					_
) 🖻 🖬	X 🖻 🖻 🎒 💡 🕅	•				
odels Inpu	t Simulation Results s	Start				
- Results -						_
- Results -	Filename	St	toring Frequency	Unit:		
- Results HD:	Filename	St	toring Frequency	Unit: Time step	~	
- Results HD: AD:	Filename	St	toring Frequency	Unit: Time step Time step	*	
- Results HD: AD: ST:	Filename	St	toring Frequency	Unit: Time step Time step Time step	*	

รูปที่ 4.9 หน้าจอการสร้างไฟล์ sim11 (ตั้งค่าระยะเวลาในการคำนวณ)

(6) สุดท้ายให้ทำการตรวจสอบสัญญาณที่แท๊บ "Start" ในกรณีที่สัญญาณเป็นสีเขียวแสดงว่าสา มารถทำการคำนวณได้ แต่ในกรณีที่สัญญาณเป็นสีแดงจะปรากฎข้อความดังที่ได้แสดงไว้ด้า นล่างนี้ขึ้นมา ให้ทำการแก้ไขข้อผิดพลาดตามที่ได้แสดงไว้ในข้อความแล้วสัญญาณจะเปลี่ย นกลับมาเป็นสีเขียวดังเดิม

🔁 MIKE Zero – [Untitled1 – N	lodified]	
● <u>F</u> ile <u>E</u> dit <u>V</u> iew <u>W</u> indow <u>H</u> e	lp	_ 8 ×
□ ☞ 🖬 ¾ 🖻 🛍 🖨 '	? N?	
Models Input Simulation Resu	Its Start	
Validation status		
Run Parameters		Validate
		Start
Validation managed		
0 %		D 14
Ready	No	Tracking

⑦ บันทึกการตั้งค่าทั้งหมดแล้วคลิ๊กที่ปุ่ม "Start"

Untitled1.sim11	
Models Input Simulation Results Start	
Validation status	
Run Parameters	Validate
HD parameters	Start
	Start
Validation messages	
100.00	
2013/07/09 4:04:09 Completed	1113000 0 seconds

(8) ผลลัพธ์ของอัตราการไหลและระดับนั้นจะถูกบันทึกไว้ในไฟล์ res11

JICA Study Team

4.3 วิธีการสร้างตันแบบวิเคราะห์เส้นทางน้ำ

สำหรับเนื้อหาในส่วนนี้จะอธิบายถึงวิธีการสร้างต้นแบบวิเคราะห์เส้นทางน้ำด้วยวิธีที่ง่ายที่สุดโดยการตั้งค่า เส้นทางน้ำที่เป็นเส้นตรงและมีการตัดขวางเป็นระยะทางสั้นๆ

(1) เงื่อนไข

ความยาวของเส้นทางน้ำ 2,000 ม. การตัดขวาง แนวตั้ง 10 ม. แนวนอน 100 ม. แนวลาด 1/2000

เงื่อนไขขอบเขด พื้นผิวน้ำตรงบริเวณปากทางเข้า 5 ม. อัตราการไหลของน้ำจากต้นน้ำ 1000ม.³/วึนาที



รูปที่ 4.10 ภาพแสดงเส้นทางน้ำที่เป็นต้นแบบ

- (2) ลำดับการป้อนข้อมูล
 - สร้างรูประนาบของเส้นทางน้ำ (เครือข่าย)
 - สร้างไฟล์ภาพตัดขวาง
 - ③ สร้างและตั้งค่าไฟล์ TS (อนุกรมเวลา)
 - ④ สร้างและตั้งค่าเงื่อนไขขอบเขต
 - (5) ตั้งค่าพารามิเตอร์ HD
 - 6 สร้างไฟล์จำลอง

ให้ทำการเชื่อมต่อไฟล์ที่สร้างตามลำดับข้อที่ 1-5 เข้ากับไฟล์หนึ่งไฟล์ (sim11) "การจำลอง" แล้ว ทำการคำนวณ หากขาดไฟล์ใดไปไฟล์หนึ่งแล้วจะไม่สามารถทำการคำนวณได้ ในไฟล์ sim11 จะต้อง ประกอบด้วยไฟล์ต่างๆดังต่อไปนี้

- (3) การสร้างรูประนาบของเส้นทางน้ำ (เครือข่าย)
 - $(1) \quad \mathsf{MIKE Zero} \ [\mathsf{Start} \ \mathsf{Page}] \rightarrow \ \ulcorner \mathsf{File} \ \rrbracket \rightarrow \ \ulcorner \mathsf{New} \ \rrbracket \rightarrow \ \ulcorner \mathsf{File} \ \rrbracket$

② New File→Product Types 「MIKE11」、Documents 「River Network(.nwk11)」



รูปที่ 4.11 จากเมนู MIKE 11

JICA Study Team

 กำหนดให้ค่าพิกัดขอบเขตของรูประนาบเป็นค่าเริ่มต้นได้ (เนื่องจากสามารถแก้ไขได้ในภาย หลัง)

Workspace Area an	d Map Projection	n	×
Workspace Area Co	pordinates		OK
	X:	Y:	<u> </u>
Lower left corner:	0	0	Cancel
Upper right corner:	100000	100000	Help
Map Projection			
Туре:	NON-UTM		
	Inon of M		

④ กรอกสาขาลงในระบบพิกัด

ในที่นี้กำหนดให้สร้างเส้นทางน้ำเป็นเส้นตรง จากฟังก์ชั่นการอ่านค่าพิกัดระนาบของเส้นวัดจาก ภายนอกจึงสามารถสร้างรูปร่างของเส้นทางน้ำตามขนาดจริงได้



เริ่มแรกให้ทำการพล๊อตจุดด้วย "Add point" บน Tool bar (ในเวลานี้จะพล๊อตจุดกี่จุดก็ได้)

รูปที่ 4.12 หน้าจอการตั้งค่าสาขา 1

ถัดไปจะต้องทำการเชื่อมโยงจุดด้วย "Define Branch" บน Tool bar หรือจะทำการคลิ๊กแล้ว ลากจากจุดขอบหนึ่งมายังอีกจุดขอบหนึ่งก็ได้

หมายเหตุ) ต้องลากเส้นจากปลายน้ำขึ้นไป (เนื่องจากระยะทางสะสมจะเริ่มนับจาก 0 ที่ปลาย น้ำ)



รูปที่ 4.13 หน้าจอการตั้งค่าสาขา 2
5 การใส่พิกัดความยาวจริงของเส้นทางน้ำ

คลิ๊กขวาที่จุดขอบ → 「Point Properties」→ChainageType「User Defined」 ในที่นี้กำหนดให้ขอบของตันน้ำเป็น 2,000 ม. และปลายน้ำเป็น 0 ม.



รูปที่ 4.14 การตั้งค่าระยะทางสะสมของสาขา

6 Branch definition

 $\lceil View \rfloor \rightarrow \lceil Tabular View \rfloor$

 $\mathsf{Overview} \ \lceil \mathsf{Network} \rfloor \ \rightarrow \ \lceil \mathsf{Branches} \rfloor$

Definitions→Flow Direction 「Positive」 → 「Negative」 (งนี้ขึ้นอยู่กับการแสดงผลของ MIKE11 ซึ่งโดยทั่วไปแล้วหากระยะทางสะสมมีการเพิ่มขึ้นจะกำหนดให้ทิศทางไหลลงมาด้านล่า ง) 、และป้อนข้อมูลชื่อสาขาและ ID การตรวจวัด

ในที่นี้จะกำหนดให้ชื่อสาขาเป็น "RIVER1" และ ID การตรวจวัดเป็น "2003" บันทึก

ak 🖬 🛛		Project Explorer		N 2/2/10 5- 1	1						
	-	Protect Map		all a la la la la							
100000 -	1	Start Page		Untitle	5						
1		Simulation History									
1		Tabular View	Ctrl+T								
- 1		Longitudinal Profile View	Ctrl+L								
90000		Query Last Profile Search			() a large						
1		Network									
1		Boundary									
80000		Hydro Dynamic Parameter	MIKE Zero - [Net1:2 - Modified]							
		Advection Dispersion Paran	🍺 File Edit \	/iew Network Lay	ers Settings	Window Help					
		Sedment Transport Param		B A 4 7 M							
1	1	Swap Profile	Duenieu								
70000	1	Draw Grid	Network		Definitions						
- 1		Zoom In	Points (7)	Branch Name	Topo ID Upstr. Ch.	Downstr.Ch.	Flow Direction	Maximum dx Branch Type		
1		Zoom Out		s (1)	RIVER1	2003 0	2000	Negative 👻	10000 Regular		
		Previous Zoom	Routing	eduator linko	Connections						
60000		Next Zoom	Grid points	iuwater inks		Branch Name Chainage			Edit Link Channel Parame	ters	
1		Pan			Upstream						
1		Remesh			Downstream						
50000		Export Graphics									
1	*	Double Buffer			Overview						
1	1	Fixed Aspect Ratio				Name		Topo ID	Upstr. Ch.	Downstr. Ch.	Flov
- 1		Toolbars			1	RIVER1	2003		0	2000	Nega
40000 -	1	Status Bar									

รูปที่ 4.15 การตั้งค่าชื่อสาขา, ID จากรายการ

(4) การสร้างไฟล์ภาพตัดขวาง

- $(1) \quad \mathsf{MIKE} \ \mathsf{Zero} \ [\mathsf{Start} \ \mathsf{Page}] \rightarrow \ \ulcorner\mathsf{File} \ \rrbracket \rightarrow \ \ulcorner\mathsf{New} \ \rrbracket \rightarrow \ \ulcorner\mathsf{File} \ \rrbracket$
- ② New File→Product Types 「MIKE11」、Documents 「Cross Sections(.xwk11)」

ile <u>V</u> iew <u>W</u> indow <u>H</u> elp			_ & ×	
New	File Cti	rl+N		
Open Close	<u>P</u> roject from Template Cti Project from Folder Cti	rl+Shift+N rl+Shift+F	oject Explorer 🛛 🕺 🗙	
Glose Project	Project from Setup File Ct	rl+Shift+U		
Save All CtrI+S Save All CtrI+Shift+S Save As Save Project As Template		MIKE C		
VCS Control	•	Line and Lin		
Print Setup Print Preview Print Ctrl+P	Maainea	New File		
Recent <u>F</u> iles	E.	Product Types	Documents:	88
Recent P <u>r</u> ojects Recent Log Files		🖽 🧰 MIKE Zero	2 2	
Ontions		MIKE 11		
Exit Alt+F4		MIKE 3	Simulation (.sim11) River Network (.nwk11)	(.xns11)
		MIKE 21/3 Integrated Models LITPACK	2 2	2
			Boundary Condition BB Parameters	HD Parameters
		in mike one	(.bnd11) (.rr11)	(.hd11)
			A A	2
tall Examples	New Project		AD Parameters ST Parameters	FF Parameters
			(.ad11) (.st11)	(.ff11)
				3
			Correlation Analysis Batch Simulation	River Channel
			& Gap Filling (.cgf) (.bs11)	Design (.rcd11)
		Cross Sections		
ana file				OK Cancal
		1		UN CONCO

____ ป้อนข้อมูลชื่อสาขาและ ID การตรวจวัดที่ได้กรอกไปก่อนหน้านี้

River name	Topo ID	Chanage	Cross section ID
		6,00	-
Sector Type	Pladui Tjpe		- 0
Coordinates	Ŷ	Conection of X coor	Monthological Model
Let 0.	10	Calculate angle	Level of Divide
Right 0	0	Angle 0	0.
Tanvensi Debbukon Resistance Type	High/Low Row zone Relative residence ID 1	X Z Resist	Mark
Tranversid Dielbukon Resistance Type Insert. Delete. Renamy Copy. Combin Salact	High/Lovi flow con Relative workforce D I http://www.second.com http://wwwww.second.com http://www.second.com http://www.second.com	X Z Resist	Mark

In	sert branch	
	River name	RIVER1
	Topo ID	2003
	First chainage	0
	Cross section ID	
		OK Cancel

④ ป้อนพิกัด 4 จุดของการตัดขวาง

กำหนดให้ค่าพิกัดของภาพตัดขวางของต้นน้ำ (0 ม.) เป็นดังนี้

- 1. ซ้ายบน (X , Z) = (0 , 10)
- 2. ซ้ายล่าง (X , Z) = (0 , 0)
- 3. ขวาล่าง (X , Z) = (100 , 0)
- 4. ขวาบน (X , Z) = (100 , 10)



รูปที่ 4.16 การสร้างไฟล์ภาพตัดขวาง

หมายเหตุ) หากกด "Tab" ค้างไว้ จะสามารถทำการเพิ่มค่าพิกัดได้

(5) ในที่นี้ให้คลิ๊กไปที่ตัวเลขบนแท๊บ "Mark" ที่ทำเครื่องหมายวงกลมล้อมรอบสีแดงไว้ แล้วทำ การเลือกค่าพิกัดในแต่ละจุด

ซึ่งในกรณีนี้

- 1. ซ้ายบน (X , Z) = (0 , 10) • ขอบด้านซ้าย
- 2. ข้ายล่าง (X,Z) = (0,0) ••••ความลึกที่สุด
- 3. ขวาล่าง (X , Z) = (100 , 0) •••ขอบด้านขวา

MIKE Zero – [tutorial	lxms11]				
File Edit View Ord	oss-Sections Setti	ings Window Help			
	B 🕾 🦹 🕅				
River name	Topo ID	Chainage	Cross section ID	[meter]	RIVER1 - 2003 -
RIVER1	2003	0.00		10-0	
Section Type	Radius Type		Datum	_]	
Upen	 Resistance Radi 	us	• •		
Apply X	Y	Correction of X coor	Morphological Model	9	
Left 0	0	Calculate angle	Level of Divide		
Right 0		Angle 0		8	
Transversal Distribution	High/Low flow zones	Left high flow		7	
Besistance Tune	Belative resistance	 Earthightion 1 Bight bigh flow 1 	Low flow		
	ID I	X Z Resis	t Mark	6-	
EIVER1	1	0.000 10.000 1.00		evel 1	
0.00	3	100.000 0.000 1.00	0 3	5 5	
	4	100.000 10.000 1.00		Wat	
			Colored Markense		
		(Select Markers		
			📝 (1) Left levee bank	(3) Right levee bank	
			(4) Left low flow bank	(5) Right low flow ban	k
			(o) Leit coordinate marker	(7) Hight coordinate in	laikei
			🔲 (2) Lowest point		
			User marker 0		
				1	

รูปที่ 4.17 การตั้งค่าดำแหน่งของขอบ

6 แทรกภาพตัดขวางของความยาวของแม่น้ำเข้าไปทีละภาพ

MIKE Zero – [tutorial.xns11 – Modified]						
🍞 File Edit View C	ross-Section	s Settings W	indow He	lp		
] 🗅 🚅 🖬 % 🗈	B & 1	? N ?				
River name RIVER1	Topo ID 2003		Chainage 200.00		Cross section ID	
Section Type	Radius T	уре			Datum	
Open	▼ Resistar	nce Radius			• 0	
Coordinates Apply X Left 0 Right 0	Y 0 0	Correc Argle	ction of X co oply Calculate an 0	ngle	Morphological Mode Divide Section Level of Divide	
Resistance numbers Transversal Distribution	High/Low flo	w zones 🔻 Le	ft high flow	1		
Resistance Type	Relative resi	stance 🔻 Ri	ght high flow	w 1	Low flow 1	
	ID I	X	Z	Resist.	Mark	
■ RIVER1 ■ 2003 		1 0.000 2 0.000 3 100.000 4 100.000	10.100 0.100 0.100 10.100	1.000 1.000 1.000 1.000		
คลิกขวาเพื่อคัดลอก) รูปที่ 4	18 การเพิ่มภ า	าพตัดขวา	ئ		

เราสามารถคัดลอกโดยการคลิ๊กขวาไปที่ช่อง "0.00" → Copy → แล้วทำการเปลี่ยนแปลงค่ าระยะทางสะสมได้

ในครั้งนี้จะกำหนดให้มีภาพตัดขวางทุกๆ 200 ม. จากดำแหน่ง 0.00 ม. ถึง 2,000 ม. และค วามสัมพันธ์ของความลาดเอียงอยู่ที่ 1/2000 โดยจะทำการเพิ่มค่าแกน Z ขึ้นไปทีละ 0.1 ม. จ นถึงต้นน้ำ หากเสร็จสิ้นแล้วให้ทำการบันทึก

(ฟังก์ชั่นที่เป็นประโยชน์)

ในตอนที่ต้องการกำหนดขอบด้านซ้าย, ความลึกสูงสุดและขอบด้านขวาของ "Mark" หากคลิ๊กไปที่จุดบน ภาพตัดขวางแล้ว จะสามารถเลือกค่าพิกัดเหล่านั้นได้

Select \rightarrow Mark \rightarrow Define

โดยวิธีนี้จะเป็นวิธีที่ง่ายที่สุด นอกจากนี้

เพียงแค่คลิ๊กขวาไปที่ด้านบนของภาพตัดขวาง → Clear ก็จะสามารถแสดงภาพตัดขวางเฉพาะส่วนได้



รูปที่ 4.19 วิธีการแสดงภาพตัดขวางแต่ละประเภท

- (5) การสร้างและตั้งค่าไฟล์ TS (อนุกรมเวลา)
 - $(1) \quad \mathsf{MIKE} \ \mathsf{Zero} \ [\mathsf{Start} \ \mathsf{Page}] \rightarrow \ \ulcorner\mathsf{File} \ \rrbracket \rightarrow \ \ulcorner\mathsf{New} \ \rrbracket \rightarrow \ \ulcorner\mathsf{File} \ \rrbracket$
 - ② New File→Product Types 「MIKE Zero」、Documents 「Time Series(.dfs0)」→Blank Time Series

<u>File V</u> iew <u>W</u> indow <u>H</u> elp		_ 8 ×
New	Eile Ctrl+N	
Open	Project from Template Ctrl+Shift+N	Project Explorer
<u>U</u> lose	Project from Folder Ctrl+Shift+F	4 A
Glose Project	Project from Setup File Ctrl+Shift+U	
Save Ctrl+S	MIKE MIKE	
Save All Ctrl+Shift+S		
Save As		
Jave Huject As Template		
VCS Control	Modified 🛩 Location	
Print Setup		
Print Preview		
Print Otri+P	R	
Recent <u>Files</u>		
Recent Los Files		
A.C.	3	
Uptions		
Exit Alt+F4		
	3	
netall Evamplee	New Project Open Project Delete Project	
	MIKE Zero 2011 Copyright @ 1997-2010 DHI	@p.,. @f.,. @t., @M.,.]
	MIKE Zero 2011 Copyright © 1997-2010 DHI All Rights Reserved	₽ ₽ T № M
1 a new file	MIKE Zero 2011 Copyright © 1997-2010 DHI All Rights Reserved No Tracking	er
n a new file	MIKE Zero 2011 Copyright © 1997-2010 DHI All Rights Reserved No Tracking	C P O F Ø T O M
n a new file New File	MIKE Zero 2011 Copyright © 1997-2010 DHI All Rights Reserved No Trackine	e P e F J T M
n a new file New File	MIKE Zero 2011 Copyright © 1997-2010 DHI Al Rights Reserved No Tracking	<u>کې کې ۲ کې ۲</u> New Time Series
n a new file New File roduct Types: D	MIKE Zero 2011 Copyright © 1997-2010 DHI All Rights Reserved No Tracking	Image: Prime Series
n a new file New File roduct Types: D P D MIKE Zero	MIKE Zero 2011 Copyright © 1997-2010 DHI All Rights Reserved No Tracking	New Time Series
n a new file New File oduct Types: D D D D MIKE Zero MIKE 21	MIKE Zero 2011 Copyright @ 1997-2010 DHI All Rights Reserved No Tracking	New Time Series
n a new file New File oduct Types: D D D MIKE Zero MIKE 11 MIKE 21 MIKE 21	MIKE Zero 2011 Copyright © 1997-2010 DHI Al Rights Reserved No Tracking	New Time Series Blank Time Series From Ascii File Image: Series Image: Series </td
n a new file New File oduct Types: D	MIKE Zero 2011 Copyright © 1997-2010 DHI All Rights Reserved No Tracking	Image: Prime Series Image: Prime Seri
na new file New File oduct Types: D MIKE Zero MIKE 11 MIKE 21 MIKE 21 MI MI MI MI MI MI MI MI MI MI	MIKE Zero 2011 Copyright © 1997-2010 DHI AIR Rights Reserved No Trackine No Trackine	P F Image: Series
n a new file New File Poduct Types: D MIKE Zero MIKE 11 MIKE 21 MIKE 3 MIKE 3 MIKE 51/3 Integrated Mod LITPACK MIKE 51/2 Integrated Mod	MIKE Zero 2011 Copyright © 1997-2010 DHI Al Rights Reserved No Tracking No Tracking	New Time Series From Ascii File Templates
n a new file New File oduct Types: D file MIKE 2ero MIKE 21/3 Integrated Mod LITPACK MIKE FLOOD MIKE FLOOD	MIKE Zero 2011 Copyright @ 1997-2010 DHI All Rights Reserved No Trackine	New Time Series From Ascii File Templates
a new file New File Deduct Types: D MIKE Zero MIKE 21 MIKE 21 MIKE 3 MIKE 3 MIKE 3 MIKE 3 MIKE 3 MIKE 3 MIKE 5 MIKE 5 MIKE FLOOD MIKE SHE	MIKE Zero 2011 Copyright © 1997-2010 DHI All Rights Reserved No Tracking	Image: Prime Prim
n a new file oduct Types: D MIKE Zero MIKE 11 MIKE 21 MIKE 21/3 Integrated Mod LITPACK MIKE FLOOD MIKE SHE	MIKE Zero 2011 Copyright © 1997-2010 DHI Al Rights Reserved No Trackine	Image: Provide state st
A a new file New File oduct Types: D MIKE Zero MIKE 11 MIKE 21 MIKE 21 MIKE 21 MIKE 213 MIKE 213 MIKE 213 MIKE 51 MIKE 51 MIK	MIKE Zero 2011 Copyright © 1997-2010 DHI All Rights Reserved No Tracking	New Time Series From Ascii File Templates
n a new file New File roduct Types: D MIKE 2ero MIKE 21 MIKE 21 MIKE 21 MIKE 21 MIKE 21/3 Integrated Mod LITPACK MIKE FLOOD MIKE SHE Ime Series	MIKE Zero 2011 Copyright @ 1997-2010 DHI All Rights Reserved No Trackine Documents:	New Time Series Blank Time Series From Ascii File Templates
n a new file New File roduct Types: D MIKE Zero MIKE 21 MIKE	MIKE Zero 2011 Copyright @ 1997-2010 DHI All Rights Reserved No Trackine Documents: Documents: Documents: Documents: Circle Series (.dfs1) Data Manager (.dfsu,.mesh,.df	New Time Series From Ascii File From Ascii File Templates
n a new file New File roduct Types: D MIKE 2ero MIKE 11 MIKE 21/3 Integrated Mod LITPACK MIKE 21/3 Integrated Mod LITPACK MIKE FLOOD MIKE SHE me Series	MIKE Zero 2011 Copyright © 1997-2010 DHI Al Rights Reserved No Tracking	New Time Series Blank Time Series From Ascii File Image: Series From Ascii File Image: Series Templates
n a new file roduct Types: D MIKE Zero MIKE 11 MIKE 21 MIKE 21/3 Integrated Mod LITPACK MIKE FLOOD MIKE SHE me Series	MIKE Zero 2011 Copyright © 1997-2010 DHI Al Rights Reserved No Trackine Documents: Documents: Documents: Cifes Series (.dfs1) Data Manager (.dfsu, mesh, .df Cifes Series (.dfs2) Cifes Series (.dfs2)	New Time Series From Ascii File Templates
n a new file New File aduct Types: MIKE 2ero MIKE 11 MIKE 21 MIKE 21 MIKE 21/3 Integrated Mod LITPACK MIKE FLOOD MIKE SHE me Series	MIKE Zero 2011 Copyright © 1997-2010 DHI Al Rights Reserved No Trackine No Trackine Cocuments: Cocu	New Time Series From Ascii File Templates
n a new file New File roduct Types: D MIKE 2ero MIKE 11 MIKE 21 MIKE 2 MIKE 21/3 Integrated Mod LITPACK MIKE FLOOD MIKE SHE Ime Series	MIKE Zero 2011 Copyright @ 1997-2010 DHI All Rights Reserved No Trackine Documents: Documents: Documents: Corres (dist) Profile Series (.dfs1) Data Manager (.dfs1) Corres (.dfs2) Critic Series (.dfs2)	New Time Series From Ascii File From Ascii File Templates

③ กำหนด "หัวข้อไฟล์" และ "ประเภทของแกน"

 $\label{eq:constraint} \mbox{Title} \mbox{Title} \mbox{Axis Type} \mbox{Fquidistant Calendar Axis} \label{eq:constraint}$

④ กำหนด "เวลาเริ่มต้น" และ "ช่วงเวลา"

สำหรับจำนวนครั้งนั้นให้กำหนดด้วยดัวเลขที่แสดงจำนวนครั้งในการคำนวณตามช่วงเวลา เนื่องจากในครั้งนี้กำหนดให้ช่วงเวลาเป็น 1 ชั่วโมงและจำนวนครั้งเป็น 10 ครั้ง ดังนั้น ระยะเว ลารวมทั้งหมดที่ทำการคำนวณจะเป็น 10 ชั่วโมง

Properties			
General Informa	tion		ОК
Title:	Title		Cancel
Axis Information			Help
Axis Type:	Equidistant Calendar Axis 🗢		
Start Time:	2013/07/08 19:04:09		
Time Step:	0 [days]		
	01:00:00 [hour:min:sec]		
	0.000 [fraction of sec.]		
No. of Timestep	0.000 [fraction of sec.]	s Units: underined	
No. of Timestep Item Information	0.000 [fraction of sec.] s 10 Axi	s Units: undefined	5
No. of Timestep Item Information	0.000 [fraction of sec.] s 10 Axi	s Units: undefined Unit	5
No. of Timestep Item Information	0.000 [fraction of sec.] 5 10 Axi Type Water Level	s Units: undefined Unit meter	
No. of Timestep Item Information	0.000 [fraction of sec.] s 10 Axi Water Level Discharge	s Units: undefined Unit meter m^3/s	
No. of Timestep Item Information	0.000 [fraction of sec.] s 10 Axi Type Water Level Discharge	s Units: undefined Unit meter m^3/s	
No. of Timestep Item Information	0.000 [fraction of sec.] s 10 Axi Water Level Discharge	s Units: undefined Unit meter m^3/s	
No. of Timestep Item Information	0.000 [fraction of sec.] s 10 Axi Water Level Discharge	s Units: undefined Unit meter Tm^3/s	

รูปที่ 4.20 หน้าจอสำหรับป้อนข้อมูลพื้นฐานของอนุกรมเวลา

ข้อมูลรายการ

ให้ป้อนข้อมูล "ประเภท" และ "ชื่อ" ของเงื่อนไขขอบเขต สำหรับชื่อนั้นจะกำหนดให้เป็นอย่ างไรก็ได้ แต่หากเลือกที่ประเภทของข้อมูลแล้ว (ในครั้งนี้เลือกให้ q → อัตราการไหลและ h → ระดับน้ำ) หน่วยจะถูกกำหนดโดยอัตโนมัติ

หมายเหตุ) หลังจากที่กดปุ่ม OK แล้ว สามารถทำได้แก้ไขได้โดยเลือกไปที่ "Edit" →" Pro perties" ถัดไปให้ป้อนข้อมูลเงื่อนไขขอบเขตของจำนวนครั้ง

เราสามารถป้อนข้อมูลจำนวนครั้ง (ของอัตราการไหล, ระดับน้ำ ฯลฯ) ในไฟล์ Excel แล้วทำ การ Copy & Paste ได้ (เพียงแค่ใช้ปุ่ม Ctrl เท่านั้น)

	Time	1:h [meter]	2:q [m^3/s]
0	2013/07/08 19:04:09	5	1000
1	2013/07/08 20:04:09	4.5	950
2	2013/07/08 21:04:09	4.5	1050
3	2013/07/08 22:04:09	5	1100
4	2013/07/08 23:04:09	5.1	1075
5	2013/07/09 0:04:09	4.9	1020
6	2013/07/09 1:04:09	5	975
7	2013/07/09 2:04:09	5.5	1100
8	2013/07/09 3:04:09	5	1050
9	2013/07/09 4:04:09	5.6	1150

หากเสร็จสิ้นแล้วให้ทำการบันทึก

- (6) การสร้างและตั้งค่าไฟล์เงื่อนไขขอบเขต
 - $(1) \quad \mathsf{MIKE} \ \mathsf{Zero} \ [\mathsf{Start} \ \mathsf{Page}] \rightarrow \ \lceil \mathsf{File} \rfloor \rightarrow \ \lceil \mathsf{New} \rfloor \rightarrow \ \lceil \mathsf{File} \rfloor$
 - ② New File→Product Types 「MIKE11」、Documents 「Boundary Condition(.bnd11)」



- (3) ป้อนข้อมูล "ชื่อสาขา" และ "ระยะทางสะสม" แล้วเลือกไปที่ "Boundary data item" (ใ นครั้งนี้จะทำการป้อนค่าเฉพาะระดับน้ำและอัตราการใหลเท่านั้น)
- ④ File/Value→ คลิก □→ การเลือก 「TS1.dfs0」 → คลิก 「Constraints Info.」 →สีเขียว

	Boundary Description	Boundary Type	Branch Name	Chainage	Chainage	Gate ID	Boundary ID
	Open	Water Level	RIVER1	Û	0		
_		-					
	houndariog						
	boundaries						
	boundaries						
	boundaries	et: fych-	Increal		_		
_	Data Type TS Type	File / Value	TS Info		_		
	Data Type TS Type Water Leve TS Fil	File / Value	TS Info		_		
	Data Type TS Type Water Leve TS Fil	File / Value	TS Info		-		
	Data Type TS Type Water Leve TS Fil	File / Value	TS Info		_		
,	Data Type TS Type Water Leve TS Fil	File / Value	TS Info		_		

2ファイルを開く					×
ファイルの場所(1):	🐌 tutorial		- 00 =		
(ka	名前	日付時刻	種類	サイズ	
最近表示した場所	TS1.dfs0	2013/07/08 17:04	TimeSeries.Doc	2 KB	
デスクトップ					
ライブラリ					
1247-4-					
	・ ファイル名(N):	m TS1.dfs0	÷	l K	
ネットワーク	ファイルの種類(T): [Select Item Period]	Time series (*.dfs0) Info. Item Inf <mark>o.</mark> Constraints Info			
	Status	Constraints		-	
	Item	Request No. 1			
	Item	type=Water Level			
					Cancel
	1				OK

รูปที่ 4.21 วิธีการสร้างไฟล์เงื่อนไขขอบเขต

	Boundary Type	Branch name	Chainage	File/Value
1	Water Level	RIVER1	0.000000	ดำแหน่งที่มีข้อมูล TS
2	Inflow	RIVER1	2000. 000000	ดำแหน่งที่มีข้อมูล TS

5 เลือกทำทุกรายการ (แต่ในครั้งนี้จะกำหนดแค่เฉพาะระดับน้ำกับอัตราการไหลเท่านั้น)

6 บันทึก

- (7) การตั้งค่าพารามิเตอร์ HD
 - $(1) \quad \mathsf{MIKE Zero} \ [\mathsf{Start} \ \mathsf{Page}] \rightarrow \ \lceil \mathsf{File} \rfloor \rightarrow \ \lceil \mathsf{New} \rfloor \rightarrow \ \lceil \mathsf{File} \rfloor$
 - ② New File→Product Types 「MIKE11」、Documents 「HD parameters(.hd11)」



(3) เปลี่ยน Manning (M) บนแท๊บ "Bed Resist." ให้เป็น Manning (n)

lood Plain Resist. Deer Det	Marks Encroachment	Heat Balance	Stratification	Time Series Output	Maps	Ground	water Leakag
initial Wind Bed Resist	Bed Resist. Toolbox	Wave Approx	Default Value:	s 🛛 Quasi Steady	Reach I	eneths	Add. Outpu
Approach Uniform Section Tripple zone Global Values Resistance Number: 0.033	Resistar M	nce Formula anning (n)	-				
Local Values							
Local Values	ame	Chainage	Resistanc	1			_

④ หากมีข้อมูลอื่นที่นอกเหนือไปจากระดับน้ำและอัตราการไหลของน้ำแล้ว ก็ให้ใส่เครื่องหมาย ถูกลงในช่องที่ต้องการ

Initial wind bed resist. Bed resist. Bed resist. Bed resist. Total Structures Valority Image: Structures Image: Structures Image: Structures Valority Image: Structures Image: Structures Valority Image: Structures Discharge Image: Structures Volume Image: Structures Flow Width Image: Structures Volume Image: Structures Valority Image: Structures Valority Image: Structures Volume Image: Structures Flood Area Image: Structures Mass Error Image: Structures Lateral Inflows Image: Structures Water level slope Image: Structures Energy level Image: Structures Bed shear stress Image: Structures Groundwater head Image: Structures	Flood Plain Resist.	User Def. Mar	ks Encroachment	Heat Balance	Stratification	Time Series Output	Maps Gr	oundwater Leakag
Hor Q points Hand Q points Total Structures Velocity Image: Constructures Image: Constructures Image: Constructures Cross Section Area Image: Constructures Image: Constructures Image: Constructures Flow Width Image: Constructures Image: Constructures Image: Constructures Image: Constructures Radius Image: Constructures Image: Constructures Image: Constructures Image: Constructures Conveyance Image: Constructures Image: Constructures Image: Constructures Image: Constructures Conveyance Image: Constructures Image: Constructures Image: Constructures Image: Constructures Conveyance Image: Constructures Image: Constructures Image: Constructures Image: Constructures Flood Area Image: Constructures I	Initial wind	Ded Resist.	Bed Resist. Toolbox	wave Approx	Detault value	es Quasi Steady	Reach Lengt	ns Hou. Surp
Velocity Discharge Discharge Discharge Orass Section Area Flow Width Radius Radius Resistance Conveyance Flow Aumber Volume Flow Area Fl	a parte fire	H or Q points	s Hand Q points	Total Struct	ures			
Discharee V Cross Section Area V Flow Width C Radius V Resistance C Conveyance C Froude Number V Volume V House	Velocity	6	- ITTA	10				
Cross Section Area Image: Cross Section Area Flow Width Image: Cross Section Area Resistance Image: Cross Section Area Conveyance Image: Cross Section Area Froude Number Image: Cross Section Area Volume Image: Cross Section Area Flood Area Image: Cross Section Area Flood Area Image: Cross Section Area Volume Image: Cross Section Area Flood Area Image: Cross Section Area Volume Image: Cross Section Area Flood Area Image: Cross Section Area Flood Area Image: Cross Area Flood Area	Discharge	1						
Flow Width Image: Compare Compar	Cross Section Are	sa 🕅						
Radius Image: Conveyance Conveyance Image: Conveyance Froude Number Image: Conveyance Volume Image: Conveyance Flood Area Image: Conveyance Flood Area Image: Conveyance Accumulated Mass Error Image: Conveyance Lateral Inflows Image: Conveyance Water level slope Image: Conveyance Energy level slope Image: Conveyance Bed shear stress Image: Conveyance Groundwater head Image: Conveyance	Flow Width							
Resistance Image: Conveyance Conveyance Image: Conveyance Froude Number Image: Conveyance Volume Image: Conveyance Volume Image: Conveyance Volume Image: Conveyance Flood Area Image: Conveyance Accumulated Mass Error Image: Conveyance Lateral Inflows Image: Conveyance Vater level slope Image: Conveyance Energy level slope Image: Conveyance Bed shear stress Image: Conveyance Groundwater head Image: Conveyance	Radius	121						
Conveyance Froude Number Volume Flood Area Bass Error Mass Error Lateral Inflows Vater level slope Energy level slope Energy level slope Energy level Groundwater head Time Step	Resistance							
Froud Number Volume Volume Flood Area Mass Error Mass Error Lateral Inflows Vater level slope Energy level Bed shear stress Groundwater head Time Step	Conveyance	(2)						
Volume Image: Constant of the co	Froude Number	10						
Flood Area Image: Compare the compar	Volume							
Mass Error Image: Comparison of the	Flood Area							
Accumulated Mass Error Image: Comparison of the compar	Mass Error	E						
Lateral Inflows Water level slope Energy level slope Energy level Bed shear stress Groundwater head Time Step	Accumulated Mas	s Error						
Water level slope Energy level Energy level Editer stress Groundwater head Time Step	Lateral Inflows	10						
Energy level slope Constraints Stress Stress Constraints Stress Stres	Water level slope	(E)						
Energy level Bed shear stress Groundwater head Time Step	Energy level slope							
Bed shear stress Groundwater head Time Step	Energy level	10						
Groundwater head	Bed shear stress	- E						
Time Step	Groundwater head							
	Time Step							

รูปที่ 4.22 การตั้งค่าผลลัพธ์เพิ่มเดิ

5) บันทึก

```
(8) การสร้างไฟล์จำลอง
```

ในที่นี้จะทำการเชื่อมโยงไฟล์ที่สร้างขึ้นมาทั้งหมดเข้าไว้ด้วยกัน

```
เครือข่าย • • • nwk11
ภาพตัดขวาง • • • • • • xns11
เงื่อนไขขอบเขต • • • • • bnd11 TS (อนุกรมเวลา) • • • • dfs0
พารามิเตอร์ HD • • HD11
```

- $(1) \quad MIKE Zero [Start Page] \rightarrow \lceil File \rfloor \rightarrow \lceil New \rfloor \rightarrow \lceil File \rfloor$
- ② New File→Product Types 「MIKE11」、Documents 「Simulation(.sim11)」



(3) เลือกวิธีการคำนวณบนแท๊บ "Model" (ครั้งนี้ให้เลือกเป็น Hydrodynamic) หากกำหนดโห มดการจำลองให้เป็น "Unsteady" จะเป็นการคำนวณการใหลแบบไม่คงที่มิติเดียว แต่หาก กำหนดให้เป็น "Steady" จะเป็นการคำนวณการไหลแบบไม่คงที่ (ครั้งนี้ให้เลือกเป็น Unste adv)

Models	
Hydrodynamic Encroachment Advection-Discursion Sediment transport ECOLab Rainfall-Runoff Flood Forecast Data assimilation Lee	
Simulation Mode	

4 กำหนดสถานที่ตั้งของไฟล์ในช่องเครือข่าย, ข้อมูลการตัดขวาง, เงื่อนไขขอบเขต, พารามิเ
 ตอร์ HD บนแท๊บ "Input" จากนั้นให้เลือกไปที่ "···" แล้วทำการเปิดไฟล์ขึ้นมา.

Input Files			_		
Network	C:¥work¥chao¥tutoria	al¥tutorial.nwk.11	Edit		
Cross-sections	C:¥work¥chao¥tutoria	al¥tutorial×ns11	Edit		
Boundary data	C:¥work¥chao¥tutoria	al¥Bnd1bnd11	Edit		
RR Parameters					
HD Parameters		OO + OS (C:) + work + cheo + t	utorial • +, no:	wallo被用	3
AD Parameters		盤理・ 新しいフォルター		准• 🖬	
ECOLab Param.		会話 お気に入り 国 名前	日付時期	理論	-
ST Parameters		● 9720-ト ● HDP#1.hd11 ■ デスクトップ	2013/07/08 18:16	HDPsr.Document	
FF Parameters		2. 株式表示した場所			
DA Parameters					
Ice Parameters		E F#3X>H			
		こ ピクチャ			
HD Results		E 574			

รูปที่ 4.23 หน้าจอการสร้างไฟล์ sim11 (ตั้งค่าการเชื่อมโยงเข้ากับข้อมูลอื่นๆ)

กำหนดระยะเวลาและขั้นตอน (△t) ของการจำลองบนแท๊บ "Simulation" สำหรับระยะเวลาข องการจำลองนั้น หากต้องการใช้ "เวลาเริ่มต้น" และ "ขั้นตอน" ที่ได้ป้อนข้อมูลไปใน TS (อนุ กรมเวลา) แล้ว ก็ให้ทำการคลิ๊กไปที่ "Default" ในส่วนของ "ขั้นตอน" นั้นเราสามารถทำการกำ หนดได้ด้วยตนเอง

	tion Period					
Time :	step type	Time step	Unit			
Fixed	l time step 🔹 👻	10	Min.	+		
	Simulation Start		Simulatio	on End		
Period	2013/07/08 16:4	1:05	2013/07	7/08 16:42:	35	Apply Default
ST tin	ne step multiplier		RR time	step multi	plier	1
nitial (Conditions				Add to	n Hotstart
	Type of condition	Hotstart fi	lename	100	file	Date and Time:
HD:	Steady State 👻				10	1990/01/01 12:00:00
AD:	Paramèter File —					1990/01/01 12:00:00
ST:	Parameter File +				0	1990/01/01 12:00:00
	Parameter File -	1			10.	1990/01/01 12:00:00

รูปที่ 4.24 หน้าจอการสร้างไฟล์ sim11 (ตั้งค่าระยะเวลาในการคำนวณ)

(5) ป้อนข้อมูลที่เกี่ยวข้องกับ "ชื่อไฟล์" และ "ช่วงเวลาในการบันทึก" ผลการคำนวณบนแทบ "Result" โดยที่ "ชื่อไฟล์" นั้นสามารถกำหนดให้เป็นอย่างไรก็ได้ ส่วน "ช่วงเวลาในการบั นทึก" นั้น เนื่องจากกำหนดช่วงเวลาไว้ที่ 10 นาที ดังนั้น หากกำหนดให้ "ช่วงเวลาในการ บันทึก" เป็น 1 แล้วจะเป็นการบันทึกทุกๆ 10, 20, 30... นาที หากกำหนดให้ "ช่วงเวลาใ นการบันทึก" เป็น 2

lodels I	nput	Simulation	Results	Start			
Result	s	Ellowana			Staving Eventuaries	Data	
HD:		Results			1	Time step	*
AD:						Time step	-
ST:		1			1	Time step	-
RR		1			1	Time step	-

รูปที่ 4.25 หน้าจอการสร้างไฟล์ sim11 (ตั้งค่าช่วงเวลาในการแสดงผล)

6 สุดท้ายให้ทำการตรวจสอบสัญญาณที่แท๊บ "Start" ในกรณีที่สัญญาณเป็นสีเขียวแสดงว่าสา มารถทำการคำนวณได้ แต่ในกรณีที่สัญญาณเป็นสีแดงจะปรากฎข้อความดังที่ได้แสดงไว้ด้า นล่างนี้ขึ้นมา ให้ทำการแก้ไขข้อผิดพลาดตามที่ได้แสดงไว้ในข้อความแล้วสัญญาณจะเปลี่ย นกลับมาเป็นสีเขียวดังเดิม

Untitled1 - Modified	
lodels Input Simulation Results Start	
Validation status	
e Run Parameters HD parameters	Validate Start
Validation messages	

⑦ บันทึกการตั้งค่าทั้งหมดแล้วคลิ๊กที่ปุ่ม "Start"

Untitled1.sim11	
Models Input Simulation Results Start	
Validation status Run Parameters LD parameters	Validate
	Start
Validation messages	
100 % 2013/07/09 4:04:09 Completed	1113000 0 seconds

(8) ผลลัพธ์ของอัตราการไหลและระดับนั้นจะถูกบันทึกไว้ในไฟล์ res11 ส่วนผลลัพธ์ที่เพิ่มเติมขึ้ นมานั้นจะถูกบันทึกไว้ในไฟล์ HDAdd.res11

(9) การตรวจสอบผลลัพธ์

ทำการตรวจสอบผลลัพธ์ของ MIKE11 ด้วย MIKE VIEW

$(1) \quad \mathsf{MIKE View} \rightarrow \lceil \mathsf{File} \rfloor \rightarrow \lceil \mathsf{Open} \rfloor$

ประเภทไฟล์ 「MIKE11DFS-files(*.res11)」 →การแต่งตั้ง 「Results.res11」





รูปที่ 4.26 หน้าจอเริ่มแรกของ MIKE VIEW

(2) ราสามารถแสดงภาพดัดขวางได้ด้วย Select profile และแสดง Hydrograph ได้ด้วย Sel ect gridpoint หลังจากที่คลิ๊กไปที่ไอคอนแล้วภาพที่ทารพล๊อตด้วยเส้นในแนวระนาบ (รูปเค รือข่าย)



รูปที่ 4.27 หน้าจอแสดงระนาบของ MIKE VIEW

3 สำหรับ Hydrograph นั้น เราสามารถเรียกดู Hydrograph ของแต่ละภาพตัดขวางได้จาก
 "List" โดยที่ไม่ต้องทำพล๊อตจุด 「select gridpoint」 → 「List」

		×
Resul	ts.res11	•
		-
List	Cancel	
	Resul	Results.res11 List Cancel

- (4) หากทำเครื่องหมายถูกเข้าไปที่ช่องรายการแล้ว แล้วคลิ๊กไปที่ Draw Graph Hydrograph จะปรากฏขึ้นมา
- โนสภาพที่หน้าจอยังแสดงผลภาพดัดขวางและ Hydrograph อยู่นั้น หากคลิ๊กไปที่ Hydro graph แล้ว ภาพตัดขวางจะเปลี่ยนแปลงไปตามเส้น Hydrograph เราสามารถตรวจสอบกา รเคลื่อนไหวได้โดยการคลิ๊กไปที่ไอคอน "Run" ที่อยู่ด้านบน

File	Results/res11					Close
ltem	Water Level	-	Num	ber of Decimals	3 E Apply	
	Water Level	Minimum	Maximum	Min.Time	Max.Time	Draw Graph
1	RIVER1 0.00	4.500	5.600	8-7-2013 20:04:00	9-7-2013 04:04:00	chamber and
2	RIVER1 200.00	4.636	5.695	8-7-2013 20:13:59	9-7-2013 04:04:00	Show values
3	RIVER1 400.00	4.767	5.785	8-7-2013 20:13:59	9-7-2013 04:04:00	The second second
4	RIVER1 600.00	4.895	5.872	8-7-2013 20:13:59	9-7-2013 04:04:00	Show Selected
5	RIVER1 800.00	5.022	5.959	8-7-2013 20:13:59	9-7-2013 04:04:00	Show All
6	RIVER1 1000.00	5.147	6.047	8-7-2013 20:13:59	9-7-2013 04:04:00	U Dribby en
7	RIVER1 1200.00	5.270	6.139	8-7-2013 20:13:59	9-7-2013 04:04:00	(A.A.
8	RIVER1 1400.00	5.392	6.234	8-7-2013 20:13:59	9-7-2013 04:04:00	Find
9	RIVER1 1600.00	5.511	6.331	8-7-2013 20:13:59	9-7-2013 04:04:00	Find Next
10	RIVER1 1800.00	5.630	6.429	8-7-2013 20:13:59	9-7-2013 04:04:00	(mariable
tt -	RIVER1 2000.00	5.746	6.526	8-7-2013 20:13:59	9-7-2013 04:04:00	
						Select h-points
						Select Q-points
						Select All
						Clear Selection







รูปที่ 4.29 หน้าจอตรวจสอบผลลัพธ์ด้วย MIKE VIEW (ภาพตัดขวางแนวตั้ง)

JICA Study Team

4.4 วิธีการพัฒนาโมเดลจำลองเพื่อการวิเคราะห์น้ำไหลท่วม

การคำนวณการไหลของน้ำท่วมด้วย MIKE จะเป็นการรวมผลคำนวณแบบไม่กำหนดทางน้ำไหลด้วย MI KE11 เข้ากับผลการคำนวณแบบสองมิติแนวระนาบด้วย MIKE21

ขั้นตอนการคำนวณเพื่อคัปปลิง (รวมผล) MIKE11 กับ MIKE21 แสดงดังผังภาพด้านล่าง นอกจากนั้น หากระดับน้ำของทาง

น้ำไหลที่คำนวณด้วย MIKE11 สูงกว่าระดับความสูงของเชื่อนกั้นน้ำ จะใช้ MIKE FLOOD ช่วยในการ นำผลการคำนวณแบบสองมิติแนวระนาบของ MIKE21 ไปลิงค์ MIKE11 กับ MIKE21

(1) กำหนดค่าโคออดิเนตแนวระนาบของทางน้ำไหล

การคำนวณด้วย MIKE11 เป็นการคำนวณแบบหนึ่งมิติ ไม่เกี่ยวข้องกับค่าโคออดิเนต อย่างไรก็ตาม ในการวิเคราะห์น้ำไหลท่วม ต้องกำหนดค่าตำแหน่งตามเงื่อนไขทางภูมิศาสตร์ ดังนั้น ให้ป้อนค่าโคออ ดิเนตแนวระนาบด้วย Network Editor ดังตัวอย่างต่อไปนี้ ทั้งนี้ ให้ป้อนค่าโคออดิเนตด้วย "ค่าที่ให้ม า" ของเน็ตเวิร์ก (เพียง copy&paste จากไฟล์เอ็กเซล) แล้วใช้ "รูทบรันช์อัตโนมัติ (auto route br anch)" เพื่อจับคู่แต่ละค่าโคออดิเนตเข้าด้วย จะทำให้คล่องตัวมากขึ้น





รูปที่ 4.30 กำหนดตำแหน่งทางน้ำไหลลงใน MIKE11

JICA Study Team

(2) การสร้างไฟล์ Bathymetry (ไฟล์แสดงกริดความสูงพื้นผิว)

MIKE 21 จะนำข้อมูลความสูงพื้นผิวที่จำเป็นต่อการคำนวณการไหลท่วมของน้ำจากไฟล์ Bathymet ries ในที่นี้จะอธิบายวิธีการแปลงจากไฟล์ ASCII เป็นไฟล์ Bathymetries ตามขั้นตอนดังต่อไปนี้



รูปที่ 4.31 ขั้นตอนการสร้างไฟล์ Bathymetry

(1) MIKE ZERO $file \rightarrow fnew$ Bathymetries

New File					×
Product Types:	Documents:				0 0 0-0- 0-0- 0-0-
MIKE Zero MIKE 21 MIKE 21 MIKE 3 MIKE 3 MIKE 5 MIKE 5 MIKE 5 MIKE FLOOD MIKE FLOOD MIKE SHE	Time Series (.dfs0) Plot Composer (.plc) Climate Chan Mesh Genera	Profile Series (.dfs1) Result Viewer (.rev) ECO Lab (.ecolab) Data Extraction	Data Manager (.dfsu,.mes Bathymetries (.batsf) Auto Calibrati MIKE Zero Toolbox (.mzt)	Grid Series (.dfs3,.dfs2) Animator (.mza) EVA Editor (.eva)	
Bathymetries					
				ок	Cancel

รูปที่ 4.32 หน้าจอตั้งต้นในการสร้าง Bathymetry

- (2) ตั้งแกนโคออดิเนตของ Working Area ซึ่งเป็นพื้นที่สำหรับรับค่าข้อมูลความสูงพื้นผิว โดย
 ให้ Easting เป็นค่าตั้งต้นของแกนแนว x และNorthing เป็นแกนแนว y
- (3) ดังแสดงในผังภาพด้านล่างจะมี Working Area ขึ้นมา แล้วใช้ Background Manageme nt เพื่อทำการคำนวณค่าโคออดิเนตของความสูงจากพื้นผิว (ค่าความสูงของแกน X และ Y จากแนวระนาบ) เพื่อใช้เป็นข้อมูลของกริดต่อไป



รูปที่ 4.33 หน้าจอของ Working Area

JICA Study Team

กด Import ที่ Background Management

7 - Manfillind 000 - Bal	2	
000		
000		
000		
	Background Management	8
000	Backgourd Images	_inpost
000	and the second	Delete OK
		Cancel
000		
000		_
80000 -80000	-70000	~
		5

รูปที่ 4.34 หน้าจอของการป้อนค่าโคออดิเนต

(5) นำเข้าข้อมูล XYZ

ファイル(E)	編集(E)	検索(S)	表示①	マクロ(M)	ツール①	ウィンドウ(W)	ヘルプ(日)							
1-31	1 5 8	-	1 8 4	a al a	\$ 5		22 1	- 2 5		4				. gr-
		10		30			,5 0, 1 .	6 0,	 710 1			, ,9 0, , , ,	1.00.	
1	-8721	08.141	-15	621.690		0.000+								
2	-8721	08.141	-15	667.917		0.000+								
3	-8721	08.141	-15	714.144		0.000*								
4	-8721	08.141	-15	760.370		0.000+								
5	-8721	08.141	-15	806.597		0.000*								
6	-8721	08.141	-15	852.823		0.000+								
7	-8721	08.141	-15	899.050		0.000+								
8	-8721	08.141	-15	945.276		0.000+								
9	-8720	08.141	-15	991.503		0.000+								
10	-8720	08.141	-16	037.729		0.000*								
11	-8721	08.141	-16	083.956		0.000*								
12	-8721	08.141	-16	130.183		0.000+								
13	-8721	08.141	-16	176.409		0.000*								
14	-8721	08.141	-16	222.636		0.000+								
15	-8721	08.141	-16	268.862		0.000*								
16	-8720	08.141	-16	315.089		0.000+								
17	-8721	08.141	-16	361.315		0.000+								
18	-8720	08.141	-16	407.543		0.000+								
19	-8721	08.141	-16	453.770		0.000+								
20	-8721	08.141	-16	499.996		0.000+								
21	-8721	08.141	-16	546.223		0.000+								
22	-8721	08.141	-16	592.449		0.000+								
23	-8721	08.141	-16	638.676		0.000*								
24	-8720	08.141	-16	684.902		0.0004								
25	-8721	08.141	-16	731.129		0.000*								
26	-8720	08.141	-16	777.355		0.000+								
27	-8721	08.141	-16	823.582		0.000*								
28	-8720	08.141	-16	869.809		0.000+								
29	-8721	08.141	-16	916.035		0.000+								
30	-8721	08.141	-16	962.262		0.000+								
31	-8721	08.141	-17	008.488		0.000+								
32	-8721	08.141	-17	054.715	_	0.000+								
1000 /37 h	198001 %	 7.			-				 	Text 1	行 1.桁	日本時((71, JIS)	_
2000 7 FT P	1000011	10								IDAL I	ear-rad	L (+)80 1.	AL DION	
	L													
	y	X		Y		Z								



12 Middlied			
0000	Bat2		
5000			
0000			
5000			
		Background Management	
0000		C.SahariSTUDYSmile11\050810\couple001\m21\Vacybar.rec 19	nport
5000			OK
			Cancel
0000			
5000			

6 เมื่อ Import เสร็จแล้ว หน้าจอจะขึ้นตามผังภาพด้านล่าง

รูปที่ 4.36 หน้าจอหลังจากอ่านข้อมูลความสูงพื้นผิวได้แล้ว

จากนั้น ใช้ข้อมูลความสูงพื้นผิวมาสร้างข้อมูลความสูงพื้นผิวตามกริด (Bathymetry) ด้วย
 Bathymetry Management





- (8) กด new
- (9) ป้อนค่าโคออดิเนตของข้อมูล ASCII ที่เตรียมไว้ดังนี้

	Define Bathymetry Area		
	Geographical Position of Origin O Deg., Min., Sec. O Decimal Deg. P Deg., Min., Sec. Longitude 0 [deg] Latitude 0	rojection Cancel	
	Congress O [deg] Canada O 0 [min] 0 [[0	[tog] [0 [deg] [0 [deg] [10 [deg] [1	
ขนาดกริด	Decimal Deg. Longitude: 0 [deg] Latitude: 0	[deg] [deg] [deg] [m]	
	Easting: -87508.1 [m] Northing: -461	131.64 [m] จำนวน	เกริด
	Grid Spacing A DX: 56.542270660* [m] DY: 46.226829528* [m] Y points:		

รูปที่ 4.38 ตั้งค่าขนาดและจำนวนของกริด

🕕 หากตั้งค่าได้ถูกต้องแล้ว หน้าจอจะเปลี่ยนเป็นเช่นนี้





(1) คลิกเลือก Import from background เพื่อเลือกพื้นที่ของข้อมูลความสูงพื้นผิว



(1) คลิกเลือก Import From Background อีกครั้ง

 เปิด Bathymetry Management อีกครั้งหนึ่ง แล้วคลิก Interpolate เพื่อแทรกค่าความสูง ของพื้นผิว

Disthymetry list:		Maria
Ar (-87508.100,-46131.640)	Flotated 0,000 Dect	Dawr.
		Edit.
		Delete
		Egpost
		(nterpolate
		0K
		Cancel

(1) หากแทรกค่าได้แล้ว ให้ Export จะได้ไฟล์นามสกุล OOO.dfs2 มาเก็บไว้



(15) นำไฟล์ที่ได้มา (ในด้วอย่างนี้คือ 001.dfs2) ลากมาครอบที่ mikezero จะได้เส้นแสดงควา มสูงต่ำของพื้นที่ดังรูปข้างล่าง



รูปที่ 4.40 ผังภาพเส้นแสดงความสูงต่ำของพื้นที่สูงต่ำในกริดจากไฟล์ dfs2

(16) เลือกพื้นที่นอกพื้นที่คำนวณ กำหนดเป็น True Land ซึ่งมีวิธีการเลือกหลากหลาย ในตัวอ ย่างนี้ จะเลือกค่าอัตโนมัติที่เข้ากับเงื่อนไข

Neviestion_	19		2		67 =	2191	Battyne	try	*		
Syncronice Ta	to to Mac									-	100
Church and Te	in to Tib-										
Sec. 1	D Pa	iche .									
Deselect	1	and a	-								
Load Selection	Po Po	lvien									
Save Selectio	n_ Fee	ctangla		176	177	178	179	120	191	182	183
			100	-995.59	-285.99	-609.99	-999.95	-999.99	-459.99	-999.99	-999.00
interpolation_	Ve	12	-907	-999.90	-939.99	-599.99	-999.99	-999.99	-959.99	-599.99	-999.99
Einer_	All		406	-999.99	-959.99	-139.99	-399.94	-999.59	-999.39	-999.99	-399.58
Set Value	X6	1424	405	-999.99	-959.99	-\$99.99	-399.54	-995.59	-939.39	-338.99	-399.98
Galculator_		CONTRACTOR OF CONTRACTOR	404	-992.99	-959.99	-999.99	-\$99.95	-999.39	-992.59	-539.99	-999.99
Calculate Stat	tistics.		400	-999999		-999.99	-399.99	-393.33	-999 99	-309.99	
100000000000000000000000000000000000000			401	-900.90	-059.99	-999.99	-100.05	-000.00	-000.00	-699.99	-999.99
Cigpy File into	Data_		+00	-223.52	-222.99	-199.99	-355.03	-999.99	-010.00	-100.00	-999.99
Ctop			662	-993.59	-933.39	-133.9.99	-395.99	-055333	-999.99	-\$59.99	-999.95
1		Eastnymetry (m)	399	-997.99	-999.99	-\$99.99	-999.99	-999.99	-999.99	-999.99	-999.99
		Above 14	00 297	-999.59	-999.99	-199.99	-299.95	-999333	-919.99	-599.99	-999.99
1		1200- 14	296	-999.99	-939.99	-499.99	-999.99	-999.99	-\$\$9.99	-999.99	-999.99
	· · · · · · · · · · · · · · · · · · ·	1000 - 12	214	-999399	-999.99	~99.99	-999.98	-999.99	-959.99	-599.99	-999.99
		800_10	00 294	-929.99	-959.99	-999.99	-399.99	-995.59	-999.99	-999.99	-499.99
1	- A.	600- 8	00 293	-955.39	-933.39	-339.99	-339.39	-393.33		-129 39	-399.93
		400- 6	00 941	-000.00	-059 99	-000 00	-100.00	-000-00	-022 50	-999.99	-000.00
-		200- 4	00 110 1	-000.00	-052.00	-999.99	-300.05	-999.99	-000 00	-200.00	-000.00
		0) 2	00 289	-999.59	-999.99	-999.99	-399.95	-999959	-999.99	-599.99	-999.99
1	and the second second	.200 .	0 384	-993.59	-999.9.99	-111.00	-099.09	-96839	-030.09	-100.00	-999.09
4		-4002	00 747	-999.99	-939.39	-999.99	-299.99	-953.33	-999.99	-\$99.99	-999.59
		-6004	00 216	-999.92	-283.38	-\$35.55	-999.95	-985.55	-999.99	-228.92	-36575
1		-008-	00 045	-999.99	-259.99	-939,99	-999.95	-999.99	-999.99	-999.99	-399.99
-		-1006 -0	00 084	-999.99	-019.99	-999.99	-999.95	-99939	-999.99	-999.99	-999.95
		.120010	00 1363	-999.99	-959.99	-120.00	-399.99	-999.99	-99999	-999.99	-399.99
		-140012	00 2112	-999.99	-059.99	-699.99	-100.00	-995 59	-939.99	-129.99	-100.01
		Below -14	210	-999 60	-959.99	-990.09	-399.99	-999 59	-929 59	-599.99	-999.95
	******	Undefined	Vol.e 379	-999 59	-959 99	-999.99	-999.99	-999.99	-953 59	-999 99	-999.99
0 100	200		378	-902.99	-059.99	-999.99	-999.99	-099.99	-999.99	-699.99	-999.99
(Orid spice)	no 56 5473 mete	rð.	377	-999.99	-999.99	-999.99	-999.99	-99939	-999.99	-\$99.99	-999.99
222200000000000	In an There is a second	D I mar D	376	-999,69	-\$99.99	-999.99	-399.99	-96933	-010.09	-099.99	-999.00
2003/01/01 03	10.00, Time step.	0, Layer, 0	279	-999.99	-999.99	-233.25	-229.92	-989.93	-999.99	-233.38	-999.99
			274	-999.97	-9\$9.99	-999.99	-999.92	-999.99	-999.99	-999.99	-35878
			373	-968.83	-949.99	-999.99	-999.95	-99939	-930.99	-999.99	-999.99
			372	-000 60	-019 99	-999.99	-999.96	+999.59	-099 99	-999 99	
			1110	-99839	-939.99	-939.99	-399.99	-399.99	-999.99		-399.33

รูปที่ 4.41 วิธีการเลือกพื้นที่ต้องการ-1

🕕 ป้อนค่าที่ได้เลือกไว้





18 ไฮไลท์พื้นที่ที่เลือกไว้



รูปที่ 4.43 วิธีการเลือกพื้นที่ที่ต้องการ-3

 สามารถแปลงค่าแบบเหมารวมของพื้นที่ที่เลือกไว้ได้ด้วย SetValue เลือกพื้นที่นอกพื้นที่คำ นวณ



รูปที่ 4.44 วิธีการ replacement หน้าจอตาข่าย

ข ในตัวอย่างนี้กำหนดให้ค่าของ Trueland เท่ากับ 2000 ฉะนั้นค่าที่เราจะเลือกนั้นต้องเป็นค่ าที่สอดคล้องกับ Bathymetry ของพื้นที่ที่อยู่ในกลุ่มเป้าหมายและไม่ส่งผลกระทบใดๆ (ตัวอ ย่าง : ถ้าค่า Maximun Bathymetry เท่ากับ 420 m ก็ให้ใช้ 500 เป็นต้น)



รูปที่ 4.45 **การตั้งค่า** True Land

21 ให้คลิก Edit →Costom block จะขึ้นหน้า Edit Costom Block ให้ตั้งค่า True Land ดรงส่วน M21_Misc ของ Element4

Therefore and a local sector of a					15	250	251	252	253
Dourymeuy	Cution Blocks				2000	2000	2000	2000	200
	- Ivin	Name	M21 Mine		90.989	1082.048	1086.896	1090.319	1084.61
		(19) CT	The state of the s		10.002	1003344	1001966	1068.315	1062.92
600 -	Display Settings	Tupe:	float	-	93335	1000.0	1020100	1021205	1000.44
	M'M Mart		Thus,	-	05270	1040490	990,4700	900.7703	392.74
	out Change	Number of elements	7		201.00	1001104	975 7105	681 2014	400.75
and the second				-	DE CEA	1003160	1001.098	DERREEL	004.06
500 -		Valuez	Element	Value	61.076	1046145	1025 425	9571091	
s			1	0	78177	1055504	1040738	198 925	250.30
2			7	0	57656	1053 94.0	100743	1005.032	10401
2			A	-900	02034	1028123	1024769	1007478	.074.89
· 400 -			4	2000	67457	8086 366	995 5745	963,6631	967 49
lä l			2	0	0.1174	1001.180	965,5192	955,2443	939.30
10			9	0	46.55.4	9353129	925.1792	9108197	9102
			12	0	9.0206	910.6106	903.9257	906.4761	189.94
≧ 300 -			-		2 2662	903.0112	\$77.4092	876,6436	167.93
la l					5.0522	913,7589	977.3994	047,9404	020.95
8 1					7.52.47	9072809	875,8525	848.832	\$15.89
2					01695	899.0%2T	871.4399	840,1481	08.37
© 200 -					1 6478	\$71.9059	\$432546	8092447	782.86
and the second sec			,		9 4635	042 6202	0001606	2647411	765 75
					7.0594	001.6222	792.6-312	769.051	190'01
			CIK.	Carcel	2.3018	817.4536	780.5724	759.8652	353.05
100 -			un		10021	807 878	768.8789	754,5615	760.62
					100 761	196.9112	7615718	751.4243	747.04
	-150 0	678 201 201 201	2 861 266	PROPERTY.	841 0223	208 21 42	761.6374	742.5024	747.92
and the second se	Desow +150	411 374.007	A STERITA	874 0315	0400135	706 5101	753.6437	7431508	747 75
ñ -	Undefined Value	630 164145	8 8716812	844 6002	#308877	789 9407	754 3502	7471114	746.78
0 100 200		629 453,044	0 0711264	0546027	0143487	777 0879	751 #460	745.0947	746 59
(Grid spacing 56 5423 poeter		825 841140	2 0548074	830,6771	792.6443	7639033	747.4514	745.3273	747.17
found attacted and an an and a	1	327 127.557	1 834.0773	808.3162	775.6406	765,2726	745.0254	745.7906	747.32
2002/01/01 0:00:00, Time step: 0	Laver 0	836 815.13	6 811.111	786.231	7829404	748.3326	744.8362	745,7387	746.98
		\$25 799.654	4 107.9771	767.5894	7537972	744.0590	7445327	745.6763	746.77
		\$24 701.040	7 759.1099	757.3699	747.7929	749.4966	744.4222	745,7227	746.21
		523 758.900	1 159.7104	751.1235	744.6557	743,8507	745.3017	745,881.2	746.35
		622 762.4	7 757.3358	747.8973	742.8931	744,4732	748.82.79	749,7905	747.9
		Add T TRADIA	R TRATARO	THE OTHER	140 0004	744 0174	TASATO	148 1078	1808
		12							

รูปที่ 4.46 ตั้งค่า Costom Block ด้วยการข้ Costom Block

- (3) การสร้างแบบจำลอง Mike21
 - 1 MIKE21 FLOW MODEL จาก file MIKE ZERO \rightarrow "new"

no Tion Wildon	Loip				- Č
New	,	<u>F</u> ile	Ctrl+N		
Open Close		Project from Tem Project from Fold	plate Ctrl+Shift+N er Ctrl+Shift+F	Project E	xplorer д
Save Save All Save As Save Project As Temp	Ctrl+S Ctrl+Shift+S late			~~~	
VCS Control	•	-	New File		
Print Set <u>up</u> Print Pre <u>v</u> iew <u>P</u> rint	Ctrl+P		Product Types:	Documents:	
Recent <u>F</u> iles Recent P <u>r</u> ojects Recent Log Files			MIKE 21 MIKE 3 MIKE 21/3 Integrated Mo LITPACK	Flow Model Flow Model FN (.m21) (.m21fm)	1 Spectral Waves
Op <u>t</u> ions	•			Boussinesq Nearshore	Elliptic Mild
E <u>x</u> it	Alt+F4]		Parabolic Mild Slope Wav Sediment T	Curvilinear Flow Mo
	IIII				1
stall Examples		New P		MIKE 21 Toolbox (.21t)	
			MIKE 21 - a 2D modelling system fo	r estuaries, coastal waters and open	seas
					OK Cancel
					(1)

รูปที่ 4.47 <mark>หน้าจอแรกในการสร้างไฟล์</mark> MIKE21

Z MIKE Zero - 001,m21	
Eile Edit View Bun Window Help	
D 😂 🖬 ½ 🖻 ඬ 🧔 💡 💅	
関 001.m21	
MIKE 21 Flow Model Balls, Praymeters Consider Simulation Period Boundary Cold start Number of seeas Hot start Additional information Mappingeting Buthymetry Buthymetry Provider Buthymetry Number of seeas Image: Provide and Dry Buthymetry Buthymetry <t< td=""><td></td></t<>	
Total number of errors = 0	
Validation /	

2 ให้เลือกไฟล์ Bathymetry ที่สร้างเอาไว้ตอนแรก

รูปที่ 4.48 การเชื่อมโยงกับ Bathymetry

③ คีย์เวลาลงไป

➡ MIKE Zero = 001.m21	
Eile Edit View Bun Window Help	
Image: Simulation Period Image: Simulat	
wf. Boundary Time step range: 0 900 - wf. Source and Sink Time step intervat: 2 - wf. Mass Budget - -	
Image: Simulation start date: 1990/01/01 12:00:00 Image: Mydrodynamic Parameters Simulation start date: Image: Mydrodynamic Parameters Simulation end date:	
Image: Warring Period Warring Period Image: Warring Period First: Last: Image: Warring Period Time step range: 0 Image: Warring Period 0 0	
Courant Number Max Courant No: 0 Area: 0	
A Avigation	
Total number of errors = 0	
Validation	



MIKE Zero - IGHAOPHRAYA	m21 - Modified]				
File Edit View Run Window	v Help				
n 2 dix r ria 9	N2				
INKE 21 Flow Model I = ✓ Basic Parameters	Resistance				
Module Selection					
Simulation Period	Values given as: Manning number 🔻				
Boundary					
Mass Budget	Format Value	Filename	Pier res.	Filename	16.00
Flood and Dry	Excluded		view][view
Initial Surface Elevati	Donstant Data file				
🖌 🗹 Eddy Viscosity					
✓ Resistance ✓ Wave Radiation					
Wind Conditions					
< >					
Navigation					
Tatal number of summer = 0					
Total number of errors - 0					
Validation Simulation	n /				
Ready	No Tracking	l .		Mode	

④ ตรงส่วน MIKE21 จะขึ้นหน้าต่าง ให้ทำการ manning M (ที่เชื่อมโยงกับ n)



รูปที่ 4.50 ค่าสัมประสิทธิ์ความขรุขระของที่ราบน้ำท่วม
(5) เนื่องจากไฟล์ output ใช้สูตรคำนวณเดียวกันกับไฟล์ความสูงของพื้นดินและไฟล์ dfs2 จึง ต้อง save กันแยกกันกับไฟล์ Bathymetry

Ohen Par. Weller 184							
	GSETTIA						
						302	
QLE 21 Flow Model Issic Personeters Module Selection Module Selection Selection Period Source and Sel Knowlady Knowlady Knowlady Source and Select Flood and Dry Indodenation	Angualte:	Size - Size K Tana S-10011	f Islal output (138.377 (48) 139.377 (48) 139.377 (48) 0 (139.377 (48)) 0 (139.377 (48	Tille	Output Hease Output Assis	- Marcine -	
/ Initial Surface Elevatio / Boundary					171	3	
Eddy Viscosity	INTERNO	D n21		- 8 0 0			
(Were Radiation (Wind Conditions (Results	Сеннике hot	2001.8x2 2001.ft.8x2 2001.ext.8x2 2002.8x2					
ber of entrys = 0	71 14201						
	8- CHes 19		Generation				
A sector (711/1-2/30	Result files # dhs21		Avota	i	
El/manuel/	-	_					

รูปที่ 4.51 การตั้งชื่อไฟล์ผลของเครื่องคำนวณ

(6) Run \rightarrow Start simulation ให้เริ่มคำนวณ

MIKE Zero - [CHAOPHRAYA	.m21]	
Eile Edit View Bun Window	v <u>H</u> elp	_ 8 ×
D 🗳 🖬 👗 🖻 💼 🎒 💡	N2	
✓ MIKE 21 Flow Model ✓ Basic Parameters ✓ MiKE 21 Flow Model ✓ Basic Parameters ✓ Module Selection ✓ Sathymetry ✓ Simulation Period ✓ Source and Sink ✓ Mass Budget ✓ Flood and Dry ✓ Hydrodynamic Paramete ✓ Hydrodynamic Paramete ✓ Minial Surface Elevati ✓ Boundary ✓ Source and Sink ✓ Mave Radiation ✓ Wave Radiation ✓ Wave Radiation ✓ Wave Radiation ✓ Wave Radiation ✓ Mark Surface ✓ Fassistance ✓ Wave Radiation ✓ Mark Radiation	Simulation Period Simulation Time step range: 0 Time step interval: 120 Simulation start date: 2011/09/10 :00:00 ♥ ♥ Simulation start date: 2011/09/15 0 :00:00 Warmup Period First: Last: Time step range: 0 0 Courant Number Max Courant No: 0.347808 Area: 1	
Navigation		
No_Border_FLD : Fals	e (derault)	<u>^</u>
сои	PUTATION STARTED ====================================	~
51 %	2011-09-08 03:50:00 Time step: 5155 0 39 seconds	• • +
K K D N Validation Simulation	on /	
Ready	No Tracking	

รูปที่ 4.52 หน้าจอการดำเนินเครื่องจำลอง

- (4) การเชื่อต่อของ MIKE11 และ MIKE21 ขึ้นอยู่กับ Mike Flood
 - ใส่ข้อมูลโดยอ้างอิงถึง MIKE11 และ MIKE21 จะเชื่อมโยงกันตามเมนู

MIKE Zero - [mf.cou	ple]	
<u>File Edit View Link</u>	parameters <u>Bun Wi</u> ndow <u>H</u> elp	_ 8 ×
🗅 🚅 🖬 X 🖻 🖻		
MKE Flood Lirk.Definitions Standard/Structure Lateral Link Optio. Urban Link Optio. River/Urban Link (Side Structure Lini	Model components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included in couple definition Image: Components included	#
	Edit Mike Urban r	put
Navigation		
Ready	Simulation) MIKE 11 Execution Log / No Tracking	Mode .;;

รูปที่ 4.53 **หน้าจอแรก เมื่อเปิด** MIKE COUPLE

(2) หน้าจอหลังจากอินพุท MIKE21

MIKE Zero – [mf.cou	ple – Modified]							×
● <u>F</u> ile <u>E</u> dit <u>V</u> iew <u>L</u> ink	parameters <u>R</u> un <u>W</u> indow <u>H</u> elp						- 8	×
MIKE Flood ✓ Linkage Files						<u> </u>	I €	
- 🖌 Link Definitions	Link type Cou	upling River name	Urban ID	River Chainage	M21 Area No.	No of M21 Cells		
 Stanuard/Structure Lateral Link Optio. 	1 Standard HD on	ly		0.000	1	1		
— □ Urban Link Optio								
☐ River orban Link C								
	J							
	🖄 🗙 🗲 🏹	2200000 -					_	
	M21 Coord 1	21,00000						
	J K 1 0 0	2100000						
		2000000						
		1900000						
		1800000						
		1700000						
		1600000						
		1500000						
		400000	500000 800000					
Nuviantian		400000	000000 000000				- 1	¥
Navigauun	<		1111				>	_
Validation	Simulation & MIKE 11 Execution Lo	a /						_
Ready							Mode	

รูปที่ 4.54 **หน้าจอแรก เมื่ออ่านข้อมูล** MIKE21 **ลงใน** MIKE COUPLE

3 หลังจากอินพุท MIKE11 แล้วนำมาทาบเปรียบเทียบกับ MIKE21

MIKE Zero - [CHAOPHRAYA.	couple]	
Eile Edit View Link parameter	s <u>R</u> un <u>W</u> indow <u>H</u> elp	_ 8 ×
🗋 D 🚅 🖬 X 🖻 🖻 🥞 🂡	N2	COLUMN AND A COLUMN AND A COLUMN
Control C	Model components included in couple definition 2 D Surface model C:Wcheophraya4modelW8-4)WCHAOPHRAYA.m21 C:Wchaophraya4modelW8-4)WCHAOPHRAYA.smi11 Urban Model Apply AD-coupling between MIXE 11 and MIXE URBAN Urban	
K I M Validation Simulation	MIKE 11 Execution Log	
Ready	No Tracking	Mode

<"Linkage Files" screen>

<"Link Definitions" screen>

MIKE Zero - [CHAOP	HRAYA	.couple - Modifie	ed]							$\mathbf{\times}$
<u>File</u> <u>Edit</u> <u>View</u> <u>Link</u>	paramete	ers <u>R</u> un <u>W</u> indow	<u>H</u> elp						- 6	×
	6 8	₩?								
MIKE Flood								👛 🗙 🗲	÷	^
Link Definitions		Link type	Coupling type	River name	Urban ID	River Chainage	M21 Area No.	No of M21 Cells		
- Lateral Link Optio.	1	Standard	HD only			0.000	1	1		
⊡ Urban Link Optio ⊡ River/Urban Link (
🔲 🖬 Side Structure Linł										
		in text of							_	
		<u> </u>		000						
		M21 Coord 1	2100	000 5						
	1	0	2000	000 40	Contraction of the second					
			1900	0000	C 655					
			180(s Ka					
			470		2					
			1700							
			1600	0000	~					
			1500							
< <u>></u>	<		>	400000	600000 800000					
Navigation	<								>	
										_
Validation (Simulatio	n) MIKE 11 Every	tion Log /							_
Ready	Simulatio	IN A MIKE IT EXECU	cion Log /						Mod	le .:
										111

รูปที่ 4.55 หน้าจอเมื่ออ่านข้อมูล MIKE11 กับ MIKE21 แล้ว

 สามารถเลือก Link type ได้ 4 แบบ ในตัวอย่างนี้จะเลือก Lateral (เชื่อมเข้ากับริมฝั่ง : รายละเอียดอื่นๆ ดูได้จากคู่มือของ DHI) จากนั้นคลิกขวาบนตัวกราฟ แล้วเลือก link bran ch to MIKE21

I bit hardwood I bit k type Decyting River wann Uskan ID River Chainese M21 Area No or M21 I bit hard No I bit hard No I bit hard No River Wann Uskan ID River Chainese M21 Area No or M21 I bit hard No I bit hard No I bit hard No River Wann Uskan ID River Chainese M21 Area No or M21 I bit hard No I bit hard No I bit hard No River Wann Uskan ID River Wann Uskan ID River Wann I bit hard No I bit hard No I bit hard No River Wann Uskan ID River Wann Uskan ID River Wann I bit hard No I bit hard No I bit hard No River Wann River Wann River Wann I bit hard No I bit hard No I bit hard No River Wann River Wann I bit hard No I bit hard No River Wann River Wann River Wann I bit hard No I bit hard No River Wann River Wann River Wann I bit hard No I bit hard No River Wann River Wann River Wann I bit hard No I bit hard No River Wann River Wann River Wann I bit hard No I bit hard No River Wann River Wann<	MIKE Flood							EX +	4
Martic Live Prom For Liben Lisk Book Liben Lisk Side Shuckare Lief	Jink Definitions	Link type	Coupling	River name	Urban ID	River Chainage	M21 Ares	No of M21	
t Uben Lisk Opto. Side Shucher Lief Side Shucher Lief	Lateral Lys. Optio.	1 Standard	HO daty	1 - L		From To 0.000	1	,	
1700000 190000 190000 190000 190000 190000 190000 190000 190000 190000 190000 190000 190000 190000 190000 190000 19000 190000 190000 190000 19000 1		M21 Coord 1	4 22 21	00000	Zoom In Zoom to F	ull Extent	1		
Add/Renove Lyvers. Low Properties. Add/Renove Lyvers. Low Properties. Low Properties. Low Properties.		10	0 200 190 180		Previous Z Next Zoom Pan Refresh	(oom	(Shift)		
Block out river cells			0 200 190 180 181 181 181 181		Previous 2 Next Zoom Pan Refresh - Grid Conv to C Save to B Save to B	loom Ipboard etafile. Imap.	(Shift)		
3		10	0 200 190 180 180 190 190 190 190 190 190 190 190 200 190 190 190 190 190 190 190 190 190 1		Previous 2 Next Zoome Pan Refresh - Orid Copy to C Save to B Save to B Add/Remo Lower Prop Boott Add/Remo	ioom ioboard etaria. trap. we Layers. erties. ve Instes. ve Instes. Nameto Io NILE 21.	(Shift)		

รูปที่ 4.56 หน้าจอเมื่อเชื่อมกริดของพื้นที่ในเขื่อนเข้ากับเส้นทางน้ำ-1

5 ควรลิงค์แยกระหว่างฝั่งซ้ายกับฝั่งขวา โดยเริ่มจากฝั่งซ้ายก่อน

Link river branch to MI	(E 21 🛛 🔀
Link Type CLateral Standard	Implicit Structure OK Side Structure Cancel
Link Location River name Topo ID Chainage from Chainage to	CHAO_PHRAYA 2005X5 137000 233000
 Lateral Link Line ● From digitized river ● From external file Number of segments 	Left Center Right
Standard Link end	⊖ Highest chainage
Side structure parameters -	C Right side

รูปที่ 4.57 หน้าจอเมื่อเชื่อมกริดของพื้นที่ในเขื่อนเข้ากับเส้นทางน้ำ-2



6 เซลล์ของ MIKE21 ที่ลิงค์ได้ จะถูกแสดงบนโคออดิเนต (J,K)

รูปที่ 4.58 หน้าจอเมื่อเชื่อมกริดของพื้นที่ในเขื่อนเข้ากับเส้นทางน้ำ-3 (การเชื่อมต่อทางด้านซ้าย)



รูปที่ 4.59 หน้าจอเมื่อเชื่อมกริดของพื้นที่ในเขื่อนเข้ากับเส้นทางน้ำ-4 (การเชื่อมต่อทางด้านขวา)

JICA Study Team

(7) ให้เวลาคำนวณของ M11 เท่ากับ M21

AOPHRAYA couple	- Modified	GHAOPHRAYA = 21
Die Frode Ussker Fille Und Bernfords Sondurffletunder Lähre Link (denn. River fühlen (sich und River fühlen (sich	Participants Participants <td< th=""><th>WDC 21 Free Hold Weaker Streamers Watch Scherine Borceard Site Works Streamers Wore Streamers<!--</th--></th></td<>	WDC 21 Free Hold Weaker Streamers Watch Scherine Borceard Site Works Streamers Wore Streamers </th

รูปที่ 4.60 กำหนดระยะเวลาของแผนการ



⑧ Run → Start simulation ให้เริ่มคำนวณ

รูปที่ 4.61 เริ่มการคำนวณเพื่อจำลองน้ำไหลท่วม

- MIKE Zero [CHAOPHRAYA.dfs2] Eile Edit View Tools Data Overlay Window Help 5 🗅 😂 🖬 🕹 🖴 🗳 🛠 🔍 🔍 🔍 🔩 🤕 🖾 📐 🖓 📲 🗰 🗭 🌮 🏂 🖉 🗳 🗳 H Water Depth m H Water Depth m ^ 5 🔨 170 0 160 150 Layer п Π 140 0 ń 130 Time Step 0 120 213 159 -1-110 '' Water Dep 2011/11/0 2011/06/0 200 2011/12/3 100 Above 2 2.4 · 2 2.2 · 2 1.8 · 2 1.8 · 2 1.8 · 2 1.0 · 2 1.0 · 2 0.8 · 2 0.8 · 2 0.4 · 0 0.2 · 0.4 0.2 · 0.2 0.2 · 0.2 0.2 · 0.2 0.2 · 0.2 0.2 · 0.2 spacing 90 Item H Water Depth m Surface elevation U velocity (Grid 80 × 70 ŏ 0 60 Close 0 50 -40 -Undefined Valu 30 100 120 140 160 180 200 100 120 140 160 (Grid spacing 2000 meter) 2011/11/07 0:00:00, Time step: 159, Layer: 0 ō 0 0 v > , jk-Projection x = 416340, y = 325644, j = 208, k = 163, z = -0.0000 Mode eady
- (9) เปิดดูผลการคำนวณด้วย dfs2 หากใช้ Navigator จะช่วยให้การควบคุมเวลาง่ายขึ้น

รูปที่ 4.62 ผลการจำลองน้ำไหลท่วม







รูปที่ 4.63 ผลการจำลองน้ำใหลท่วมที่มีภาพพื้นหลัง

U-3: Presentation Material 1



4 th - 15 th July 2013	A. Proposed Master Plan	
Workshop Schedule	• A-0) Why flood analysis model should be established?	
	 A-1) Chaophraya river and Basic concept of M/P 	
	· A-2) Proposed M/P	
	 A-3) adaptablity of M/P (Design rainfall) 	
DAY 1 9:00 - 12:00	B, Flood Analysis model	
A-U) ~ B-4)	· B-1) What is flood analysis?	
	· B-2) Outline of DHI-MIKE series	
	·B-3) Set-up of M/P flood analysis (incl. Boundary cond.)	
	• B-4) Set-up sample flood analysis model	
- LUNCH -	• B-5) MIKE-View operation with B-4) developed model	Hands
DAY 1 13:00 - 16:30 B-5) ~ B-6)	·B-6) How to evaluate the result of M/P model analysis	Wor
	C, Practice on flood analysis for M/P	
N. N. A.	· C-1) Effectiveness of Dam operation	
C-1 ~ $C-3$	· C-2) Effectiveness of Dike elevation	Hands
/ /	· C-3) Effectiveness of Dredging work	Wo
- LUNCH -	 C-4) Effectiveness of Short cut channels 	
DAV 2 13:00 - 16:30	· C-5) East/West floodway	
C-4) ~ C-7)	· C-6) Influence of sea tide	Hand
	· C-7) Impact of Climate change	riands Wor
	· others	











<u>1. Design Flo</u>	bod	The target	scale of f	lood to f	ormulate the Flood
	Evaluati	on of 2011vr	Flood Scal	e	rerum period.
		Probability of	return period		
Evaluation Item (Annual maximum) (N is number of samples)	Nakhon Sawan (C, 2) [C,∆to5,oookm*]		River Mouth (whole river basin) [C.A 162,000km-1		Remarks
	Value	Return period	Value	Return period	
Average rainfall watershed (mm/6month) (N=51)	1,48,3	1/141	1,390	1/100	6 month maximum rainfall is employed since it contributes to large flood.
Peak discharge (m³/s) (N=56)	6,587	1/70	+		to estimate a natural runoff (uncontrolled by facilities), the impounded water in
Yearly water volume (MCM) (N=55)	55,570	1/127	÷	- ÷	Bhumibol and Sirikit dam was added to the observed discharge at Nakhon Sawan.
Overflow volume (MCM) (N = 44)	15:154	1/102	4	÷	In addition, to evaluate the probability of actually-occurred scale of inundation af downstream of C. 2, probable analysis with overflow volume (beyond 2,500m 3/s) was conducted:











8-2)Ou	tline of MIKE-Se	eries	
MIKE cover	 ✓ Holistic f Series ✓ Optional ✓ Reasonab ✓ Experiend 	lood analysis (2D in modules (structures le cost ce in Thailand ('99 A	undation module) , side flows, etc) N/P, JST)
Ttems	DHT MTKE-Series	Flood Works	HEC-RAS
Distributer	DHI Water & Environment	Wallingford Software Ltd. England http://www.hrwellingford.com/	United States Army Corps of Engineers, USACE, USA
General description	Hydrological/hydraulic model. MIKE Series consists of several modules incl. runoff module, 1-dimentional hydraulic model, inundation model (2 dimension) etc. This software can simulate both short and long term flooding. This software is used all over the world for water management. Of course in Thoiland	On demand (real time) flood forecasting system including flood analysis module. This system consists of data collecting system, management tools, hydrological/hydraulic simulation module, GIS and relational database (RDB).	Hydraulic model, mainly one- dimensional model. This software has user-friendly interface and fulfilling modules/functions for flood analysis. HEC-RAS does not equipped 2-dimensional inundation module, but with a combination of FLO-2D (https://www.flo- 2d.com/, get freel Basic version), 2-dimensional flood analysis can b
			over the world.









2. Input dat	. Input data for Runoff Model					
Items	Stations	Calculation Method				
Average daily <mark>Rainfall</mark>	TMD and RID Total 410 stations	Average rainfall of watershed is calculated with the Thiessen Method.				
Average daily Evaporation	TMD 46 stations	Actual evaporation is defined as 80% of pan evaporation. Average evaporation of watershed is calculated with the Thiessen Method.				







































Input Simulation Conditions Category Setting data Linkage File 2D Surface model: Developed ".21" model River Model: CHAOPHRAYA.sim11 Link definitions Link Type: LATERAL Lateral Link Line: Left and Right (* Delete the blank row) Simulation Period According to the "M21" definitions Result File Inundation depth : "M21" defined ".dfs2" River routing analysis : "M11" defined ".res"	IKE-FLOOD	Flood
CategorySetting dataLinkage File2D Surface model: Developed ".21" model River Model:Link definitionsLink Type: LATERAL Lateral Link Line: Left and Right (* Delete the blank row)Simulation PeriodAccording to the "M21" definitionsResult FileInundation depth : "M21" defined ".dfs2" River routing analysis : "M11" defined ".res"	Input Simulation C	onditions
Linkage File2D Surface model: Developed ".21" model River Model: Link OPHRAYA.sim11Link definitionsLink Type: LATERAL Lateral Link Line: Left and Right (* Delete the blank row)Simulation PeriodAccording to the "M21" definitionsResult FileInundation depth : "M21" defined ".dfs2" River routing analysis : "M11" defined ".res"	Category	Setting data
Link definitionsLink Type: LATERAL Lateral Link Line: Left and Right (* Delete the blank row)Simulation PeriodAccording to the "M21" definitionsResult FileInundation depth : "M21" defined ".dfs2" River routing analysis : "M11" defined ".res"	Linkage File	2D Surface model: Developed ".21" model River Model: CHAOPHRAYA.sim11
Dimulation PeriodAccording to the "M21" definitionsResult FileInundation depth : "M21" defined ".dfs2" River routing analysis : "M11" defined ".res"	Link definitions	Link Type: LATERAL Lateral Link Line: Left and Right (* Delete the blank row)
Result File Inundation depth : "M21" defined ".dfs2" River routing analysis : "M11" defined ".res"	Simulation Period	According to the "M21" definitions
	Result File	Inundation depth : "M21" defined ".dfs2" River routing analysis : "M11" defined ".res"

	B-S	5)Basic operation of MIKE-View(Result Viewer) Run-off River network Flood Result View				
	No	Calculation Results	For checking	file		
	1	Inundation area and depth	a. Time series of Inundated area (also Flow direction and Inundation depth)	.dfs2		
	2	Spot Water level	a. Time series and peak water levelb. Compare water level with dike heightc. Compare with observed data	.res11		
	3	Spot Discharge	a. Time series and peak discharge b. Compare with observed data	.res11		
	4	Longitudinal Water Level	a. Water surface propagation (time series)b. Over topping point	.res11		
	5	Longitudinal Discharge	a. Discharge propagation (time series)b. In/outflow discharge along the river	.res11		
Japan International Cooperation Agency						
















































































data for NAM module shall be (only RR parameters) and clici	e modifi k "Edit"	ied. Open "*.sim11 file" for runoff mode button.
E 1001 Jans (Wei 1000 Stitumper_artismit) ● Se (Se Yes System See	inia.	
Basic for inners (funds last) Part File Part File Bard File <th>1)</th> <th>A Head Trainer</th>	1)	A Head Trainer
0 % Kannly des Desking	4 JA	

81

jica



































U-4: Presentation Material 2



ou have to prepare as t	following 4	files at least.	
l-1) RR Module runoff model, *.R11)	input	1-2) Rainfall Data (time-series, *.des	:0)
lere, you can set-up the nodel parameters		1-3) Evap-transport	ation Dat
input	Bie Bie Bie Ver	(IIMe-Series, .des manufactures, .des manufactures, .des	
-4) M11 Simulation file (*.sim11)	D GF GI Conde Madeile Port Conde Read Files	an / Franchis) Salet	
Start simulation!	Crosp-santana Boo-dev data HS, Parametera HD, Parametera AD, Parametera ST, Parametera FT, Farametera DA, Parametera DA, Parametera DA, Parametera	11 Avents () 444 avents () 100 - 201 avents () 1	
2-6) Runoff result	HD Penults THI Results		









U-5: Presentation Material 3



/ou alc and The "re nec The	can evaluate flood phe culate many hydraulic it so on. simulation results are ss" means "result". res" ans two-dimension, resp s following table shows o	nomenon with MIKE Series and ems including water level, discharge written in "*.res11" file and "*.dfs2". 11" means one-dimension and dfs"2" ectively) putput items in result files,
No.	File Type (file extension)	Output Items
1	*res.11 Ex) CHAOPHRAYA.res11	Water level (River) Discharge (ditto)
1 2	*res.11 Ex) CHAOPHRAYA.res11 *res.11 Ex) CHAOPHRAYA <u>HDAdd</u> .res11	Water level (River) Discharge (ditto) This file is generated automatically. If a name of result file is "Tha-Chin.res11", MIKE 11 produce another result file "Tha-Chin <u>HDAdd</u> res11". HDAdd means "additional output set-up in HD Parameters file(*.HD11 file)" Here, you can see velocity and flood area volume etc



First Time Step to Load Last Time Step to Load S Step for Loading 1	Cancel
Usta 1 ypes 19 Load V Velocity J Lateral Inflow SHI Drain J Lateral Inflow SHI Dverind J Lateral Inflow KHI Deseflow J Lateral Inflow M21 J Lateral Inflow M21 Lateral Inflow Ranthal Runoff J Lateral Inflow Ranthal Runoff J Lateral Inflow TC Corrections J Lateral Inflow Mouse J Lateral Inflow Mouse J Lateral Inflow M21 - Right side J Lateral Inflow M21 - Right side J Lateral Inflow M21 - Right side J Lateral Inflow M21 - Right side	Many items will appear ! How to set? See next slic














Contra - aper	S(L) . Theimst MP . Cal_New_TOK . SOL-NR-3	011-100-010-01 .	• 14	0	10-010-010-	P
ファイル(日) 編集(日) 表示(1) ソール(1) ヘルプロ	e)					
ag. Blac meno moubava-	-				H . H	
→ お気に入り	64	使好白时	18:03	265		
# 90x0-F		3013/05/20 17:35	27-14-784			
デスクトップ	# 02_KAD	2013/05/00 17/35	2246 246			
「「「「「「「「」」」を場所	1 2 03_HAN	3013/05/20 17:25	3716726-			
at supervise i	04_FRG	2011/05/20 17:38	2216286-			
THE STRUC	CHADEHRAYAspl_	2013/05/11 10:30	382.377.6	1,24118		
21/20	CHAOPHRAVAhot_spi_	3043/95/17 7/37	_BVL 777A	11 (B		
ACKTER AND	fort.50	2012/02/14 10:16	50(20(4)))	3,62848		
20fr	CHAOFHRAYA.couple	C055057111541	CoupringProgra	[73. kB-		
■ ビデオ	CHAOPHRAYA.db2	101102/11/02/11	CARNED DODOC	113,850 KG	- Resul	t of inundation analysis
▲ ミュージック	hmax.dts2	2010/02/14 19:29	Gridest Dectrin.	397 428		
	T MARILIN	2012/06/29 10:54	10127476	11.629		
(第 コンピューター		2012/02/17 10:18	SAMP PAR	10,020 MD		
L Windows7_05 (C:)	CHAORAGANA MILLING Log	2012/05/17 2:07	LOUIS PROF	110		
Nakamura_BKUP02 (1:)	CHAOPHEAVAIVE Los	3863/84/11 214P	100 Traffic	17.44		
Engvo_Recovery (Q:)	CHAOPHRAVAhot-Info.Los	2011/05/11 7:50	1073740	3.43		
Volume 3 (W10.304.1.10) (V)	CHAOPHRAYAhot-SimiStat Log	100105/05/17 7:57	10927-14	140		
Se chi 1 (#10.204.1.10) (7:1	CHAOPHRAYAM11Progress.log	2010/05/17 10:18	100771m	2.48		
- Contraction and a set	CHAOPHRAVA-SimStat.Log	2013/05/17 10:18	1002746	1 KB		
1 3 1 h 7 - h	MIKE_KEN_v16(501-NR-2011-010	2013/05/18 11:18	Marriel Deal	14,295 kit		
A ACTE	CHAOPHRAYA.m21	2013/05/10-18-17	MORT/Rooting	- 64 (42)	- Resul	t Viewer (inundation)
The Pasts	CHAOPHRAYA.nev	2010/12 10:26	Madine & Direct	7 KB	_	
A TRAININGE	CHADRHRAYA.res11	2012/05/17 32:08	NEIL1 27-64	101.224 (8)	- Result	t of flood analysis
M BACKUP_JST	CHADPHRAVAHDAdd.res11	1011/05/17 10:10	PE11 27-11-	1.265.40	(water	level and discharge)
BRN_98F9F2	M CHADPHRAVAbot Jest1	2012/05/12 11:57	MESTI 2746	17,628 48	(4016	ierer and discharge)
CMD-1EF54FBF3F2	CHAOPHRAYADOMDADLINESI		addit 21-4 (P)	(3,400 k3)	- Result	t of flood analysis (othe