



## **D.Fig. 3.7-1** Sample Drawings


- ★ Standard Rural Business Office & Exchange
- **★** Standard Rural Exchange
- ★ Rural Business Office

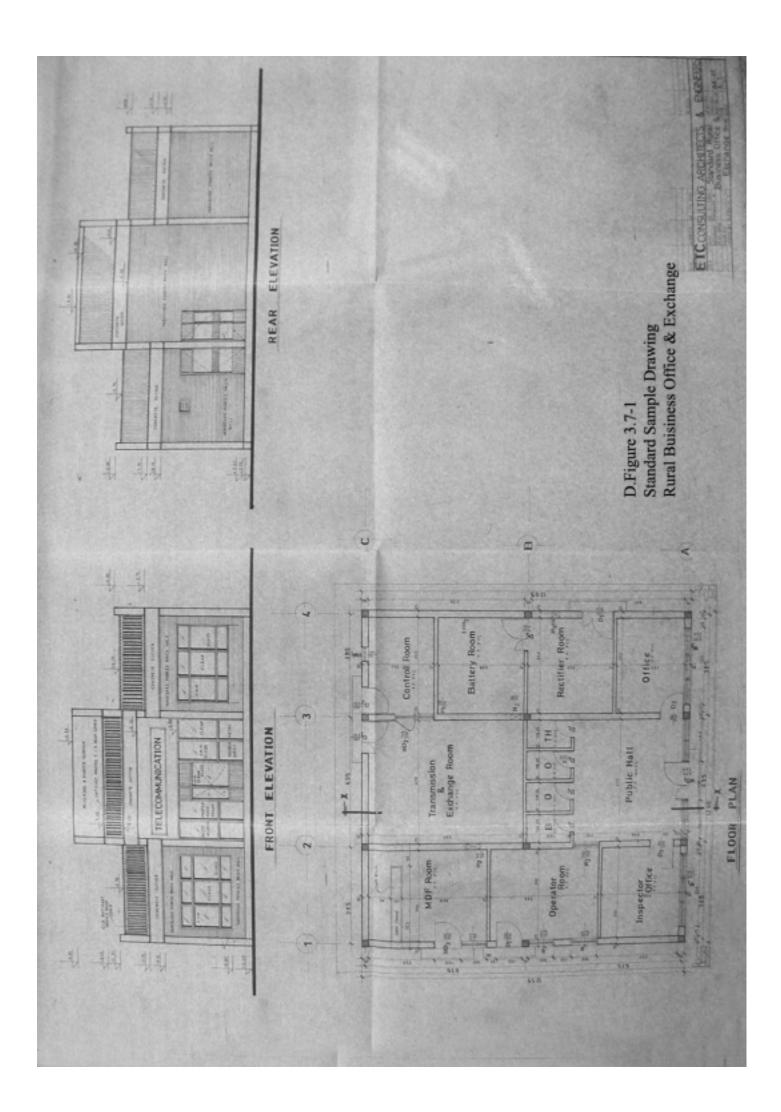

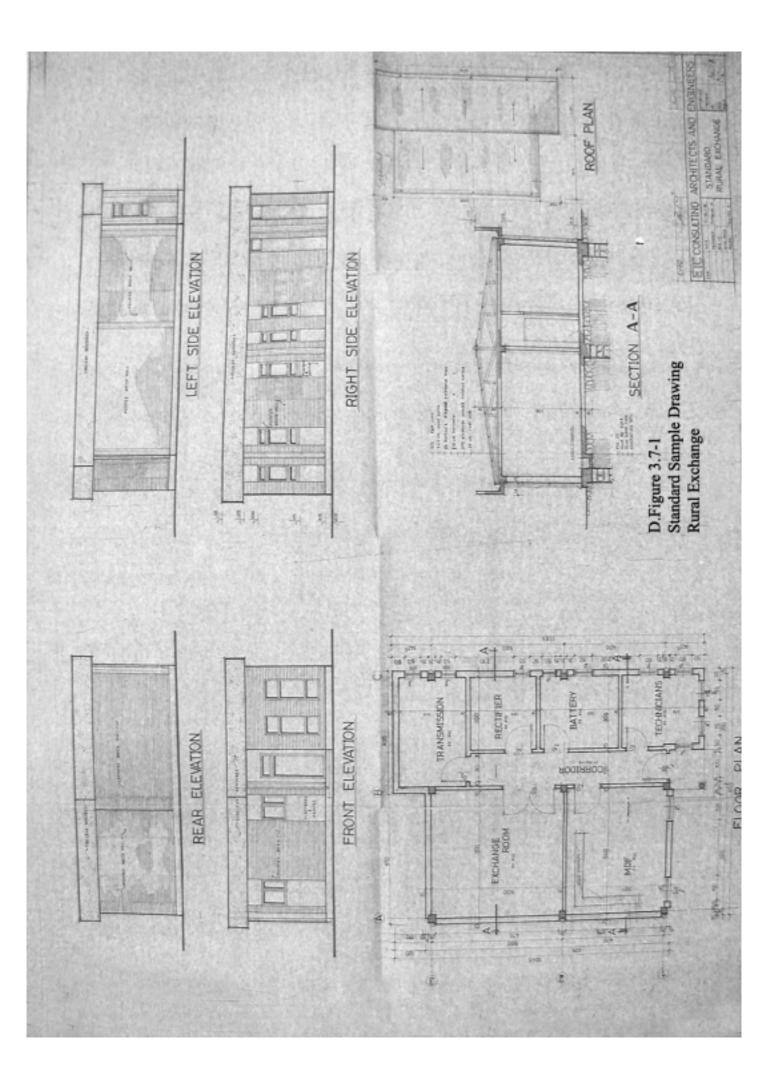

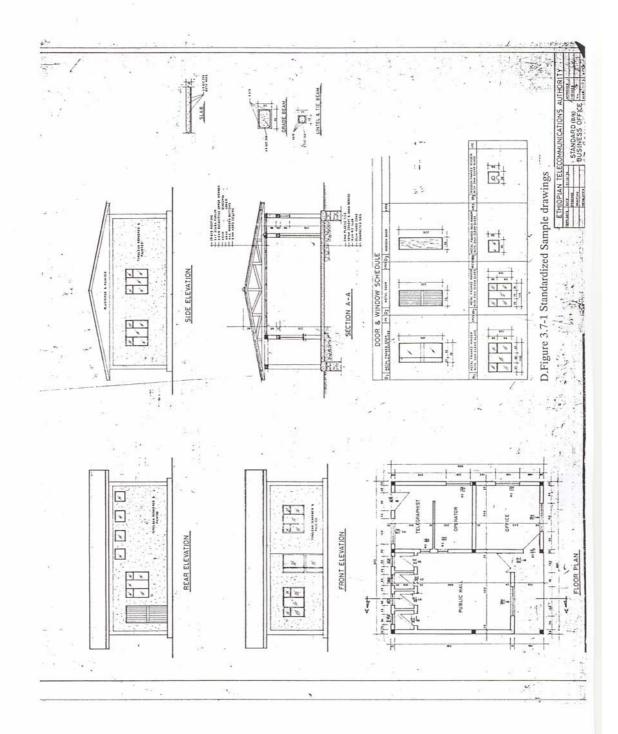

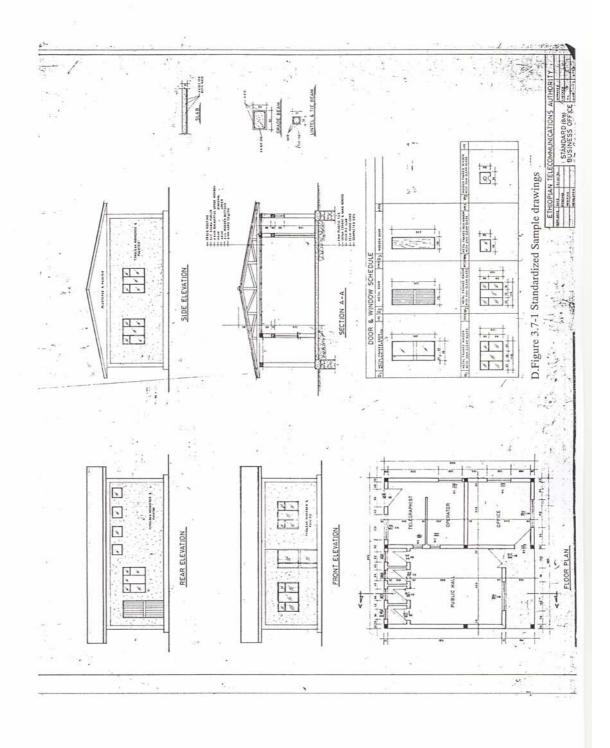

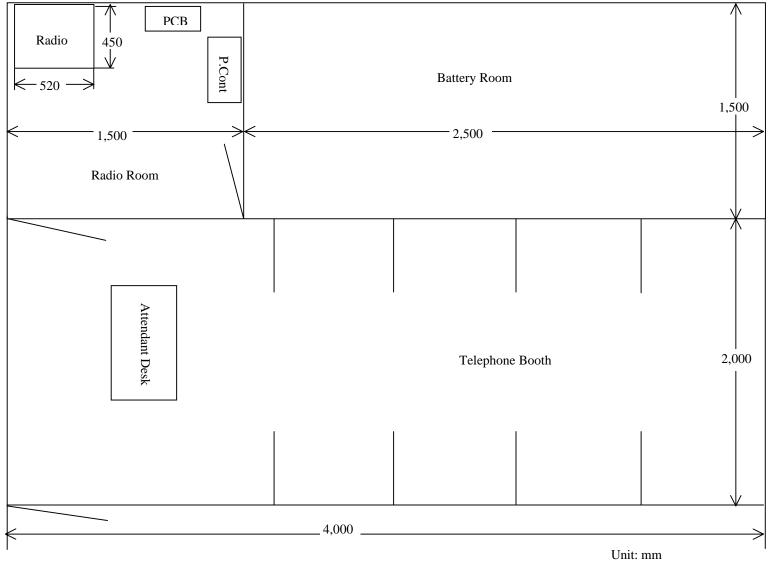

D. Figure 3.7-1 Typical Floor Lay-out Plan for PCO Subscriber Station (Reference)